


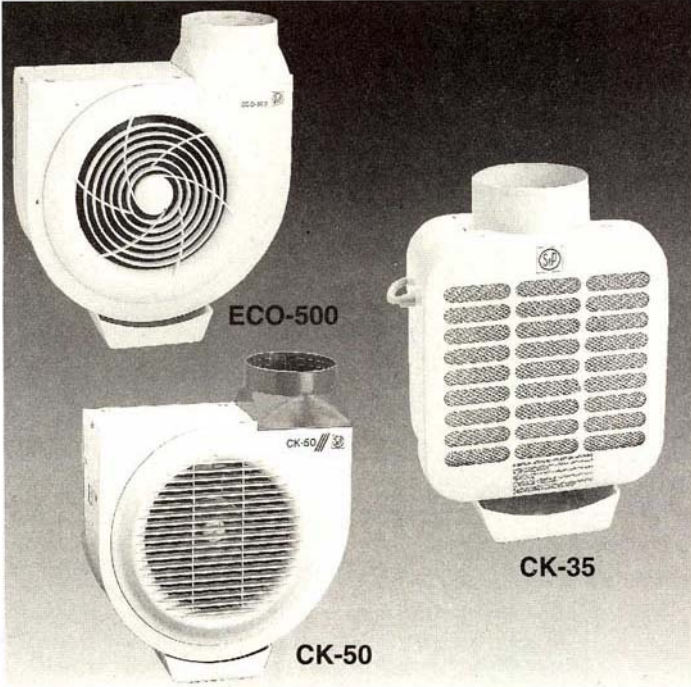
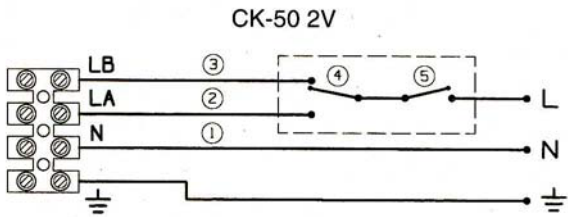


CK-35, ECO-500, CK-50

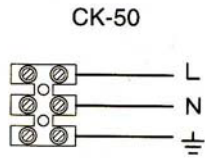

Extractores para campanas de cocina
Kitchen extractor fans
Extracteurs pour hottes de cuisine
Exaustores para campânulas de cozinha

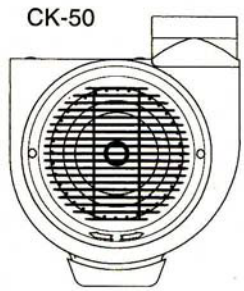

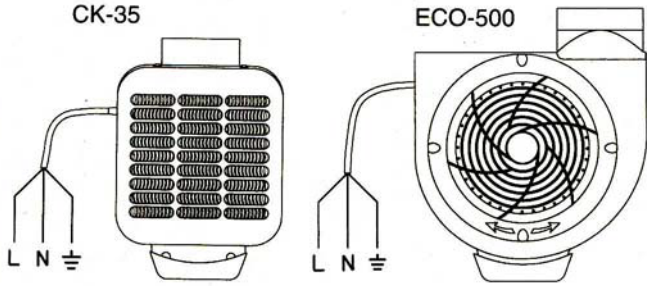

- ① COMUN/NEUTRE/COMUN
- ② VEL. RAPIDA/GRANDE VIT./VEL. RAPIDA
- ③ VEL. LENTA/PETITE VIT./VEL. LENTA
- ④ CONMUTADOR/COMMUTATEUR/COMUTADOR
- ⑤ INTERRUPTOR/INTERRUPTEUR/INTERRUPTOR

Fig. 1

Kitchen extractor fans

The kitchen extractors CK-35, ECO-500, CK-50 and CK-50 2V have been manufactured in accordance with the rigorous standards of production and quality control laid down by the international Quality Standard ISO 9001. All components have been checked and each of the finished products has been tested at the end of the manufacturing process.

On receipt of the fan we recommend that you check the following:

- 1- That it is the correct model.
- 2- That the details on the rating label are those that you require: voltage, frequency, etc...

Installation

- The installation and wiring must be carried out in accordance with the electrical standards in force in your country.
- The extractor should be installed at a minimum height of 650 mm above the hotplates or 750 mm from any burner rings.
- If the extractor operates in a room with a boiler or any other type of appliance requiring air for combustion, check that air replacement inlets are sufficiently sized.
- The extractor outlet must not be connected to a duct used to exhaust smoke or fumes from any appliance that uses gas or any other type of fuel.

Before proceeding with the installation and electrical wiring, make sure that the mains supply is switched off.

- The extractors have been designed for a single-phase supply, with voltage and frequency as indicated on the rating plate.
- The extractors CK-35, ECO-500, CK-50 and CK-50 2V have been designed with simple electrical insulation (class I), and therefore require an earth connection.
- The extractors CK-35 and ECO-500 comes with the lead out for connection to the mains, you can connect them to the mains using a normal plug correctly sized to match the electrical load. The extractors CK-50 and CK-50 2V are supplied with terminal box. For each model, follow the corresponding wiring diagram shown fig. 1.
- The electrical installation must include a double pole switch, with a contact clearance of at least 3 mm, correctly sized and in accordance with the electrical standards.

Use and maintenance

We recommend that the extractor is left running for about 15 minutes after cooking has finished in order to completely exhaust all of the stale air.

extractor depends on regular maintenance, especially for those models fitted with a grease filter (CK-35).

ATTENTION: Before cleaning the extractor make sure that the fan blade has completely stopped.

To clean the scroll, simply wipe it with a damp cloth soaked in household non-abrasive detergent.

The CK-35 is fitted with filter which is designed to retain the grease particles this of course means that it will become dirty through use of the extractor.

At least every two months, clean the filter following the instructions set out below:

- First remove the external cover, then release the filter support pressing the knob on the top of the extractor. Then release the filter.
- Wash the filter with water and a mild detergent.
- Rinse thoroughly and leave to dry before fitting back into the support.
- The filter can also be washed in a dishwasher.
- Failure to follow this maintenance procedure could cause a fire risk should a flame come near or into contact with the filter.

ATTENTION: In some circumstances household electrical appliances can be dangerous.

- while the extractor is running.
- Do not «flame» any food beneath the extractor.
- Avoid using the hotplates without a saucepan in place covering the ring of flame as this can damage the extractor and cause a fire.
- Take particular care when frying food to ensure that the hot oil does not catch fire.
- Before carrying out any maintenance operation, make sure that the mains supply is switched off.

S&P does not hold itself responsible for any instance arising from the incorrect use or mis-installation of the extractor or if the maintenance instructions have not been carried out correctly.

Technical advice

We recommend you not to try to dismantle or remove any other parts than those mentioned, as any tampering would automatically cancel the S&P guarantee.

If you detect any fault, contact with your S&P dealer.

S&P reserve the right to modify these instructions notice.