

# OWNER'S MANUAL AIR CONDITIONER

Please read this manual carefully before operating your set and retain it for future reference.

TYPE : WALL MOUNTED

MODELS : ARNU07GSEA2, ARNU09GSEA2, ARNU12GSEA2 ARNU15GSEA2, ARNU18GS5A2, ARNU24GS5A2 ARNU07GSEL2, ARNU09GSEL2, ARNU12GSEL2 ARNU15GSEL2, ARNU18GS5L2, ARNU24GS5L2



www.lg.com

P/NO : MFL67522505

# TABLE OF CONTENTS

 $\geq$ 

#### 

Prior to Operation ......6

Operating Instructions......7

Maintenance and Service .... 10

Before you Call for Service ......12

# FOR YOUR RECORDS

Write the model and serial numbers here:

#### Model #

#### Serial #

You can find them on a label on the side of each unit.

#### Dealer's Name

#### Date Purchased

Staple your receipt to this page in the event you need it to prove date of purchase or for warranty issues.

## **CALC** READ THIS MANUAL

Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your air conditioner.

You'll find many answers to common problems in the chart of troubleshooting tips. If you review our chart of

Troubleshooting Tips first, you may not need to call for service at all.

# PRECAUTION

- Contact the authorized service technician for repair or maintenance of this unit.
- · Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or invalids without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- When the power cord is to be replaced, replacement work shall be performed by authorized personnel only using only genuine replacement parts.
- Installation work must be performed in accordance with the National Electric Code by qualified and authorized personnel only.



# **Safety Precautions**

To prevent injury to the user or other people and property damage, the following instructions must be followed.

Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.

# AWARNING This symbol indicates the possibility of death or serious injury. ACAUTION This symbol indicates the possibility of injury or damage to properties only. Meanings of symbols used in this manual are as shown below. Be sure not to do.



### **WARNING**

Installation		
Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.	For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center.	Always ground the product.
There is risk of fire or electric shock.	• Do not disassemble or repair the product. There is risk of fire or electric shock.	There is risk of fire or electric shock.
Install the panel and the cover of control box securely.	Always install a dedicated circuit and breaker.	Use the correctly rated breaker or fuse.
There is risk of fire or electric shock.	Improper wiring or installation may cause fire or electric shock	There is risk of fire or electric shock.
Do not modify or extend the power cable.	Do not install, remove, or re- install the unit by yourself (customer).	Be cautious when unpacking and installing the product.
There is risk of fire or electric shock.	There is risk of fire, electric shock, explosion, or injury.	• Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator.
For installation, always contact the dealer or an Authorized Service Center.	Do not install the product on a defective installation stand.	Be sure the installation area does not deteriorate with age.
There is risk of fire, electric shock, explosion, or injury.	<ul> <li>It may cause injury, accident, or damage to the product.</li> </ul>	<ul> <li>If the base collapses, the air conditioner could fall with it, causing property damage, product failure, and personal injury.</li> </ul>

	Operatio	n ———	
Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open.		nsure that power t be pulled out or g operation.	Do not place anything on the power cable.
Moisture may condense and wet or damage furniture.	There is risk of fire or electric shock.		There is risk of fire or electric shock.
Do not plug or unplug the power supply plug during operation.	Do not touch(o product with w		Do not place a heater or other appliances near the power cable.
There is risk of fire or electric shock.	There is risk of f shock.	ire or electrical	There is risk of fire and electric shock.
Do not allow water to run into electric parts.	Do not store or gas or combus product.	use flammable tibles near the	Do not use the product in a tightly closed space for a long time.
• It may cause There is risk of fire, failure of the product, or electric shock.	There is risk of f product.	ire or failure of	Oxygen deficiency could occur.
When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on.	If strange sounds, or small or smoke comes from product. Turn the breaker off or disconnect the power supply cable.		Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives.
<ul> <li>Do not use the telephone or turn switches on or off.</li> <li>There is risk of explosion or fire</li> </ul>	There is risk of electric shock or fire.		• There is risk of property damage, failure of product, or electric shock.
Do not open the inlet grill of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.)	When the product is soaked (flooded or submerged), contact an Authorized Service Center.		Be cautious that water could not enter the product.
There is risk of physical injury, electric shock, or product failure.	<ul> <li>There is risk of f shock.</li> </ul>	ïre or electric	There is risk of fire, electric shock or product damage.
Ventilate the product from time to time when operating it together with a stove, etc.		Turn the main power off when cleaning or maintaining the product.	
There is risk of fire or electric shock.		There is risk of electric shock.	
When the product is not be used f disconnect the power supply plug breaker.		Take care to ens fall onto the out	sure that nobody could step on or door unit.
There is risk of product damage or faunintended operation.	ailure, or	This could result damage.	in personal injury and product

Salety Precautions

Installation			
Always check for gas (refrigerant) leakage after installation or repair of product.	Install the drain ho water is drained av		Keep level even when installing the product.
Low refrigerant levels may cause failure of product.	<ul> <li>A bad connection water leakage.</li> </ul>	n may cause	<ul> <li>To avoid vibration or water leakage.</li> </ul>
Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods.	Use two or more p transport the proc		Do not install the product where it will be exposed to sea wind (salt spray) directly.
It may cause a problem for your neighbors.	Avoid personal in	njury.	<ul> <li>It may cause corrosion on the product. Corrosion, particularly on the condense and evaporator fins, could cause produ- malfunction or inefficient operation.</li> </ul>
Operation			
Do not expose the skin directly to cool air for long periods of time. (Don't sit in the draft.)	Do not use the prod purposes, such as p works of art, etc. It i conditioner, not a p refrigeration system	preserving foods, is a consumer air recision	Do not block the inlet or outlet of air flow.
This could harm to your health.	There is risk of damage	e or loss of property.	It may cause product failure.
Use a soft cloth to clean. Do not use harsh detergents, solvents, etc.	Do not touch the metal parts of the product when removing the air filter. They are very sharp!		Do not step on or put anyting on the product. (outdoor units)
• There is risk of fire, electric shock, or damage to the plastic parts of the product.	There is risk of p	personal injury.	There is risk of personal injury and failure of product.
Always insert the filter securely. Clean the filter every two weeks or more often if necessary.	Do not insert hands or other objects through the air inlet or outlet while the product is operated.		Do not drink the water drained from the product.
• A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage.	• There are sharp and moving parts that could cause personal injury.		It is not sanitary and could cause serious health issues.
Use a firm stool or ladder when cleaning or maintaining the product.	Replace the all batteries in the remote control with new ones of the same type. Do not mix old and new batteries or different types of batteries.		Do not recharge or disassemble the batteries. Do not dispose of batteries in a fire.
Be careful and avoid personal injury.	There is risk of fi	ire or explosion	They may burn or explode.
If the liquid from the batteries get or clothes, wash it well with clear use the remote if the batteries ha	n water. Do not		quid from the batteries, brush you loctor. Do not use the remote if th leaked.
The chemicals in batteries could ca	use burns or	The chemicals	in batteries could cause burns or

• The chemicals in batteries could cause burns or other health hazards.

#### OPERATING TEMPERATURE(°C)

COOLING MODE			
INDOOR		OUTDOOR	
MAX.	MIN.	MAX.	MIN.
32°C	21°C	43°C	21°C

HEATING MODE				
INDO	INDOOR		OUTDOOR	
MAX.	MIN.	MAX.	MIN.	
27°C	20°C	24°C	1°C	

other health hazards.

# **Prior to Operation**

#### Preparing for operation

- 1. Contact an installation specialist for installation.
- 2. Use a dedicated circuit.

#### Usage

- 1. Being exposed to direct airflow for an extended period of time could be hazardous to your health. Do not expose occupants, pets, or plants to direct airflow for extended periods of time.
- Due to the possibility of oxygen deficiency, ventilate the room when used together with stoves or other heating devices.
- 3. Do not use this air conditioner for non-specified special purposes (e.g. preserving precision devices, food, pets, plants, and art objects). Such usage could damage the items.

#### Cleaning and maintenance

- 1. Do not touch the metal parts of the unit when removing the filter. Injuries can occur when handling sharp metal edges.
- 2. Do not use water to clean inside the air conditioner. Exposure to water can destroy the insulation, leading to possible electric shock.
- 3. When cleaning the unit, first make sure that the power and breaker are turned off. The fan rotates at a very high speed during operation. There is a possibility of injury if the unit's power is accidentally triggered on while cleaning inner parts of the unit.


#### Service

For repair and maintenance, contact your authorized service dealer.

# **Product Introduction**

Here is a brief introduction of the indoor units. Please see the information specific to your indoor unit type.

#### Indoor Units

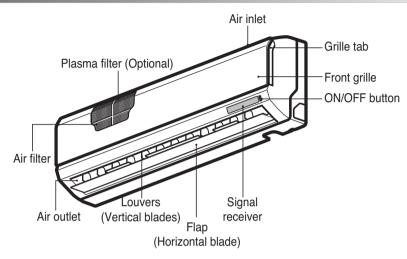

#### **Operation indication lamps**

On/Off : Lights up during the system operation, error code and auto restart setting.

 $\int_{\nabla \nabla}$  Sleep mode : Lights up during sleep mode auto operation.

Plasma : The function illustrates its dynamic mode by using a multiple lighting system.

Timer : Lights up during timer operation or sleep mode auto operation.

X Defrost mode : Lights up during defrost mode or \*hot start operation (Heat pump model only)


B Power Display : Indicates the setting temperature and operation mode. (Cooling, heating,auto operation,dehumidification mode)

\* Hot start operation: Stops the indoor fan in heating operation for minutes to prevent cold air from blowing out from unit.

\* In defrost mode unit stops heating operation for few minutes to remove formation of ice on the heat exchanger coils to maintain the efficiency.

# **Operating Instructions**

#### Name and function of wired remote controller(Accessory)

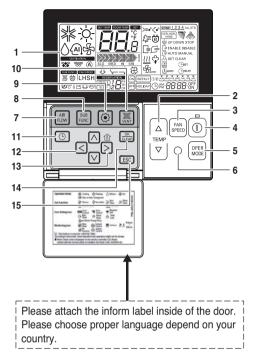


- 1. Operation indication screen
- 2. Set temperature button
  - · It will set not room temperature but outlet air temperature.
- 3. Fan speed button
  - · Fan Speed have 3 Steps.
  - Middle and Low step is same
- 4. ON/OFF button
- 5. Opration mode selection button
- 6. Wireless remote controller receiver
  - Some products don't receive the wireless signals.
- 7. Air flow button
- 8. Subfunction button
- 9. Function setting button
- 10. Ventilation button
- 11. Reservation
- 12. Up,down,left,right button
  - To check the indoor temperature, press  $\sum_{i=1}^{M}$  button.
- 13. Room temperature button
  - Displays only the room temperature of the remote controller perception.
  - There is no control of room temperature.
  - In case of fresh air intake unit, displays only the temperature around remote controller.
- 14. Setting/Cancel button
- 15. Exit button

\* Some functions may not be operated and displayed depending on the product type.


\* It will display strange value to the room temperature if wired remote controller is not connected.

#### Model : PQRCVSL0 (Black Color) PQRCVSL0QW (White Color)

#### Name and function of wired remote controller(Optional)

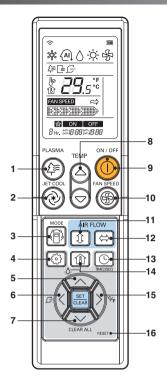

#### PQWRCDF0 (Cooling only) PQWRHDF0 (Heat pump)

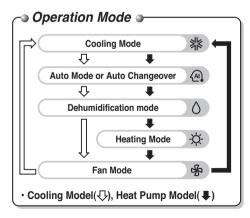

- 1. Plasma button (optional) Used to start or stop the plasma-purification function.
- 2. Jet cool button Speed cooling operates super high fan speed.
- **3. Operation mode selection button** Used to select the operation mode.
- 4. Function setting button Used to set or clear auto clean or smart clean.
- 5. LCD luminosity button (optional) Used to adjust LCD luminosity
- 6. Smart clean button (optional) Used to start or stop smart clean.
- 7. Clear all button Used to clear all timer.
- 8. Room temperature setting button Used to select the room temperature.
- 9. ON/OFF button Used to turn off/on the unit.
- **10. Indoor fan speed selection button** Used to select fan speed in four steps low, medium, high and chaos.
- 11. Auto swing button Used to stop or start louver movement and set the desired up/down airflow direction.
- 12. Horizontal airflow direction control button (optional)

Used to set the desired horizontal airflow direction.

- **13. Timer and time setting button** Used to set the time of starting or stopping and sleeping operation.
- 14. Room temperature checking button Used to check the room temperature.
- CCF switch button Used to switch temperature reading from Celsius to Fahrenheit.
- 16. Reset button

Used to reset the remote controller.

# **Maintenance and Service**

#### 

Before performing any maintenance, turn off the main power to the system. Never use any of the followings:

- Water hotter than 40°C. Could cause deformation and/or discoloration.
- Volatile substances.
- Could damage the surfaces of the air conditioner.

#### **Air Filters**

The air filters behind the front panel / grill should be checked and cleaned once in every 2 weeks or more often if necessary. To remove the filters see the self explanatory diagrams for each model type. Clean the filters with a vacuum cleaner or warm soapy water. If dirt is not easily removed, wash with a solution of detergent in luke warm water. Dry well in shade after washing and reinstall the filters back in place.

#### Plasma Filters

The plasma filters behind the air filter should be checked and cleaned once in every 3 months or more often if necessary. To remove the filters see the self explanatory diagrams for each model type. Clean the filters with a vacuum cleaner. If it is dirty wash it with water and dry well in shade an install back in place.

#### **Deodorizer Filters**

Remove the deodorizer filters behind the air filter and expose them in direct sunlight for 2 hours.

And then insert these filters into original position.

#### **Removal of Filters**

#### Two different methods to open the front panel based on types of air conditioner as below ;


Type 1: Open the front panel as shown.

Then pull the filter tab slightly forward to remove the air filter. After removing the air filter remove the plasma and deodorizer filter by slightly pulling forward.



Type 2: Pull the front panel from both sides as shown.

 Then pull the filter tab slightly forward to remove the filter. After removing the air filter remove the plasma and triple deodorizer filter by slightly pulling forward.



#### **A**CAUTION

Don't touch this plasma filter within 10 seconds after opening the inlet grille, it may cause an electric shock.










#### When the air conditioner is not going to be used for a long time.

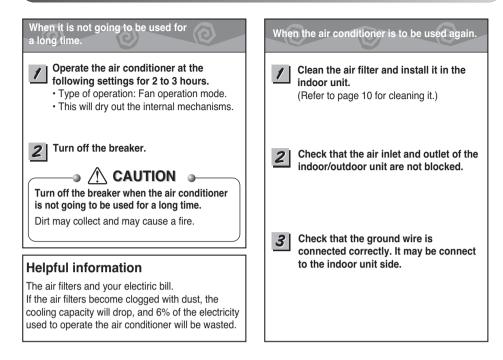

#### **Operation Tips**

Do not overcool the room.	Keep blinds or curtains closed.	Keep the room temperature uniform.
This is not good for the health and wastes electricity.	Do not let direct sunshine enter the room when the air conditioner is in operation.	Adjust the vertical and horizontal airflow direction to ensure a uniform temperature in the room.
Make sure that the doors and windows are shut tight.	Clean the air filter regularly.	Ventilate the room occasionally.
Avoid opening doors and windows as much as possible to keep the cool air in the room.	Blockages in the air filter reduce the airflow and lower cooling and dehumidifying effects. Clean at least once every two weeks.	Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.

#### Before you call for service...



#### Troubleshooting Tips! Save time and money!

Check the following points before requesting repairs or service.... If the malfunction persist, please contact your dealer.

The air conditioner does not operate. • Have you made a mistake in timer operation? • Has the fuse blown or has the circuit breaker been tripped?	The room has a peculiar odor. • Check that this is not a damp smell exuded by the walls, carpet, furniture or cloth items in the room.	It seems that condensation is leaking from the air conditioner. • Condensation occurs when the airflow from the air conditioner cools the warm room air.	Air conditioner does not operate for about 3 minutes when restart. • This is the protector of the mechanism. • Wait about three minutes and operation will begin.
Does not cool or heat effectively.	The air conditioner operation is noisy.	Crack sound is heard.	Remote control display is faint, or no display at all.
<ul> <li>Is the air filter dirty? See air filter cleaning instructions.</li> <li>The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down.</li> <li>Has the temperature been set incorrectly?</li> <li>Are the indoor unit's air inlet or outlet vents obstructed?</li> </ul>	<ul> <li>For a noise that sounds like water flowing.</li> <li>This is the sound of freon flowing inside the air conditioner unit.</li> <li>For a noise that sounds like the compressed air releasing into atmosphere.</li> <li>This is the sound of the dehumidifying water being processed inside the air conditioning unit.</li> </ul>	<ul> <li>This sound is generated by the expansion/ constriction of the front panel, etc. due to changes of temperature.</li> <li>Filter sign lamp (LED) is ON.</li> <li>Cleaning the filter, press the Timer button and ◄ button of wired remote controller at the same time for 3 sec.</li> </ul>	<ul> <li>Are the batteries depleted?</li> <li>Are the batteries inserted in the opposite (+) and (-) directions?</li> </ul>

NOTE

WATER RESISTANT: The outdoor side of this appliance is WATER RESISTANT. The indoor side is not water resistant and should not be exposed to excess water.



İTHALATÇI FİRMA Bosch Termoteknik Isıtma ve Klima Ticaret A.Ş. Ankara Asfaltı Üzeri, Acıbadem Mah. Onur Sokak No:18/A Koşuyolu-Kadıköy / İstanbul / TÜRKİYE Tel: (0 216) 544 11 00 ÜRETİCİ FİRMA LG Electronics Inc. 76, Seongsan-dong, Changwon City, Gyeongnam 641-713, Republic of Korea www.lg.com