

ESPANOL

OWNER'S MANUAL

Please read this manual carefully before operating your set and retain it for future reference.

TYPE : Convertible

Models ARNU09GVEA2 ARNU12GVEA2

P/NO : MFL63267202

www.lg.com

TABLE OF CONTENTS

| Safety Precautions3 | |
|--|--|
| Prior to Operation6 | |
| Operating Instructions7 | |
| Name and Function of Remote Controller7 | |
| Maintenance and Service9 | |
| Before you Call for | |

Service.....11

S

F

Λ

FOR YOUR RECORDS

Write the model and serial numbers here:

Model

Serial

You can find them on a label on the side of each unit.

Dealer's Name

Date Purchased

Staple your receipt to this page in the event you need to prove date of purchase or to issue warranty.

CREAD THIS MANUAL

Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your air conditioner.

You'll find many answers to common problems in the chart of troubleshooting tips. If you review our chart of

Troubleshooting Tips first, you may not need to call for service at all.

PRECAUTION

- Contact the authorized service technician for repair or maintenance of this unit.
- · Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or invalids without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- When the power cord is to be replaced, replacement work shall be performed by authorized personnel only using only genuine replacement parts.
- Installation work must be performed in accordance with the National Electric Code by qualified and authorized personnel only.



Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.

Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.

WARNING This symbol indicates the possibility of death or serious injury.

This symbol indicates the possibility of injury or damage to properties only.

Meanings of symbols used in this manual are as shown below.

Installation

| \bigcirc | Be sure not to do. |
|------------|------------------------------------|
| | Be sure to follow the instruction. |

| Installation | | |
|---|--|---|
| Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit. | For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center. | Always ground the product. |
| There is risk of fire or electric shock. | • Do not disassemble or repair the product. There is risk of fire or electric shock. | There is risk of fire or electric shock. |
| Install the panel and the cover of control box securely. | Always install a dedicated circuit and breaker. | Use the correctly rated breaker or fuse. |
| There is risk of fire or electric shock. | Improper wiring or installation may cause fire or electric shock | There is risk of fire or electric shock. |
| Do not modify or extend the power cable. | Do not install, remove, or re-install the unit by yourself (customer). | Be cautious when unpacking and installing the product. |
| There is risk of fire or electric shock. | There is risk of fire, electric shock, explosion, or injury. | • Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator. |
| For installation, always contact the dealer or an Authorized Service Center. | Do not install the product on a defective installation stand. | Be sure the installation area does not deteriorate with age. |
| There is risk of fire, electric shock, explosion, or injury. | It may cause injury, accident, or damage to the product. | If the base collapses, the air conditioner could fall with it, causing property damage, product failure, and personal injury. |

| Operation | | | |
|--|--|--|--|
| Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open. | | nsure that power ot be pulled out or ng operation. | Do not place anything on the power cable. |
| • Moisture may condense and wet or damage furniture. | There is risk of shock. | fire or electric | There is risk of fire or electric shock. |
| Do not plug or unplug the power supply plug during operation. | Do not touch(o product with w | | Do not place a heater or other appliances near the power cable. |
| There is risk of fire or electric shock. | There is risk of shock. | fire or electrical | There is risk of fire and electric shock. |
| Do not allow water to run into electric parts. | Do not store or use flammable gas or combustibles near the product. | | Do not use the product in a tightly closed space for a long time. |
| • It may cause There is risk of fire, failure of the product, or electric shock. | There is risk of product. | fire or failure of | Oxygen deficiency could occur. |
| When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on. | If strange sounds, or small or smoke comes from product. Turn the breaker off or disconnect the power supply cable. | | Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives. |
| • Do not use the telephone or turn switches on or off. There is risk of explosion or fire | There is risk of electric shock or fire. When the product is soaked (flooded or submerged), contact an Authorized Service Center. | | There is risk of property damage, failure of product, or electric shock. |
| Do not open the inlet grill of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.) | | | Be cautious that water could not enter the product. |
| • There is risk of physical injury, electric shock, or product failure. | There is risk of shock. | fire or electric | There is risk of fire, electric shock, or product damage. |
| Ventilate the product from time to time when operating it together with a stove, etc. | | Turn the main p maintaining the | power off when cleaning or e product. |
| There is risk of fire or electric shock | ۲. | There is risk of electric shock. | |
| When the product is not be used a disconnect the power supply plug breaker. | | Take care to ensure that nobody could step on or fall onto the outdoor unit. | |
| There is risk of product damage or faunintended operation. | ailure, or | This could result damage. | in personal injury and product |

ENGLISH

| Installation | | | |
|---|---|--|--|
| Always check for gas (refrigerant) leakage after installation or repair of product. | Install the drain he that water is drain properly. | | Keep level even when installing the product. |
| Low refrigerant levels may cause failure of product. | A bad connection water leakage. | n may cause | To avoid v bration or water leakage. |
| Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods. | Use two or more people to lift and transport the product. | | Do not install the product where it will be exposed to sea wind (salt spray) directly. |
| It may cause a problem for your neighbors. | • Avoid personal i | njury. | It may cause corrosion on the product. Corrosion, par icularly on the condenser and evaporator fins, could cause product malfunc ion or inefficient operation. |
| Operation | | | |
| Do not expose the skin directly to cool air for long periods of time. (Don't sit in the draft.) | Do not use the proc purposes, such as works of art, etc. It conditioner, not a p refrigeration system | preserving foods, is a consumer air recision | Do not block the inlet or outlet of air flow. |
| This could harm to your health. | There is risk of a of property. | damage or loss | It may cause product failure. |
| Use a soft cloth to clean. Do not use harsh detergents, solvents, etc. | Do not touch the r product when rem filter. They are ver | oving the air | Do not step on or put anyting on the product. (outdoor units) |
| • There is risk of fire, electric shock, or damage to the plastic parts of the product. | There is risk of personal injury. Do not insert hands or other objects through the air inlet or outlet while the product is operated. There are sharp and moving parts that could cause personal injury. Replace the all batteries in the remote control with new ones of the same type. Do not mix old and new batteries or different types of batteries. | | • There is risk of personal injury and failure of product. |
| Always insert the filter securely. Clean the filter every two weeks or more often if necessary. | | | Do not drink the water drained from the product. |
| • A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage. | | | It is not sanitary and could cause serious health issues. |
| Use a firm stool or ladder when cleaning or maintaining the product. | | | Do not recharge or disassemble the batteries. Do not dispose of batteries in a fire. |
| • Be careful and avoid personal injury. | • There is risk of f | ire or explosion | • They may burn or explode. |
| If the liquid from the batteries get or clothes, wash it well with clear use the remote if the batteries ha | n water. Do not | | quid from the batteries, brush your loctor. Do not use the remote if the leaked. |
| • The chemicals in batteries could ca | use burns or | The chemicals | in batteries could cause burns or |

• The chemicals in batteries could cause burns or other health hazards.

other health hazards.

Prior to Operation

Preparing for operation

- 1. Contact an installation specialist for installation.
- 2. Use a dedicated circuit.

Usage

- 1. Being exposed to direct airflow for an extended period of time could be hazardous to your health. Do not expose occupants, pets, or plants to direct airflow for extended periods of time.
- Due to the possibility of oxygen deficiency, ventilate the room when used together with stoves or other heating devices.
- 3. Do not use this air conditioner for non-specified special purposes (e.g. preserving precision devices, food, pets, plants, and art objects). Such usage could damage the items.

Cleaning and maintenance


- 1. Do not touch the metal parts of the unit when removing the filter. Injuries can occur when handling sharp metal edges.
- 2. Do not use water to clean inside the air conditioner. Exposure to water can destroy the insulation, leading to possible electric shock.
- 3. When cleaning the unit, first make sure that the power and breaker are turned off. The fan rotates at a very high speed during operation. There is a poss bility of injury if the unit's power is accidentally triggered on while cleaning inner parts of the unit.

Service

For repair and maintenance, contact your authorized service dealer.

Operating Instructions

Name and function of wired remote controller(Accessory)

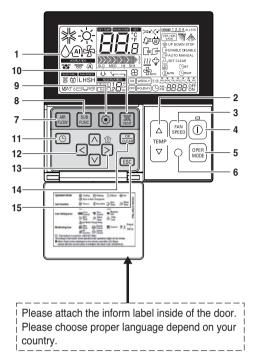


- 1. Operation indication screen
- 2. Set temperature button
 - · It will set not room temperature but outlet air temperature.
- 3. Fan speed button
 - · Fan Speed have 3 Steps.
 - · Middle and Low step is same
- 4. ON/OFF button
- 5. Opration mode selection button
- 6. Wireless remote controller receiver
 - · Some products don't receive the wireless signals.
- 7. Air flow button
- 8. Subfunction button
- 9. Function setting button
- 10. Ventilation button
- 11. Reservation
- 12. Up,down,left,right button
 - To check the indoor temperature, press $\sum_{i=1}^{M}$ button.
- 13. Room temperature button
 - Displays only the room temperature of the remote controller perception.
 - · There is no control of room temperature.
 - In case of fresh air intake unit, displays only the temperature around remote controller.
- 14. Setting/Cancel button
- 15. Exit button

* Some functions may not be operated and displayed depending on the product type.


* It will display strange value to the room temperature if wired remote controller is not connected.

Model : PQRCVSL0 (Black Color) PQRCVSL0QW (White Color)

Name and function of wired remote controller(Optional)

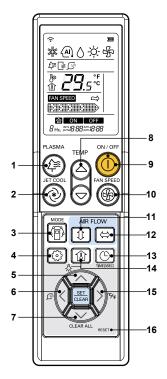

PQWRCDF0 (Heat pump) PQWRHDF0 (Cooling only)

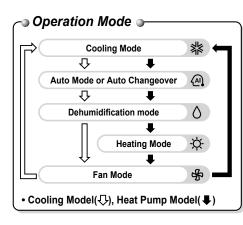

- 1. Plasma button (Optional) Used to start or stop the plasma-purification function
- 2. Jet cool button Speed cooling operates super high fan speed.
- 3. Operation mode selection button Used to select the operation mode.
- 4. Function setting button Used to set or clear auto clean or smart clean.
- 5. LCD luminosity button (Optional) Used to adjust lcd luminosity
- 6. Smart clean button (optional) Used to start or stop smart clean.
- 7. Clear all button used to clear all timer.
- 8. Room temperature setting button Used to select the room temperature.
- 9. ON/OFF button Used to turn off/on the unit.
- **10. Indoor fan speed selection button** Used to select fan speed in four steps low, medium, high and chaos.
- 11. Auto swing button Used to stop or start louver movement and set the desired up/down airflow direction.
- 12. Horizontal airflow direction control button (optional) Used to set the desired horizontal airflow direction.

13. Timer and time setting button Used to set the time of starting or stopping and

- Used to set the time of starting or stopping and sleeping operation.
- **14. Room temperature checking button** Used to check the room temperature.
- 15. °C/°F switch button Used to switch temperature reading from celsius to fahrenheit
- 16. Reset button

Used to reset the remote controller.

Maintenance and Service

Before performing any maintenance, turn off the main power to the system.

Indoor Unit

Grille, Case, and Remote Control

□ Turn the system off before cleaning.

To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

NOTICE

: Supply power must be disconnected before cleaning the indoor unit.


□ Never use any of the followings:

- Water hotter than 40°C. Could cause deformation and/or discoloration.
- Volatile substances Could damage the surfaces of the air conditioner.

AIR FILTERS


The air filters behind the front grille should be checked and cleaned once in every 2 weeks or more often if neccessary.

- 1. Lift the front access panel and pull the filter tab slightly forward to remove the filter.
- 2. Clean the filter with a vacuum cleaner or warm, soapy water.
 - If dirt is conspicuous, wash with a solution of detergent in lukewarm water.
 - If hot water (40°C or more) is used, it may be deformed.
- 3. After washing with water, dry well in the shade.
- 4. Re-install the air filter.

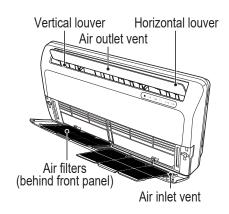



When the air conditioner is not going to be used for a long time.

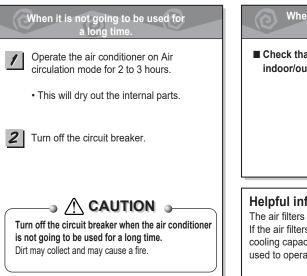

When the air conditioner is to be used again.

Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.

Helpful information

The air filters and your electiric bill. If the air filters become clogged with dust, the cooling capacity will drop, and 6% of the electricity used to operate the air conditioner will be wasted.

Operation Tips

| Do not overcool the room. This is not good for the health and wastes electricity. | Keep blinds or curtains closed. Do not let direct sunshine enter the room when the air conditioner is in operation. | Make sure that the doors and windows are shut tight. Avoid opening doors and windows as much as possible to keep the cool air in the room. |
|--|---|---|
| Blockages in the air filter reduce the airflow and lower cooling and dehumidifying effects. Clean at least once every two weeks. | Since windows are kept closed, it is a good idea to open them and ventilate the room now and then. | |

Before you call for service...



Troubleshooting Tips! Save time and money!

Check the following points before requesting repairs or service.... If the malfunction persists, please contact your dealer.

| The air conditioner does not operate. | The room has a peculiar odor. | It seems that condensation is leaking from the air conditioner. | Air conditioner does not operate for about 3 minutes when restart. |
|--|--|---|---|
| Have you made a mistake in timer operation? Has the fuse blown or has the circuit breaker been tripped? | • Check that this is not a damp smell exuded by the walls, carpet, furniture or cloth items in the room. | Condensation occurs when the airflow from the air conditioner cools the warm room air. | This is the protector of the mechanism. Wait about three minutes and operation will begin. |
| Does not cool or heat effectively. | The air conditioner operation is noisy. | Crack sound is heard. | Remote control display is faint, or no display at all. |
| Is the air filter dirty? See air filter cleaning instructions. The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down. Has the temperature been set incorrectly? Are the indoor unit's air inlet or outlet vents obstructed? | For a noise that sounds like water flowing. This is the sound of freon flowing inside the air conditioner unit. For a noise that sounds like the compressed air releasing into atmosphere. This is the sound of the dehumidifying water being processed inside the air conditioning unit. | This sound is generated by the expansion/ constriction of the front panel, etc. due to changes of temperature. Filter sign lamp (LED) is ON. Cleaning the filter, press the Timer button and | Are the batteries depleted? Are the batteries inserted in the opposite (+) and (-) directions? |

NOTICE

WATER RESISTANT: The outdoor side of this appliance is WATER RESISTANT. The indoor side is not water resistant and should not be exposed to excess water. wemo