
# HITACHI

# **SERVICE MANUAL**

**TECHNICAL INFORMATION** 

FOR SERVICE PERSONNEL ONLY

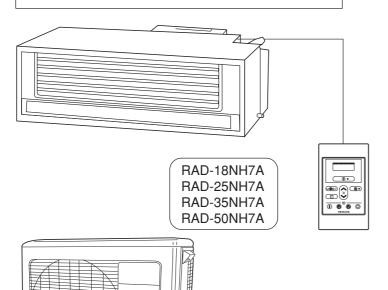

RAC-25NH5 RAC-35NH5 RAC-50NH5

## REFER TO THE FOUNDATION MANUAL

RAD-25NH7A/RAC-25NH5

RAD-35NH7A/RAC-35NH5 RAD-50NH7A/RAC-50NH5

NO. 0420E

PM

RAD-18NH7A

#### CONTENTS

SPECIFICATIONS	4
HOW TO USE	6
CONSTRUCTION AND DIMENSIONAL DIAGRAM	24
MAIN PARTS COMPONENT	27
WIRING DIAGRAM	29
CIRCUIT DIAGRAM	31
BLOCK DIAGRAM	37
BASIC MODE	39
REFRIGERATING CYCLE DIAGRAM	53
DESCRIPTION OF MAIN CIRCUIT OPERATION	55
SERVICE CALL Q & A	87
TROUBLE SHOOTING	90
PARTS LIST AND DIAGRAM	108

#### **SPECIFICATIONS**

TYPE			DC INVERTER (DUCT TYPE)							
'''-			INDOOR UNIT   INDOOR UNIT   OUTDOOR UNIT   INDOOR UNIT   OUTDOOR UNIT   INDOOR UNIT   OUTDOOR						OUTDOOR UNIT	
MODE	L		RAD-18NH7A	RAD-25NH7A	RAC-25NH5	RAD-35NH7A	RAC-35NH5	H5 RAD-50NH7A RAC-50NH		
POWE	R SOURCE		1 PHASE, 50 Hz, 220-240V	1 PHASE, 50	Hz, 220-240V	1 PHASE, 50	Hz, 220-240V	1 PHASE, 50 Hz, 220-240		
	TOTAL INPUT	(W)	560 (155-850)	695 (15	5-1,050)	1,240 (15	55-1,280)	2,000 (1	55-2,060)	
COOLING	TOTAL AMPERE	S (A)	2.56-2.35	3.20-	-2.92	5.70-5.24		9.20-8.40		
OOOLING	OADAOITV	(kW)	1.80 (0.9 ~ 2.5)	2.50 (0.9 ~ 3.0)		3.50 (0.9 ~ 4.0)		5.0 (0.9 ~ 5.6)		
	CAPACITY	(B.T.U./h)	6,150 (3,070-8,540)	8,540 (3,070-10,240) 11		11,950 (3,070-13,660)		17,070 (3,070-19,120)		
TOTAL INPUT		(W)	690 (155-1,050)	970 (155-1,400)		1,700 (15	55-1,920)	2,300 (1	55-2,530)	
HEATING	TOTAL AMPERE	S (A)	3.20-2.92	4.50-4.10		7.84-7.19		10.60-9.70		
TIE/(TING	CAPACITY	(kW)	2.50 (0.9 ~ 3.2)	3.50 (0.9 ~ 5.0)		4.80 (0.9 ~ 6.6)		6.0 (0.9	9 ~ 7.5)	
	CAPACITY	(B.T.U./h)	8,540 (3,070-10,930)	11,950 (3,0	)70-17,070)	16,390 (3,0	70-22,530)	20,490 (3,0	70-25,610)	
		W	750	750	750	750	750	750	850	
I	DIMENSIONS H (mm) D		235	235	570	235	570	235	650	
(111111)			400	400	280	400	280	400	298	
NET V	VEIGHT	(kg)	19	19	38	38 19 38 19		60		

SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT


# ROOM AIR CONDITIONER

INDOOR UNIT + OUTDOOR UNIT

MAY 2008 Refrigeration & Air-Conditioning Division

## SAFETY DURING REPAIR WORK


 In order to disassemble and repair the unit in question, be sure to disconnect the power cord plug from the power outlet before starting the work.

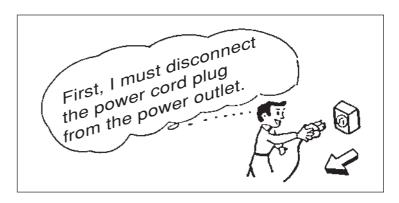

2. If it is necessary to replace any parts, they should be replaced with respective genuine parts for the unit, and the replacement must be effected in correct manner according to the instructions in the Service Manual of the unit.

If the contacts of electrical parts are defective, replace the electrical parts without trying to repair them.

- 3. After completion of repairs, the initial state should be restored.
- Lead wires should be connected and laid as in the initial state.
- 5. Modification of the unit by user himself should absolutely be prohibited.

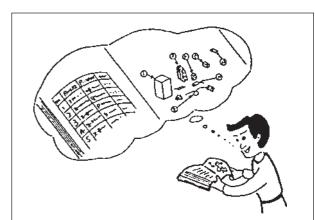

- 6. Tools and measuring instruments for use in repairs or inspection should be accurately calibrated in advance.
- 7. In installing the unit having been repaired, be careful to prevent the occurrence of any accident such as electrical shock, leak of current, or bodily injury due to the drop of any part.
- 8. To check the insulation of the unit, measure the insulation resistance between the power cord plug and grounding terminal of the unit. The insulation resistance should be  $1M\Omega$  or more as measured by a 500V DC megger.
- The initial location of installation such as window, floor or the other should be checked for being and safe enough to support the repaired unit again.
   If it is found not so strong and safe, the unit should be installed at the initial location reinforced or at a new location.
- Any inflammable thing should never be placed about the location of installation.
- 11. Check the grounding to see whether it is proper or not, and if it is found improper, connect the grounding terminal to the earth.



#### WORKING STANDARDS FOR PREVENTING BREAKAGE OF SEMICONDUCTORS

#### 1. Scope

The standards provide for items to be generally observed in carrying and handling semiconductors in relative manufacturers during maintenance and handling thereof. (They apply the same to handling of abnormal goods such as rejected goods being returned).

#### 2. Object parts

- (1) Micro computer
- (2) Integrated circuits (IC)
- (3) Field-effect transistors (FET)
- (4) P.C. boards or the like on which the parts mentioned in (1) and (2) of this paragraph are equipped.

#### 3. Items to be observed in handling

(1) Use a conductive container for carrying and storing of parts. (Even rejected goods should be handled in the same way).

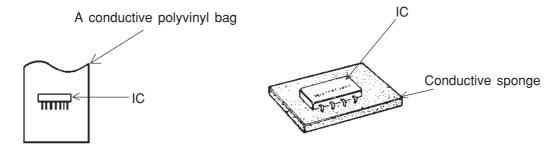


Fig. 1. Conductive Container

- (2) When any part is handled uncovered (in counting, packing and the like), the handling person must always use himself as a body earth. (Make yourself a body earth by passing one M ohm earth resistance through a ring or bracelet).
- (3) Be careful not to touch the parts with your clothing when you hold a part even if a body earth is being taken.
- (4) Be sure to place a part on a metal plate with grounding.
- (5) Be careful not to fail to turn off power when you repair the printed circuit board. At the same time, try to repair the printed circuit board on a grounded metal plate.

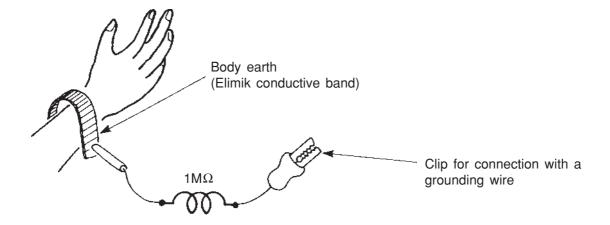


Fig. 2. Body Earth

(6) Use a three wire type soldering iron including a grounding wire.

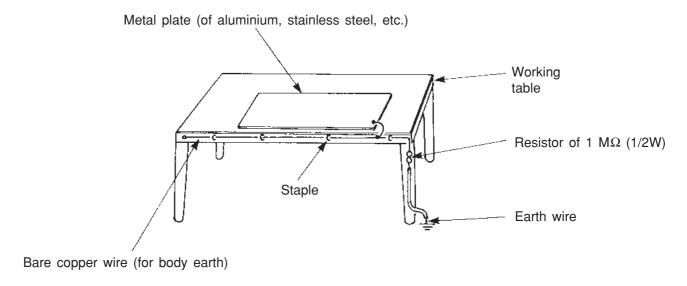


Fig. 3. Grounding of the working table

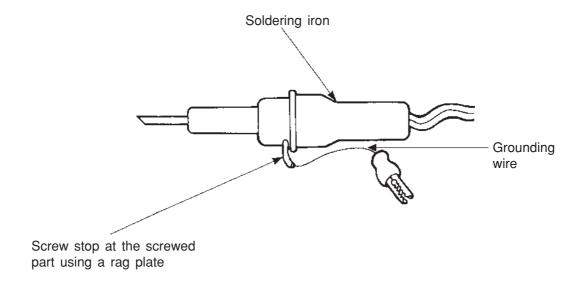


Fig. 4. Grounding a soldering iron

Use a high insulation mode (100V,  $10M\Omega$  or higher) when ordinary iron is to be used.

(7) In checking circuits for maintenance, inspection or some others, be careful not to have the test probes of the measuring instrument shortcircuit a load circuit or the like.


## **A** CAUTION

- 1. In quiet operation or stopping the running, slight flowing noise of refrigerant in the refrigerating cycle is heard occasionally, but this noise is not abnormal for the operation.
- 2. When it thunders near by, it is recommend to stop the operation and to disconnect the power cord plug from the power outlet for safety.
- 3. The room air conditioner does not start automatically after recovery of the electric power failure for preventing fuse blowing. Re-press START/STOP button after 3 minutes from when unit stopped.
- 4. If the room air conditioner is stopped by adjusting thermostat, or missoperation, and re-start in a moment, there is occasion that the cooling and heating operation does not start for 3 minutes, it is not abnormal and this is the result of the operation of IC delay circuit. This IC delay circuit ensures that there is no danger of blowing fuse or damaging parts even if operation is restarted accidentally.
- 5. This room air conditioner should not be used at the cooling operation when the outside temperature is below 10°C (50°F).
- 6. This room air conditioner (the reverse cycle) should not be used when the outside temperature is below  $-15^{\circ}$ C (5°F).
  - If the reverse cycle is used under this condition, the outside heat exchanger is frosted and efficiency falls.
- 7. When the outside heat exchanger is frosted, the frost is melted by operating the hot gas system, it is not trouble that at this time fan stops and the vapour may rise from the outside heat exchanger.

## **SPECIFICATIONS**

MODEL		RAD-18NH7A RAD-25NH7A RAD-35NH7A RAD-50NH7A	RAC-25NH5 RAC-35NH5	RAC-50NH5
FAN MOTOR	20W	40	W	
FAN MOTOR CAPACITOR		NO	N	0
FAN MOTOR PROTECTOR		NO	N	0
COMPRESSOR		_	JU1012D	JU1013D
COMPRESSOR MOTOR CAP	ACITOR	NO	N	0
OVERLOAD PROTECTOR		NO	YE	ES
OVERHEAT PROTECTOR		NO	YE	ES .
FUSE (for MICROPROCESSO	NO	3.0A		
POWER RELAY		NO	G4A	
POWER SWITCH		NO	NO	
TEMPORARY SWITCH		NO	NO	
SERVICE SWITCH		NO	YES	
TRANSFORMER		NO	NO	
VARISTOR	VARISTOR		450NR	
NOISE SUPPRESSOR	NO	YES		
THERMOSTAT		YES(IC)	YES(IC)	
REMOTE CONTROL SWITCH (LIQUID CRYSTAL)		YES	NO	
REFRIGERANT CHARGING	UNIT		1150g	1400g
VOLUME (Refrigerant 410A)	PIPES (MAX. 20m)	WITHOUT REFRIGERANT BECAUSE COUPLING IS FLARE TYPE.		

#### [Indoor unit installation]

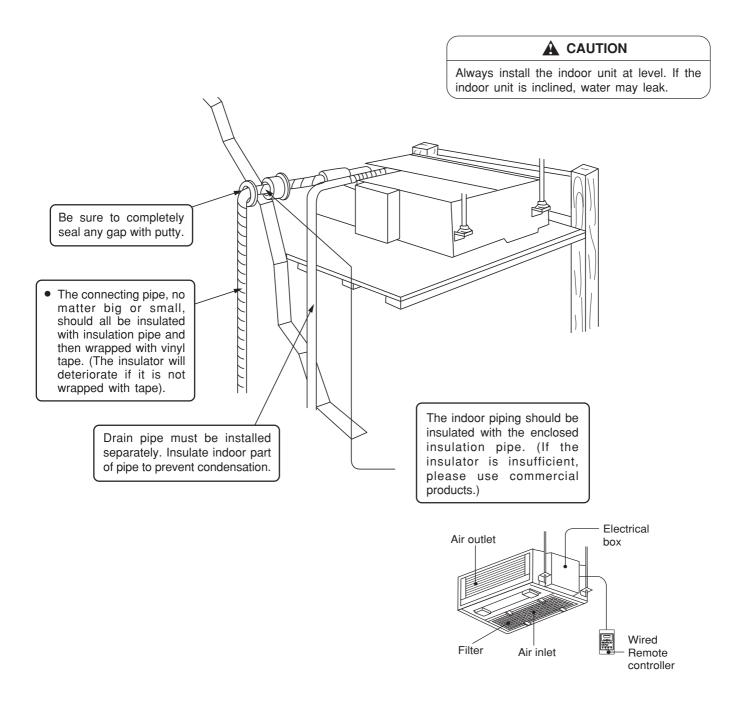

• "Height difference" and "Piping length" of Indoor and Outdoor unit are different by Outdoor unit. Please refer to the installation manual in Outdoor unit.



# SAFETY PRECAUTION

- Please read the "Safety Precaution" carefully before operating the unit to ensure correct usage of the unit.
- Pay special attention to signs of "A Warning" and "A Caution". The "Warning" section contains matters which, if not observed strictly, may cause death or serious injury. The "Caution" section contains matters which may result in serious consequences if not observed properly. Please observe all instructions strictly to ensure safety.
- The sign indicate the following meanings.


■ Make sure to connect earth line.

The sign in the figure indicates prohibition.

Indicates the instructions that must be followed.

• Please keep this manual after reading.

#### PRECAUTIONS DURING INSTALLATION

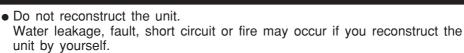





- Please ask your sales agent or qualified technician for the installation of your unit. Water leakage, short circuit or fire may occur if you install the unit by yourself.
- Please use earth line.
   Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock.





- A circuit breaker should be installed depending on the mounting site of the unit. Without a circuit breaker, the danger of electric shock exists.
- Do not install near location where there is flammable gas. The outdoor unit may catch fire if flammable gas leaks around it.



• Please ensure smooth flow of water when installing the drain hose.

## PRECAUTIONS DURING SHIFTING OR MAINTENANCE

W A R N I N G

A

W

Α

R N

I N G • Should abnormal situation arises (like burning smell), please stop operating the unit and turn off the circuit breaker. Contact your agent. Fault, short circuit or fire may occur if you continue to operate the unit under abnormal situation.



- Please contact your agent for maintenance. Improper self maintenance may cause electric shock and fire.
- Please contact your agent if you need to remove and reinstall the unit. Electric shock or fire may occur if you remove and reinstall the unit yourself improperly.
- If the supply cord is damaged, it must be replaced by the special cord obtainable at authorized service/parts centers.

#### PRECAUTIONS DURING OPERATION

Avoid an extended period of direct air flow for your health.





- Do not insert a finger, a rod or other objects into the air outlet or inlet. As the fan is rotating at a high speed, it will cause injury. Before cleaning, be sure to stop the operation and turn the breaker OFF.
- Do not use any conductor as fuse wire, this could cause fatal accident.





• During thunder storm, disconnect and turn off the circuit breaker.

Т

0

Ν

## PRECAUTIONS DURING OPERATION

• The product shall be operated under the manufacturer specification and not for any other intended use.





- Do not attempt to operate the unit with wet hands, this could cause fatal accident.
- When operating the unit with burning equipments, regularly ventilate the room to avoid oxygen insufficiency.





- Do not direct the cool air coming out from the air-conditioner panel to face household heating apparatus as this may affect the working of apparatus such as the electric kettle, oven etc.
- Please ensure that outdoor mounting frame is always stable, firm and without defect. If not, the outdoor unit may collapse and cause danger.





- Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.
- Do not use any aerosol or hair sprays near the indoor unit. This chemical can adhere on heat exchanger fin and blocked the evaporation water flow to drain pan. The water will drop on tangential fan and cause water splashing out from indoor unit.





- Please switch off the unit and turn off the circuit breaker during cleaning, the high-speed fan inside the unit may cause danger.
- Turn off the circuit breaker if the unit is not to be operated for a long period.





- Do not climb on the outdoor unit or put objects on it.
- Do not put water container (like vase) on the indoor unit to avoid water dripping into the unit. Dripping water will damage the insulator inside the unit and causes short-circuit.





- Do not place plants directly under the air flow as it is bad for the plants.
- When operating the unit with the door and windows opened, (the room humidity is always above 80%) and with the air deflector facing down or moving automatically for a long period of time, water will condense on the air deflector and drips down occasionally. This will wet your furniture. Therefore, do not operate under such condition for a long time.
- If the amount of heat in the room is above the cooling or heating capability of the unit (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.



## **MULTI-AIR CONDITIONER**

With this multi-air conditioner, several indoor units can be connected to one outdoor unit to be driven. You can operate the required number of indoor units.

#### **Combination of Operations:**

When operation mode is selected:

 You cannot operate the indoor units in the following combinations.

One unit	Other unit
	Cooling
Heating	Dehumidifying
	Circulating (fan)

- The indoor unit which is switched on first continues to operate, but other indoor units which is switched on later does not operate while the lamp lights.
- To re-start an indoor unit which was operated later, stop the indoor unit which was operated first or later and reset the type of operation, then perform operation again.

During automatic operation:

 When heating operation is automatically selected for the first indoor unit, the next indoor unit will then start to heat. Also, if cooling or dehumidifying is automatically selected for the first indoor unit, the next indoor unit will also start to cool or dehumidify.

# Adjusting the Number of Indoor Units:


Decrease the number of indoor units to be operated especially when it is very hot or cold or when you want to reach the present temperature quickly.



#### **Stopped Indoor Units:**

When an indoor unit is operated in the cooling, heating or dehumidifying mode in the room, the sound of refrigerant flow may be heard from a stopped indoor unit or a stopped indoor unit may become warm. This is because the indoor unit returns refrigerant to the outdoor unit to be ready for operation.

# INDOOR UNIT

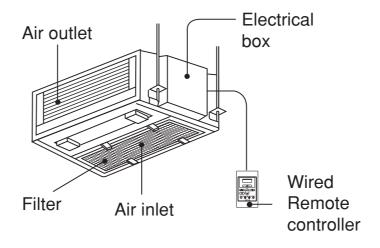


## MODEL NAME AND DIMENSIONS

MODEL	WIDTH (mm)	HEIGHT (mm)	DEPTH (mm)
RAD-18NH7A/RAD-25NH7A/RAD-35NH7A/RAD-50NH7A	750	235	400

## NAMES AND FUNCTIONS OF REMOTE CONTROL UNIT

■ This controls the operation function and timer setting of the room air conditioner.

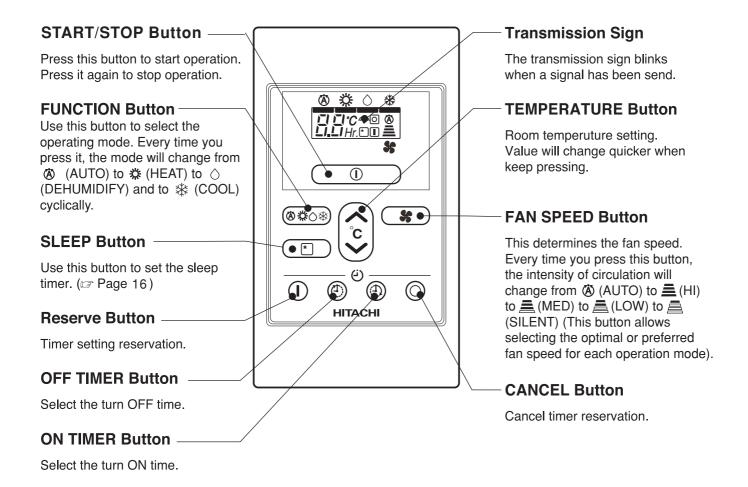

#### **Precautions for Use**

- Do not put the remote controller in the following places.
  - Under direct sunlight.
  - In the vicinity of a heater.
- Handle the remote controller carefully. Do not drop it on the floor, and protect it from water.
- Once the outdoor unit stops, it will not restart for about 3 minutes (unless you turn the power switch off and on or unplug the power cord and plug it in again).
  - This is to protect the device and does not indicate a failure.
- If you press the FUNCTION selector button during operation, the device may stop for about 3 minutes for protection.


## **VARIOUS FUNCTIONS**

## ■ Auto Restart Control

- If there is a power failure, operation will be automatically restarted when the power is resumed with previous operation mode.
   (As the operation is not stopped by remote controller.)
- If you intend not to continue the operation when the power is resumed, switch off the power supply.
   When you switch on the circuit breaker, the operation will be automatically restarted with previous operation mode.
   Note: 1. If you do not require Auto Restart Control, please consult your sales agent or OFF by remote control.
  - 2. Auto Restart Control is not available when Timer or Sleep Timer mode is set.

## **AUTOMATIC OPERATION**

The device will automatically determine the mode of operation, HEAT, COOL or DEHUMIDIFY depending on the current room temperature. The selected mode of operation will change when the room temperature varies.

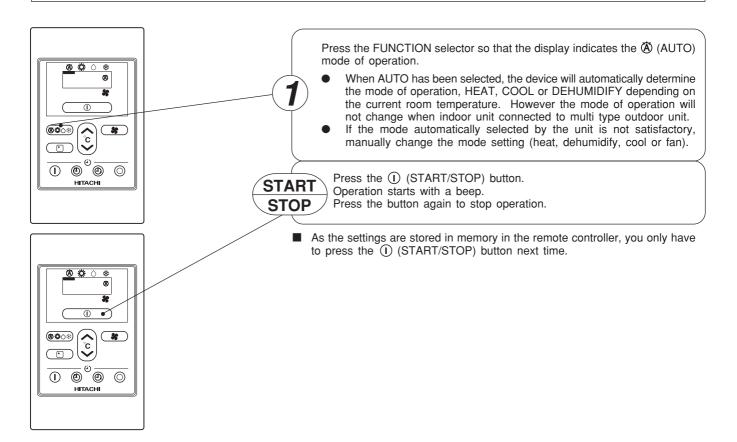


#### FAN SPEED (AUTO)

..... When the AUTO fan speed mode is set in the cooling/heating operation:

For the heating operation	<ul> <li>The fan speed will automatically change according to the temperature of discharged air.</li> <li>When the difference of room temperature and setting temperature is large, fan starts to run at HI speed.</li> <li>When the room temperature reaches setting temperature, fan speed changes to LOW automatically.</li> </ul>
For the cooling operation	<ul> <li>When the difference of room temperature and setting temperature is large, fan starts to run at HI speed.</li> <li>After room temperature reaches the preset temperature, the cooling operation, which changes the fan speed and room temperature to obtain optimum conditions for natural healthful cooling will be performed.</li> </ul>


## **HEATING OPERATION**

- Use the device for heating when the outdoor temperature is under 21°C. When it is too warm (over 21°C), the heating function may not work in order to protect the device.
- In order to keep reliability of the device, please use this device above -15°C of the outdoor temperature.

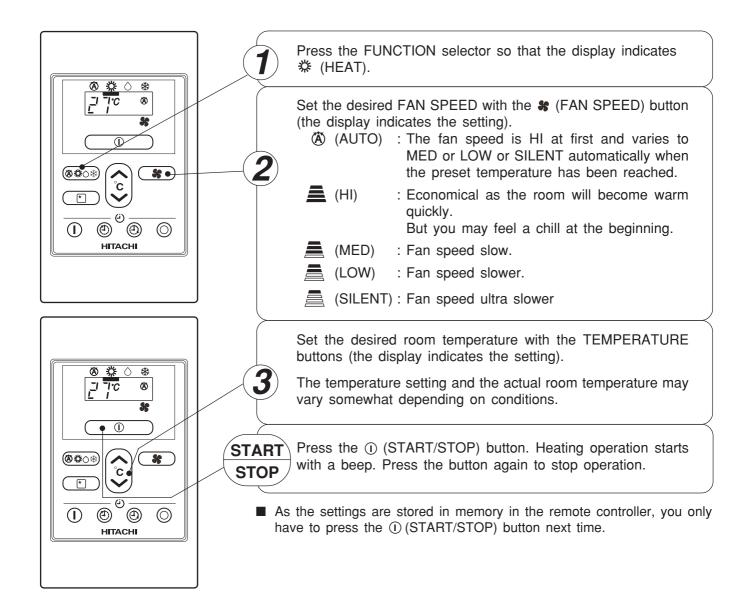

## **DEHUMIDIFYING OPERATION**

Use the device for dehumidifying when the room temperature is over 16°C. When it is under 15°C, the dehumidifying function will not work.

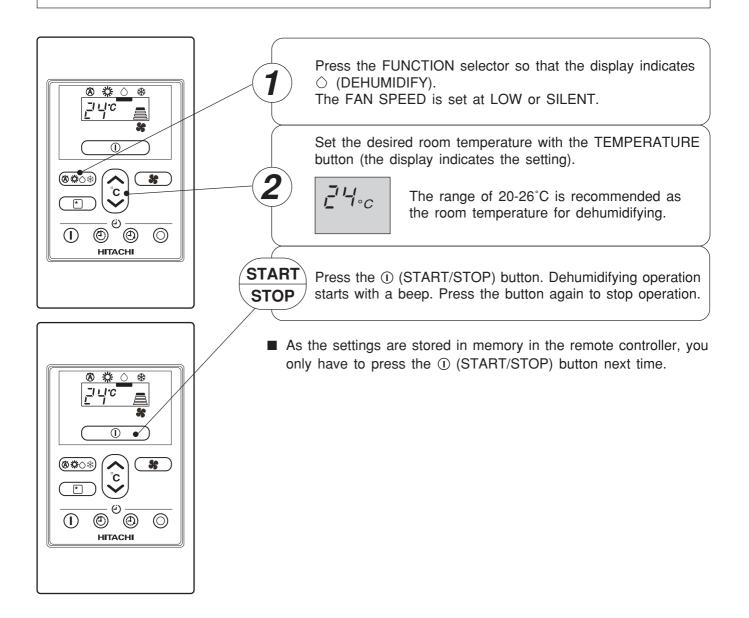


#### **■** Dehumidifying Function

When the room temperature is higher than the temperature setting: The device will dehumidify the room, reducing the room temperature to the preset level.

When the room temperature is lower than the temperature setting: Dehumidifying will be performed at the temperature setting slightly lower than the current room temperature, regardless of the temperature setting. The function will stop (the indoor unit will stop emitting air) as soon as the room temperature becomes lower than the setting temperature.

## **COOLING OPERATION**

Use the device for cooling when the outdoor temperature is  $-10 \sim 43$  °C. If indoor humidity is very high (80%), some dew may form on the air outlet grille of the indoor unit.

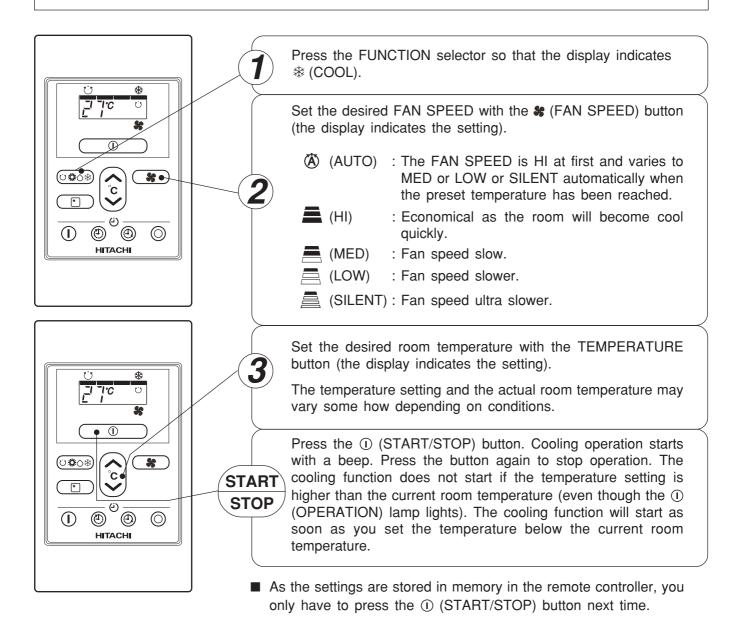

## TIMER RESERVATION

■ ON Timer and OFF Timer are available.

#### **OFF Timer Reservation**

# 

- Select the OFF TIME by pressing the (OFF) Button.
- Setting time will change according to the below sequence when you press the button.



 The value change quicker if you keep pressing the button.

# 2 Press the () (Reserve) button

- OFF TIMER reserved with a signal received sound "beep".
- The O (OFF) Mark starts lighting instead of blinking.

#### **ON Timer Reservation**

# 

- Select the ON TIMER by pressing the (ON) Button.
- At the beginning of setting, time 6 hours was set.
- Setting time will change according to the below sequence.



 The value change quicker if you keep pressing the button.


# 2 Press the ① (Reserve) button


- ON TIMER reserved with a signal received sound "beep".
- The I (ON) Mark starts lighting instead of blinking.

## **CANCELLATION of Timer Reservation**


# **1** Press the **○** (Cancel) button


 As the time settings are stored in remote controller memory, you only have to press the (I) (Reserve) button in order to use the same setting next time. Operation stop at setting time

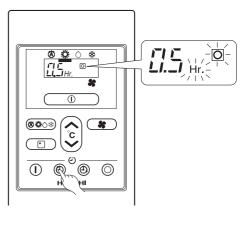

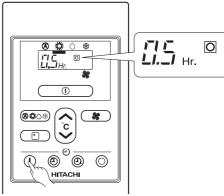


Operation will start for setting temperature at setting time (The starting time may different depend on the room temperature and set temperature).

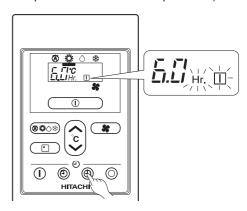

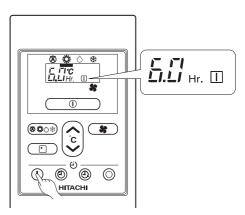

## HOW TO SET THE SLEEP TIMER

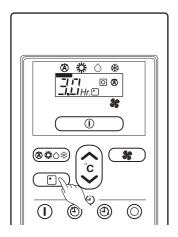

Mode	Indication
Sleep timer	1 hour → 2 hours → 3 hours → 7 hours → Sleep timer off ←

**Sleep Timer:** The device will continue working for the designated number of hours and then turn off.

Press the SLEEP button, indoor unit will produce a beep.

The timer information will be displayed on the remote controller.

Example: Setting 3 hours sleep time.

#### **How to Cancel Reservation**

Press the  $\bigcirc$  (CANCEL) button. The  $\bigcirc$  (RESERVED) sign goes out with a beep.

# **Explanation of the sleep timer**

The device will control the FAN SPEED and room temperature automatically so as to be quiet and good for people's health.

## **NOTE**

- If you set the sleep timer after the off or on-timer has been set, the sleep timer becomes effective instead of the off or on-timer set earlier.
- You can not set other timer during sleep timer operation.
- After sleep timer time is up and when press sleep button again, the sleep timer will be set as last setting.
- Sleep timer effective only once.

When you do not use the room air conditioner, set the circuit breaker to "OFF".

## HOW TO USE THE AIR CONDITIONER EFFECTIVELY

- 1. An average room temperature setting is probably the best for you as well as being economical.
  - Excessive cooling or heating is not recommended for health reasons. High electricity bills may also result.
  - Close the curtains or blinds to prevent heat from flowing into or escaping the room as well as to make more effective use of electricity.



2. At intervals, the doors and windows should be opened to let fresh air in.



Make sure the room is ventilated when operating the air conditioner at the same time as other heating appliances.



3. Using the timer is recommended before going to sleep or going out.



- 4. The following must never be used for cleaning the indoor and outdoor units.
  - Benzine, thinner and scrub can damage plastic surfaces or coating.
  - Hot water above 40°C can shrink the filter and deform plastic parts.



- 5. Do not block the air intake and air outlet.
  - Do not block the air outlets and intakes of the indoor and outdoor units with curtains or other obstacles which could degrade air conditioner performance and cause unit failure.


## **Suitable Room Temperature**



## Warning

Freezing temperature is bad for health and a waste of electric power.

## Install curtain or blinds

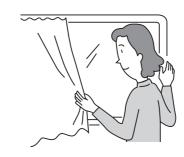

It is possible to reduce heat entering the room through windows.

#### **Ventilation**

#### **A** Caution

Do not close the room for a long period of time. Occasionally open the door and windows

to allow the entrance of fresh air.



## **Effective Usage Of Timer**

At night, please use the "OFF or ON timer operation mode", together with your wake up time in the morning. This will enable you to enjoy a comfortable room temperature. Please use the timer effectively.



## Do Not Forget To Clean The Air Filter

Dusty air filter will reduce the air volume and the cooling efficiency. To prevent from wasting electric energy, please clean the filter every 2 weeks.



## Please Adjust Suitable Temperature For Baby And Children


Please pay attention to the room temperature and air flow direction when operating the unit for baby, children and old folks who have difficulty in movement.



## The Air Conditioner And The Heat Source In The Room


## **A** Caution

If the amount of heat in the room is above the cooling capability of the air conditioner (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

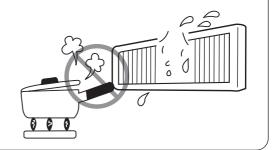

## **Not Operating For A Long Time**

When the indoor unit is not to be used for a long period of time, please switch off the power from the mains. If the power from mains remains "ON", the indoor unit still consumes about 8W in the operation control circuit even if it is in "OFF" mode.

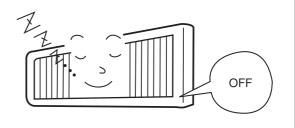


## When Lightning Occurs



#### Warning

To protect the whole unit during lightning, please stop operating the unit and remove the plug from the socket.

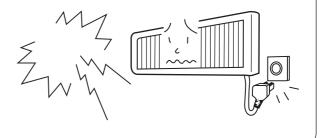


## **Interference From Electrical Products**



#### **A** Caution

To avoid noise interference, please place the indoor unit and its remote controller at least 1m away from electrical products.

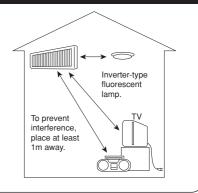

## **MAINTENANCE**

#### **A** WARNING

• Before cleaning, stop unit operation with the remote controller and turn off the circuit breaker.

#### **A** CAUTION

- Do not expose the unit to water as it may cause an electric shock.
- For cleaning inside the air conditioner, consult your sales agent.
- Avoid using detergent when cleaning the heat exchanger of the indoor unit. Unit failure may result.
- When cleaning the heat exchanger with a vacuum cleaner, make sure to wear gloves so as not to injure your hands on the heat exchanger fins.

## 1. AIR FILTER

Clean the air filter, as it removes dust inside the room. Be sure to clean the filter once every two weeks so as not to consume electricity unnecessarily.

#### PROCEDURE \



Pull the filter toward the center until it detached from the holders. Then take it out from holders (refer to diagram).



Remove dust from the filter using a vacuum cleaner. If there is too much dust, use neutral detergent. After using neutral detergent, wash with clean water and dry in the shade.





Install the filters.

Gently insert back the filter into the holders.



- Do not wash with hot water at more than 40°C. The filter may shrink.
- When washing it, shake off moisture completely and dry it in the shade; do not expose it directly to the sun. The filter may shrink.
- Do not operate the air conditioner with the filter removed. Dust may enter the air conditioner and cause trouble.

Filter

Holders

Indoor unit

Pull

PLEASE CHECK THE FOLLOWING POINTS BY QUALIFIED SERVICE PERSONAL EITHER EVERY HALF YEARLY OR YEARLY. CONTACT YOUR SALES AGENT OR SERVICE SHOP.

1		Is the earth line disconnected or broken?
2		Is the mounting frame seriously affected by rust and is the outdoor unit tilted or unstable?
3	Confirm	Is the plug of power line firmly plugged into the socket? (Please ensure no loose contact between them).

## AFTER SALE SERVICE AND WARRANTY

# WHEN ASKING FOR SERVICE, CHECK THE FOLLOWING POINTS.

CONDITION	CHECK THE FOLLOWING POINTS
When it does not operate	<ul> <li>Is the fuse all right?</li> <li>Is the voltage extremely high or low?</li> <li>Is the circuit breaker "ON"?</li> </ul>
When it does not cool well When it does not hot well	<ul> <li>Was the air filter cleaned?</li> <li>Does sunlight fall directly on the outdoor unit?</li> <li>Is the air flow of the outdoor unit obstructed?</li> <li>Are the doors or windows opened, or is there any source of heat in the room?</li> <li>Is the set temperature suitable?</li> </ul>



#### **Notes**

- In quiet or stop operation, the following phenomena may occassionally occur, but they are not abnormal for the operation.
  - (1) Slight flowing noise of refrigerant in the refrigerating cycle.
  - (2) Slight rubbing noise from the fan casing which is cooled and then gradually warmed as operation stops.
- The odor will possibly be emitted from the room air conditioner because the various odor, emitted by smoke, foodstuffs, cosmetics and so on, sticks to it. So the air filter and the evaporator regularly must be cleaned to reduce the odor.
- Please contact your sales agent immediately if the air conditioner still fails to operate normally after the above inspections. Inform your agent of the model of your unit, production number, date of installation. Please also inform him regarding the fault.
- Power supply shall be connected at the rated voltage, otherwise electronic component of the unit will be broken or could not reach the specified capacity.

Please note:

On switching on the equipment, particularly when the room light is dimmed, a slight brightness fluctuation may occur. This is of no consequence.

The conditions of the local Power Supply Companies are to be observed.

#### Note

**MEMO** 


 Avoid to use the room air conditioner for cooling operation when the outside temperature is below 21°C (70°F).


The recommended maximum and minimum operating temperatures of the hot and cold sides should be as below:


		Coo	ling	Heating	
		Minimum	Maximum	Minimum	Maximum
Indoor	Dry bulb °C	21	32	20	27
	Wet bulb °C	15	23	12	19
Outdoor	Dry bulb °C	21	43	2	21
	Wet bulb °C	15	26	1	15


## CONSTRUCTION AND DIMENSIONAL DIAGRAM FOR INDOOR

MODEL RAD-18NH7A, RAD-25NH7A, RAD-35NH7A, RAD-50NH7A\*

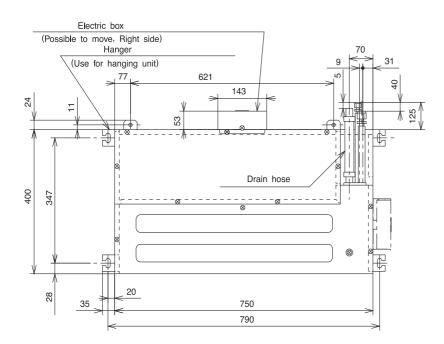


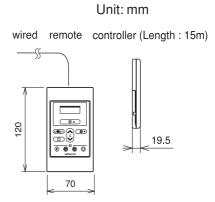

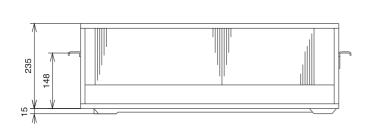

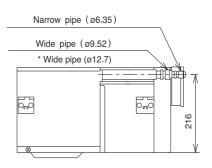

#### BACK SUCTION

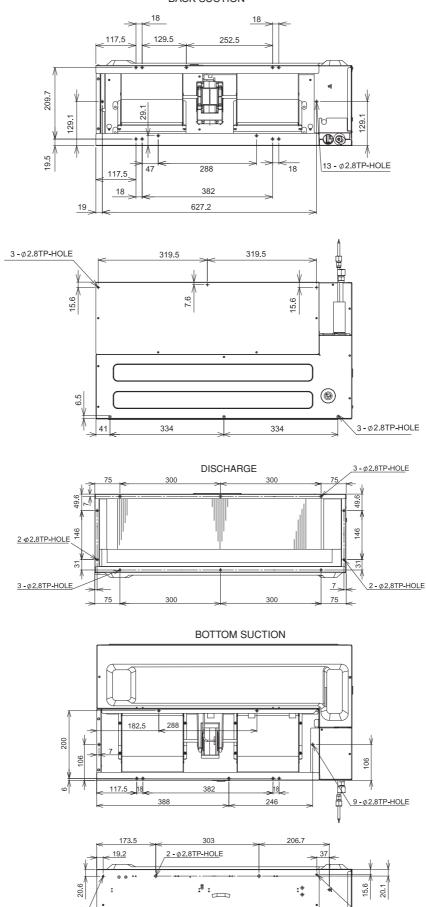



#### Cautions:

1. Use insulated pipes for both large and small diameters.

## CONSTRUCTION AND DIMENSIONAL DIAGRAM FOR OUTDOOR

MODEL RAC-25NH5, RAC-35NH5

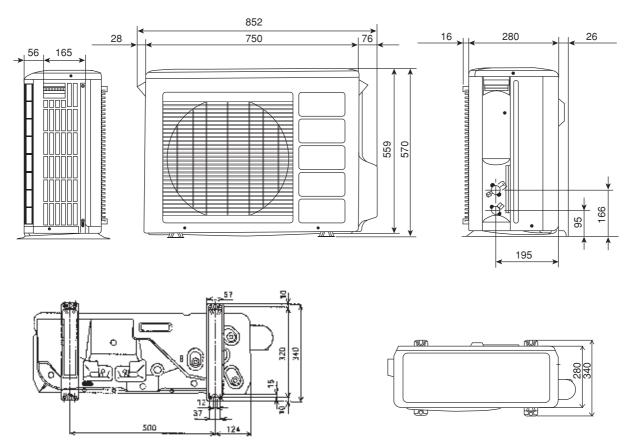

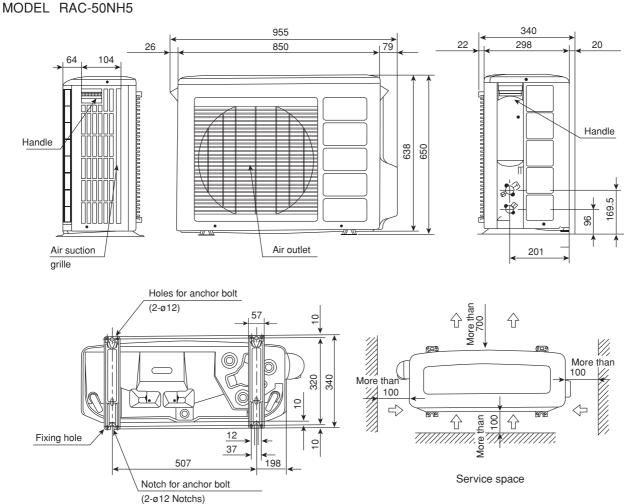

## MAIN PARTS COMPONENT

#### **THERMOSTAT**

Thermostat Specifications

MODEL			RAD-18NH7A, RAD-25NH7A, RAD-35NH7A, RAD-50NH7A		
THERMOSTAT MODEL			IC	;	
OPERATION MODE			COOL	HEAT	
	INDICATION	ON	14.9 (59.3)	20.4 (68.8)	
TEMPERATURE °C (°F)	16	OFF	14.3 (58.3)	21.0 (69.1)	
	INDICATION	ON	22.9 (73.7)	28.4 (83.1)	
	24	OFF	22.3 (72.7)	29.0 (84.1)	
	INDICATION	ON	30.9 (88.1)	36.4 (97.7)	
	32	OFF	30.3 (87.1)	37.0 (98.8)	

#### **FAN MOTOR**

#### Fan Motor Specifications

MODEL	RAD-18NH7A, RAD-25NH7A, RAD-35NH7A, RAD-50NH7A RAC-25NH5, RAC-35NH5, RAC-35NH	
POWER SOURCE	DC: 0 ~ 35V	DC360V
OUTPUT	20W	40W
CONNECTION	0~35V YEL M	360V

BLU : BLUE YEL : YELLOW BRN : BROWN WHT : WHITE


GRY: GRAY ORN: ORANGE GRN: GREEN RED: RED

BLK : BLACK PNK : PINK VIO : VIOLET

#### **COMPRESSOR MOTOR**

#### Compressor Motor Specifications

MODEL		RAC-25NH5. RAC-35NH5	RAC-50NH5	
COMPRESSOR MODEL		JU1012D	JU1013D	
PHASE		SINGLE		
RATED VOLTAGE		AC 220 ~ 24	.0 V	
RATED FREQUENCY		50 Hz		
POLE NUMBER		4		
CONNECTION	(U) O WHITE  M M M M M M M M M M M M M M M M M M		M	
RESISTANCE VALUE	20°C (68°F)	2M = 1.05	5	
$(\Omega)$	(Ω) 75°C (167°F)		2M = 1.28	

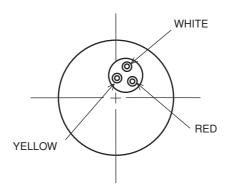

## **ACAUTION**

When the refrigerating cycle has been operated for a long time with the capillary tubes clogged or crushed or with too little refrigerant, check the color of the refrigerating machine oil inside the compressor. If the color has been changed conspicuously, replace the compressor.

## **WIRING DIAGRAM**


MODEL RAD-18NH7A, RAD-25NH7A, RAD-35NH7A, RAD-50NH7A RAC-25NH5, RAC-35NH5, RAC-50NH5

BLU : BLUE YEL : YELLOW BRN : BROWN WHT : WHITE GRY : GRAY ORN : ORANGE GRN : GREEN RED : RED

GRY: GRAY ORN: ORANGE GRN: GREEN RED: RED


OUTDOOR UNIT

BLK: BLACK PNK: PINK VIOLET

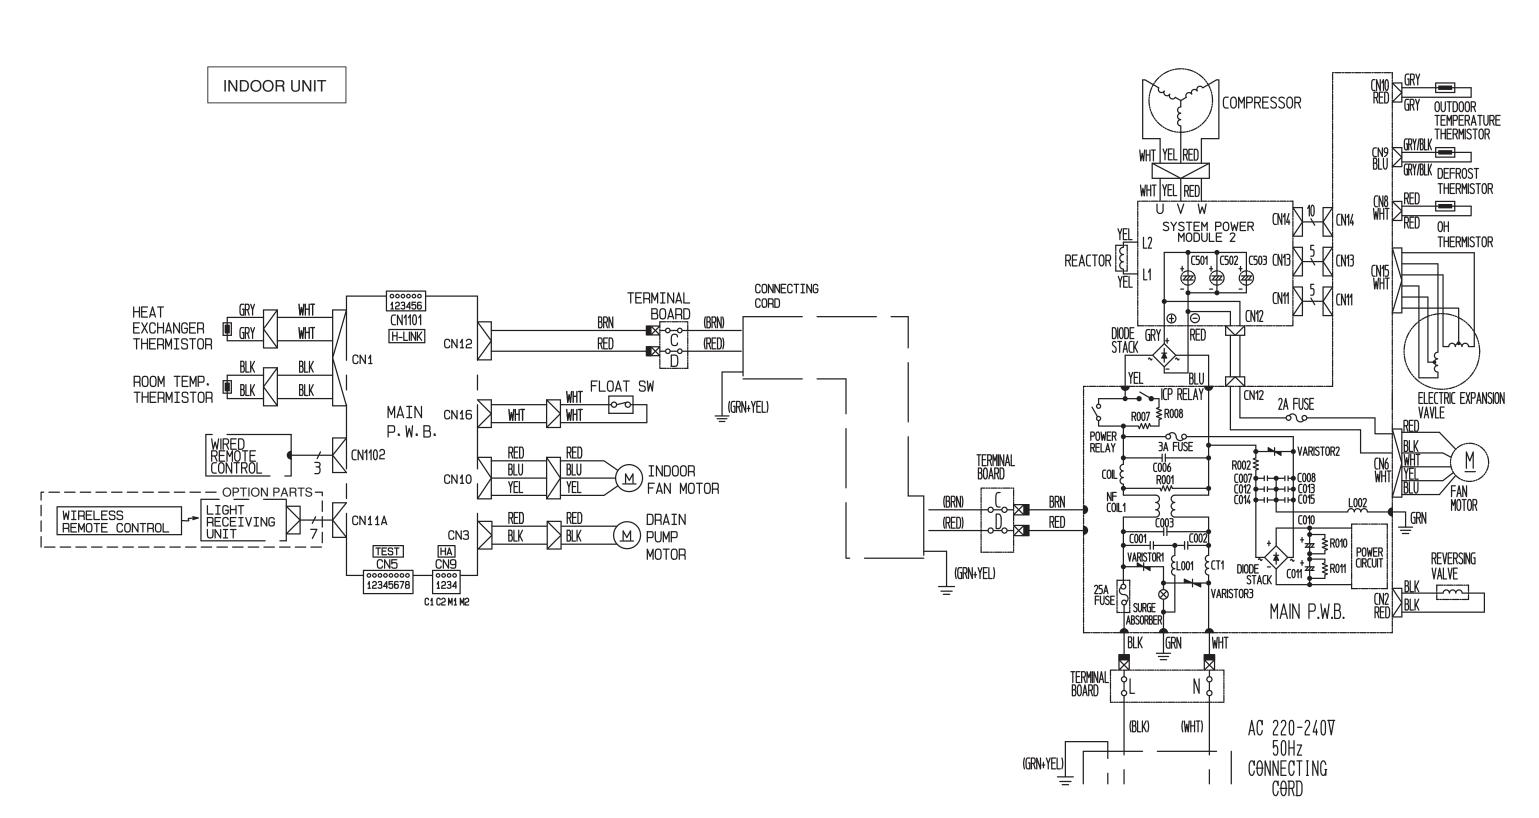

## **CIRCUIT DIAGRAM**

Wired Remote Control

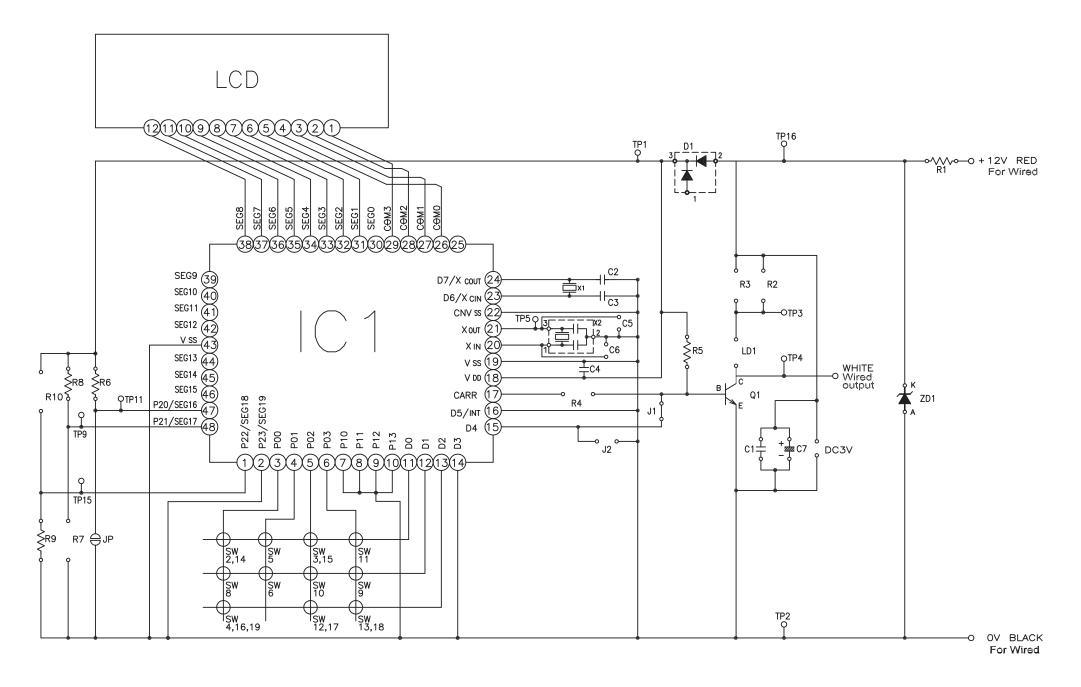

## IC

Symbol	Specification	Form
C1	M34552G8 <b>HFP···OTPMICON</b>	_
C1	M34552M4H-116FP···MASKMICON	

#### LCD

Symbol	Specification	Form
LCD	LCD-53WA	Н

#### Diode

Symbol	Specification	Form
D1	RB425D	С

#### Zenner diode

Symbol	Specification	Form
ZD1	HZK3BTR	С

## D-Capacitor

Symbol	Specification	Form
C7	100μF, 6.3V	F

#### Transistor

Symbol	Specification	Forr
Q1	2SD1328S-TX	С

Size of Resistor and C-Capacitor

3 · · · 3216 Size

2 · · · 2125 Size

1 · · · 1608 Size

## Resonators

Symbol	Specification	Form
X1	C-R002RX 32.768kHz	Н
X2	CSTCC3.64MG0H6 3.64MHz	F

## Resistor

Symbol	Specification	Size	Forn
R1	1.5kΩ,1/8W	2	O
R5	3kΩ, 1/16W	1	С
R6	100k <sup>Q</sup> ,1/16W	1	С
R8	10kΩ, 1/16W	1	С
R9	10kΩ, 1/16W	1	С

## Chip-jumper


Symbol	Specification	Size	For
J1	0Ω	1	С


#### C-Capacitor

ymbol	Specification	Characteristics	Size	Form
C1	1 <sub>4</sub> F,16V	F	2	С
C2	22pF,50V	CH	2	С
C3	22pF,50V	CH	2	С
C4	1	F	2	С


## Table1 Key-matrix table

abiet ttoj titatini tabie									
	P00	P01	P02	P03					
D0	×	0	<b>\$</b>	I					
D1	<b>(D)</b>	<b>©</b>	>	<b>&gt;</b>					
D2	①		*	∅ ♦					

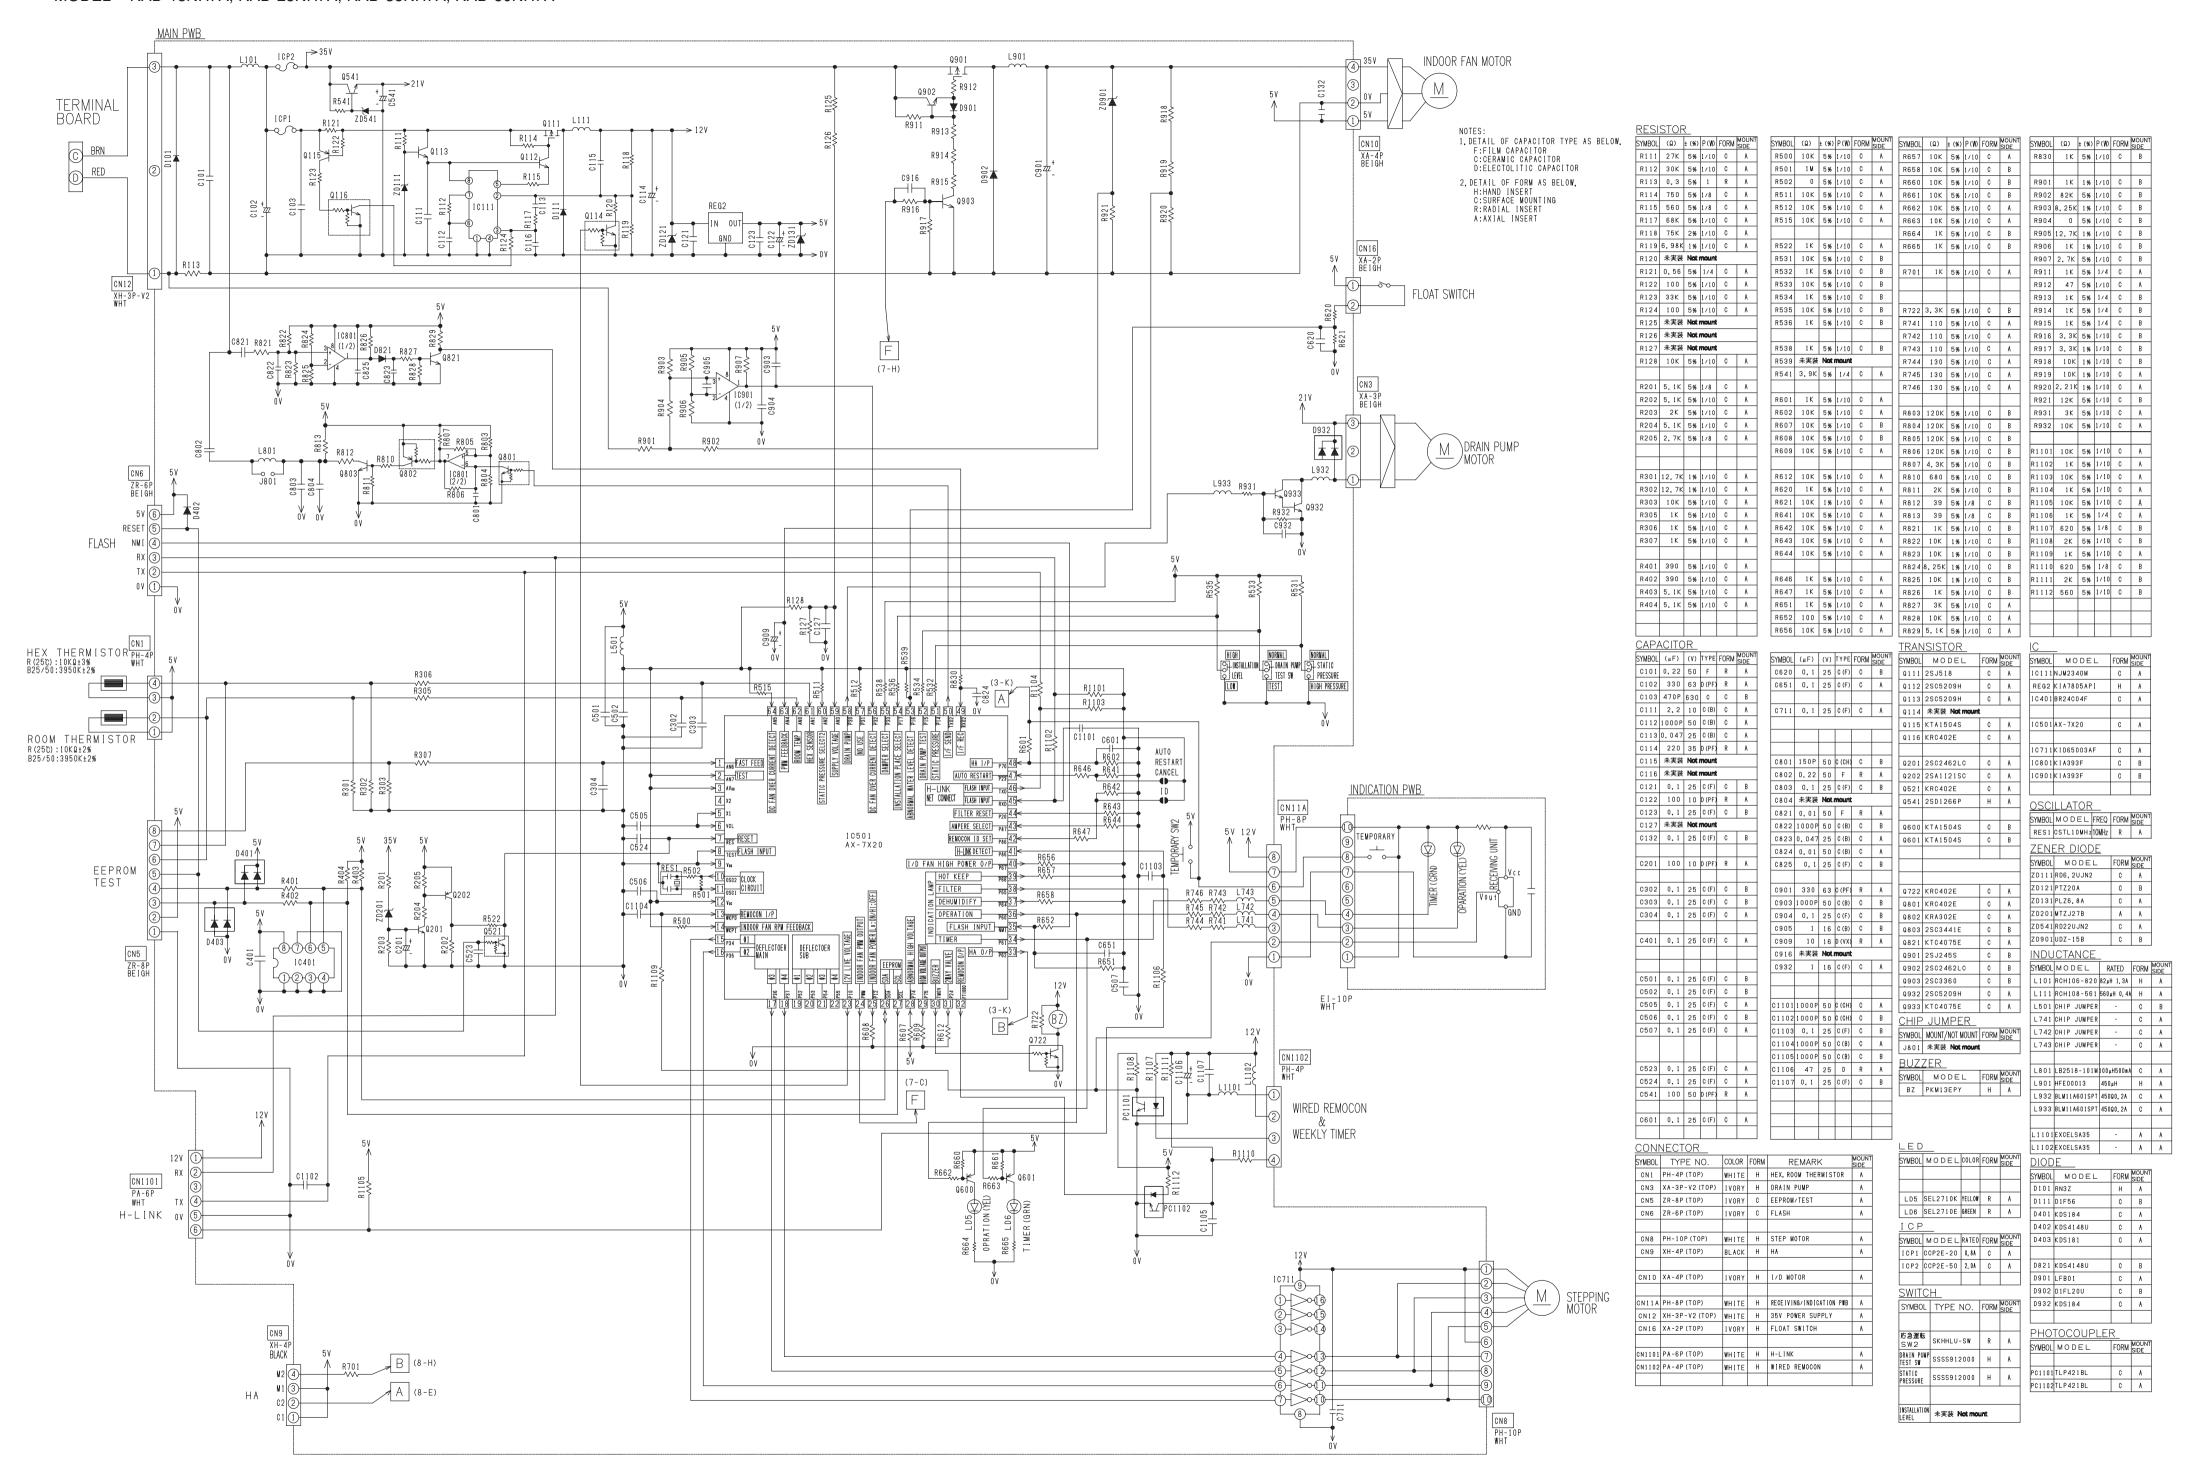

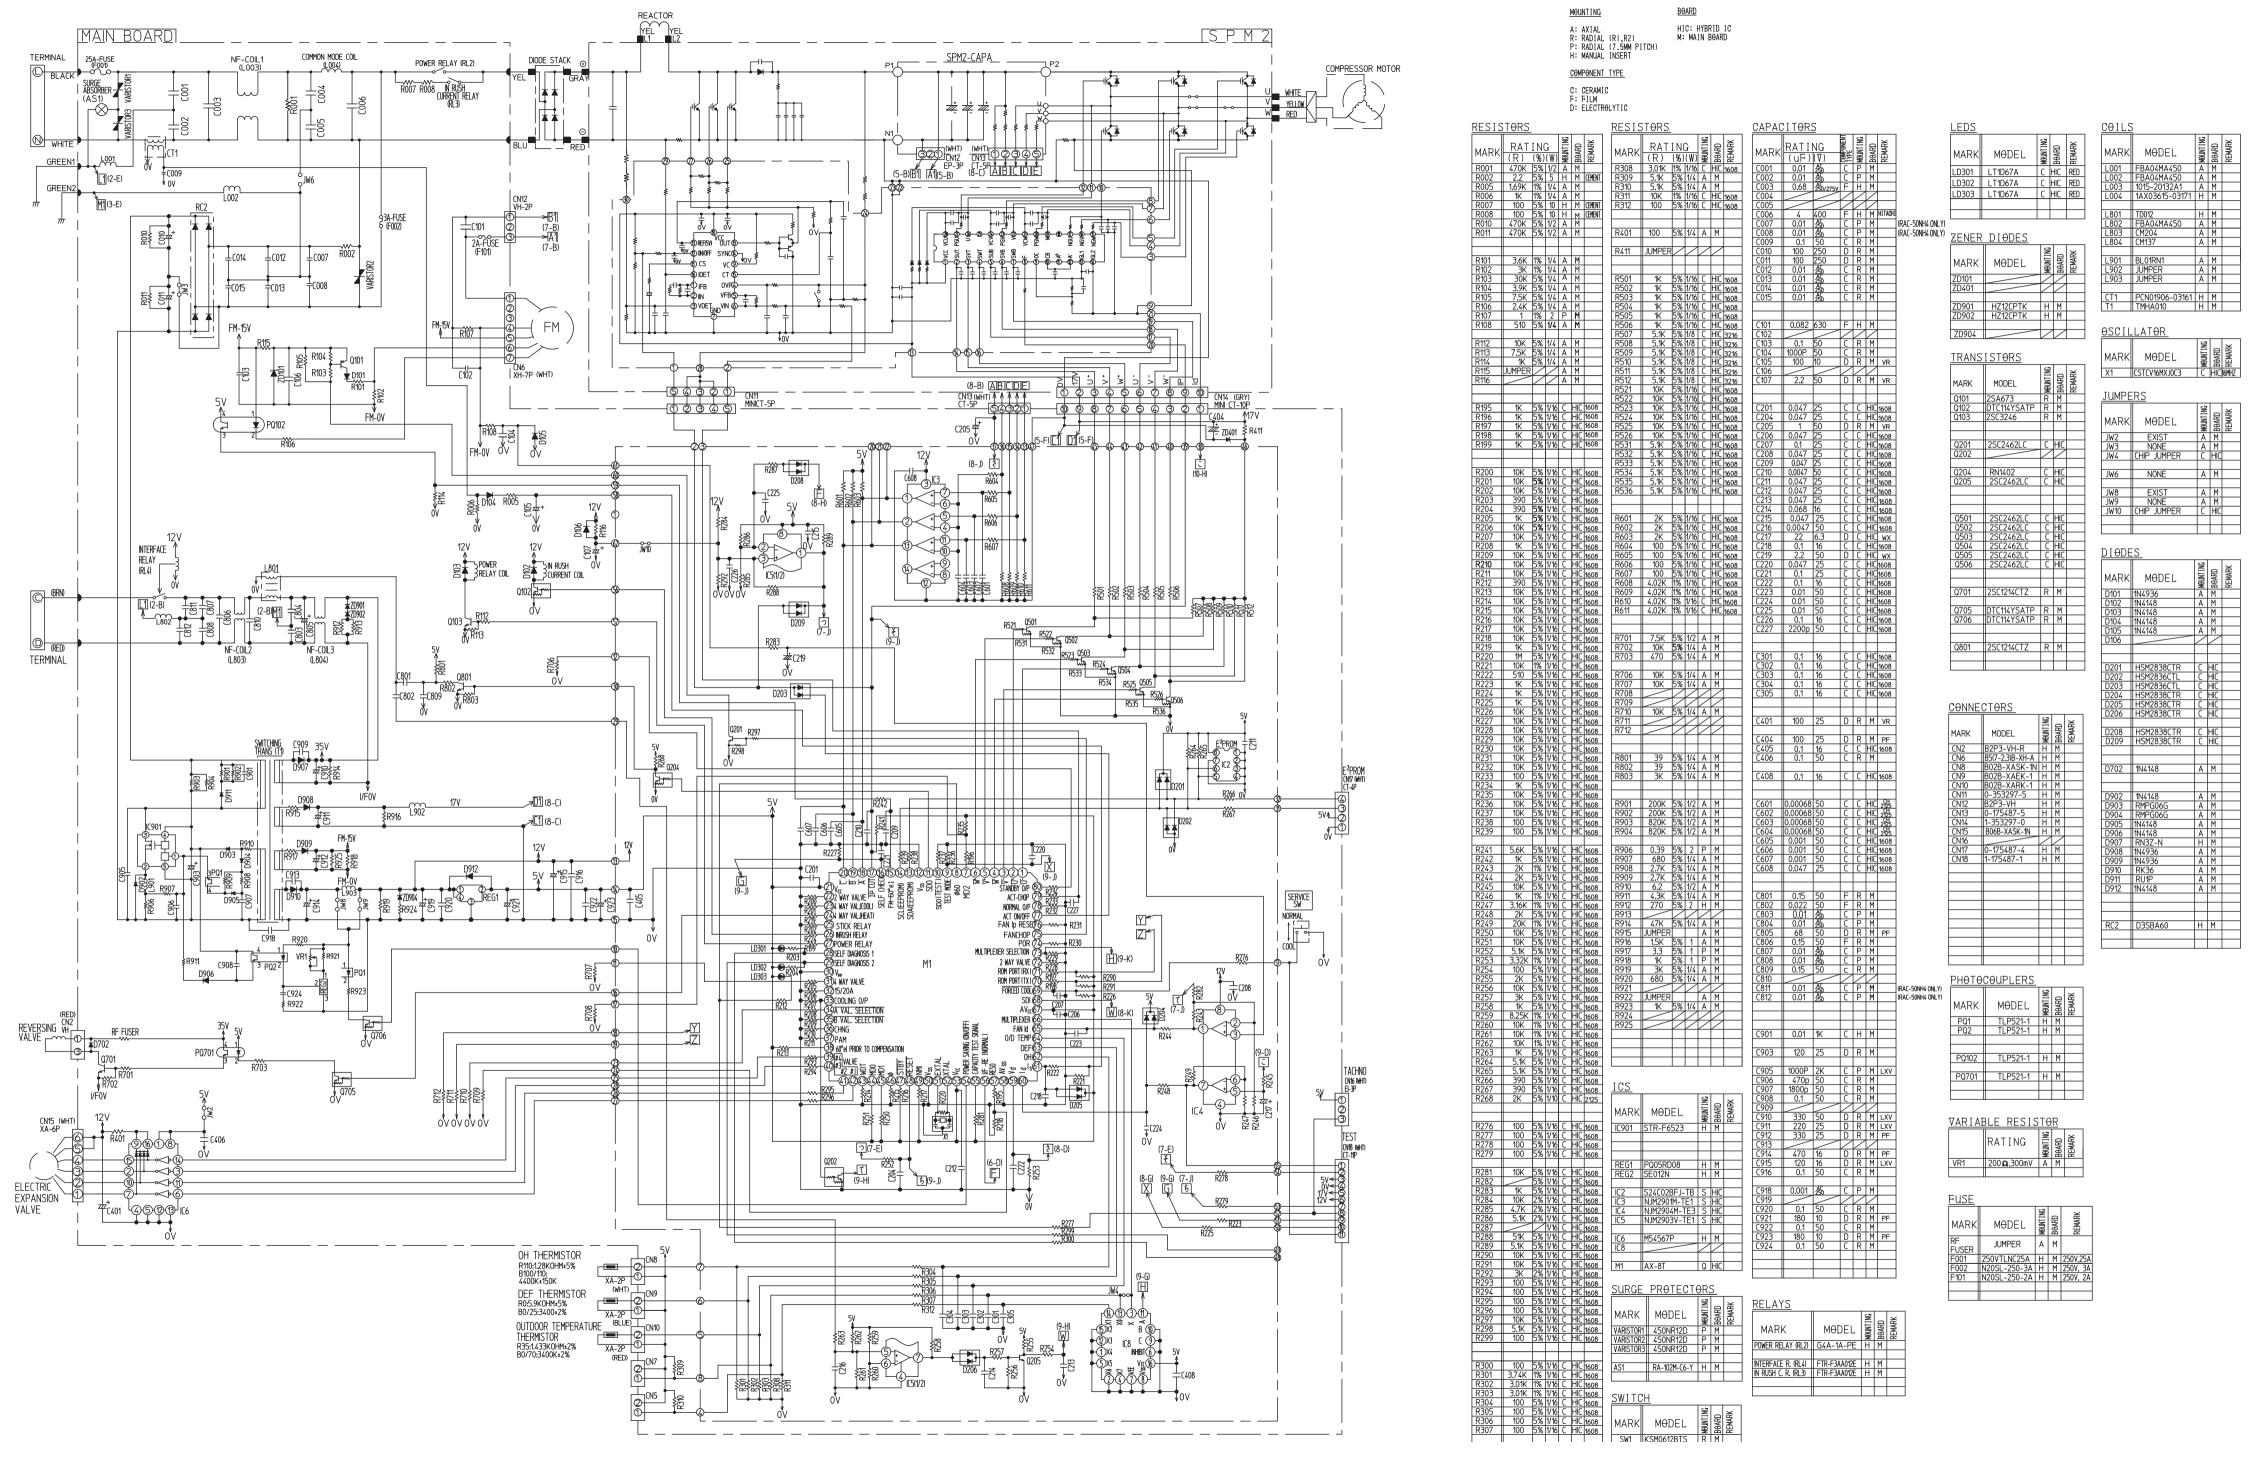

#### **BLOCK DIAGRAM**

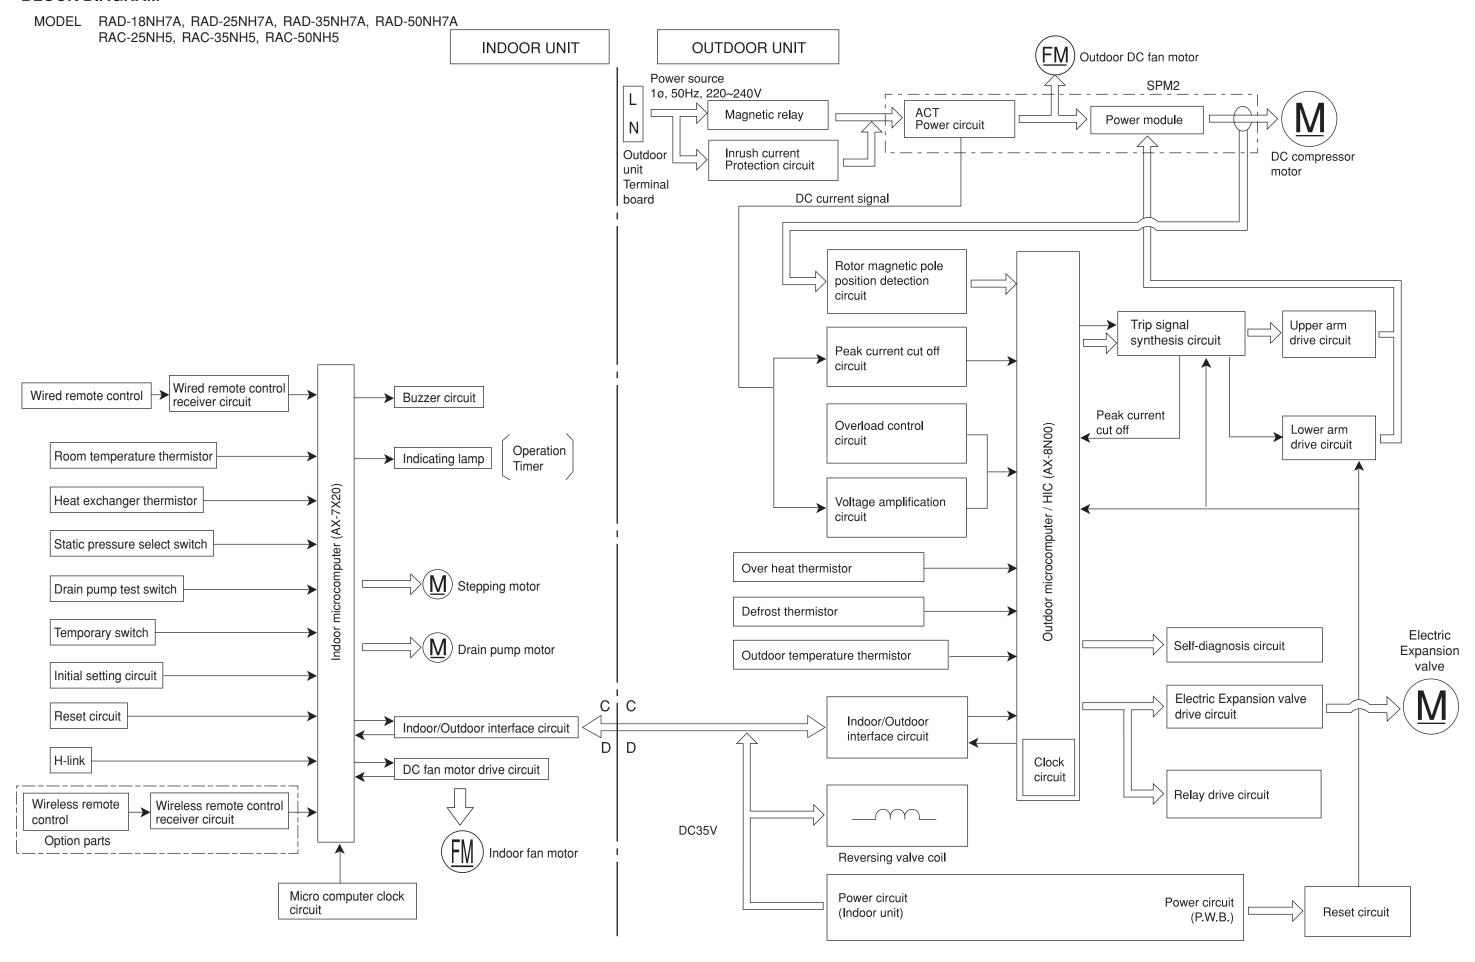


#### MODEL RAD-18NH7A, RAD-25NH7A, RAD-35NH7A, RAD-50NH7A

	Operation mode	Fan	Cooling	Dehumidifying (dehumidifying operation by the function select button only, not including that engaged by the dehumidify button)	Heating	Auto	
	c operation of stop switch			Start/stop switch Operation tamp	Stop Start Stop		
	Off-timer	Start/stop switch Operation tamp Cancel switch Operation temp Timer tamp  Timer memory  (Off-timer during stop)  (Change in reserved time)					
Timer functions	On-timer	Srart/stop switch Reserve switch Cancel switch Operation temp Timer memory  (Change in reserved time)  (On-timer during operation)					
	Off -> On On -> Off timer	Start/stop switch Reserve switch Cancel switch Operation lamp Timer lamp OFF ON ON OFF OFF ON OFF ON ON OFF OFF					
or fan)	Auto		Changes from "Hi" to "Med" or "Lo" depending on room temperature.  Temperature set for cooling  Thermo ludgment Compressor stopped for after operation is started.  1. Runs at "Hi" until first thermo off after operation is started.  2. Runs at "Lo" when thermo is off.	Changes between "Lo" and "Med" depending on the room temperature.  Temperature division Fan speed Division 1 Lo Division 2 Lo Division 3 Med Division 4 Med  1. The indoor fan also stops when the compressor is in stop status.	Set to "ultra-Lo", "Lo", "Med", "Hi", "ultra-Hi" or "stop" depending on the room temperature, time and heat exchange temperature. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C).  When the compressor is running at maximum speed during hot dash or when recovered from defrosting.  In modes other than left  42. 66  37. 66  32. 66  32. 66  32. 66  42. 66  42. 66  42. 66  42. 66  43. 66  44. 66  45. 66  46. 66  47. 66  48. 66  49. 66  40. 66	Operating mode is judged by room temperature and outdoor temperature.  (1) Judging by outdoor temperature  • Operating mode is judged by outdoor temperature. Only when the mode is not restricted by this judgment, the judgment by room temperature in the next paragraph will be performed.  (a) Outdoor temperature ≥ 27°C: Restricted to cooling (b) Outdoor temperature ≤ 16°C: Restricted to heating  (2) Judging by room temperature  Operating mode at start up is judged (initial judgment) (a) Conditions for judgment (any of the followings)  • When auto operation is started after 1 hour has elapsed since the operation was stopped.  • When auto operation is started after the previous manual mode operation.  • When the operating mode is switched to auto while operating at manual mode. (b) Judging method  • Room temperature ≥ 25°C ±3°C: Cooling  • Room temperature ≥ 25°C ±3°C: Heating  * ±3°C is the fine adjustment value from the wireless remote controller.  Judging operating mode change during operation (Continuous judgment)  (a) Conditions for judgment (any of the followings)  • The mode is reviewed at every interval time.	
speed mode (indo	Hi	Operates at "Hi" regardless of the room temperature.	Set to "ultra-Hi" when the compressor runs at maximum speed, and to "Hi" in other modes.	Set to "Hi" in modes other than when the compressor stops.	Set to "ultra-Lo", "Lo", "Med", "Hi", "ultra-Hi" or "stop" depending on the room temperature, and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C).  Set to "ultra-Hi" when the compressor is running at maximum speed during hot dash or when recovered from defrosting.		
		Operates at "Med" regardless of the room temperature.	Same as at left.	Set to "Med" in modes other than when the compressor stops.	Set to "ultra-Lo", "Lo", "Med" or "stop" depending on the room temperature and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C).	When auto operation is started again before 1 hour has elapsed since the operation was stopped.     Undging method     Judge by setting the hysteresis on the final preset temperature.     The final preset temperature is the actually targeted preset temperature which is the sum of the basic preset temperature.	
		Operates at "Lo" regardless of the room temperature.	Same as at left.	Set to "Lo" in modes other than when the compressor stops.	Set to "ultra-Lo", "Lo", or "stop" depending on the room temperature and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C). The fan speed is controlled by the heat exchanger temperature; the overload control is executed as in the following diagram:    Heat exchanger temperature   Heat exchanger temperature	and each type of shift value (e.g. by remote controller, preset temperature correction value, powerful shift value, etc.).  [Currently cooling]  Room temperature ≤ Final preset temperature −3°C Change to heating Room temperature > Final preset temperature −3°C Continue cooling  [Currently heating]  Room temperature ≥ Final preset temperature +2°C Change to cooling Room temperature < Final preset temperature +2°C Continue heating	
	erature controller	Performs only fan operation at the set speed regardless of the room temperature.    Startistop switch   St	See page 47.	See page 51.	See page 53.	Heating Final preset temperature +2°C	
	p operation sleep button ON)	Enters sleep operation after set as on the left.     Action during sleep operation Lo (sleep) operation	• Same as at left • See page 49.	• Same as at left • See page 51.	Same as at left     See page 55.	Same as at left.     Performs the sleep operation of each operation mode.	

Table 1 Mode data file

	RAD-18NH7A	RAD-25NH7A	RAD-35NH7A	RAD-50NH7A	
LABEL NAME	VALUE				
WMAX	4400 min <sup>-1</sup>	4400 min <sup>-1</sup>	5500 min <sup>-1</sup>	5100 min <sup>-1</sup>	
WMAX2	4500 min <sup>-1</sup>	4500 min <sup>-1</sup>	5600 min <sup>-1</sup>	5100 min <sup>-1</sup>	
WSTD	3500 min <sup>-1</sup>	3500 min <sup>-1</sup>	4950 min <sup>-1</sup>	5100 min <sup>-1</sup>	
WBEMAX	3000 min <sup>-1</sup>	2800 min <sup>-1</sup>	2800 min <sup>-1</sup>	3500 min <sup>-1</sup>	
CMAX	2700 min <sup>-1</sup>	2700 min <sup>-1</sup>	4400 min <sup>-1</sup>	5500 min <sup>-1</sup>	
CSTD	2450 min <sup>-1</sup>	2450 min <sup>-1</sup>	4000 min <sup>-1</sup>	5500 min <sup>-1</sup>	
CKYMAX_TY1	2200 min <sup>-1</sup>	2200 min <sup>-1</sup>	3500 min <sup>-1</sup>	3500 min <sup>-1</sup>	
CJKMAX	1800 min <sup>-1</sup>	1800 min <sup>-1</sup>	2800 min <sup>-1</sup>	2700 min <sup>-1</sup>	
CBEMAX	1600 min <sup>-1</sup>	1600 min <sup>-1</sup>	2200 min <sup>-1</sup>	2000 min <sup>-1</sup>	
WMIN	1500 min <sup>-1</sup>	1500 min <sup>-1</sup>	1500 min <sup>-1</sup>	1800 min <sup>-1</sup>	
CMIN	1500 min <sup>-1</sup>	1500 min <sup>-1</sup>	1500 min <sup>-1</sup>	1800 min <sup>-1</sup>	
STARTMC	60 Seconds	60 Seconds	60 Seconds	60 Seconds	
DWNRATEW	80%	80%	80%	80%	
DWNRATEC	80%	80%	80%	80%	
SHIFTW	5.00°C	5.00°C	5.00°C	5.00°C	
SHIFTC	1.66°C	1.66°C	1.66°C	1.66°C	
CLMXTP	30.00°C	30.00°C	30.00°C	30.00°C	
YNEOF	20.00°C	20.00°C	20.00°C	20.00°C	
TEION	0.00°C	0.00°C	0.00°C	0.00°C	
TEIOF	9.00°C	9.00°C	9.00°C	9.00°C	

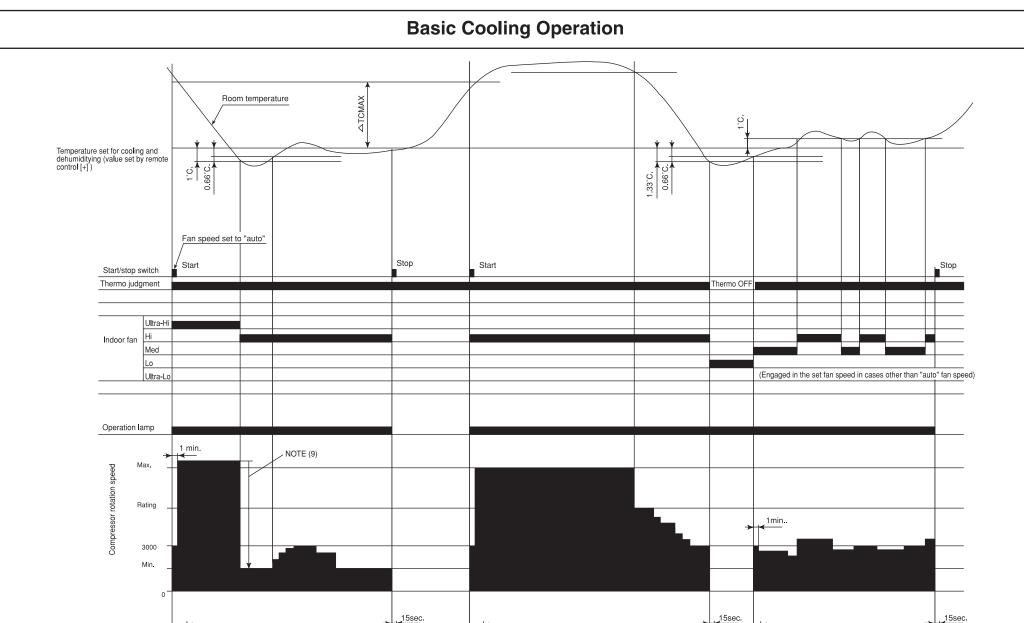

#### Notes:

- (1) Condition for entering into Cool Dashed mode. When fan set to "Hi" or "Auto mode" and temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 7) larger than WMAX.
- (2) Cool Dashed will release when i) a maximum 25 minutes is lapsed and ii) room temperature is lower than set temperature –3°C (thermo off) and iii) when room temperature has achieved setting temperature –1°C then maximum Cool Dashed time will be revised to 20 minutes. And iv) indoor fan is set to Lo and Med fan mode and v) change operation mode.
- 3) During Cool Dashed operation, thermo off temperature is set temperature (with shift value) -3°C. After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum "ON" time and "OFF" time is 3 minutes.

Outdoor fan

Reversing valve (heating "on" mode)


- (5) During normal cooling mode, compressor maximum rpm CMAX will maintain for 60 minutes if indoor temperature is lower than CLMXTP. No time constrain if indoor temperature is higher than CLMXTP.
- (6) When fan is set to "Hi", compressor rpm will be limited to CKYMAX-TY1.
- (7) When fan is set to "Med", compressor rpm will be limited to CJKMAX.
- (8) When fan is set to "Lo", compressor rpm will be limited to CBEMAX.
- (9) During Cool Dashed, when room temperature reaches set temperature −1°C compressor rpm is actual rpm x DWNRATEC.

Table 2 ∆TCMAX


Temperature	Calculated
difference	compressor rpm
1.66	2265 min <sup>-1</sup>
2	2435 min <sup>-1</sup>
2.33	2600 min <sup>-1</sup>
2.66	2765 min <sup>-1</sup>
3	2935 min <sup>-1</sup>
3.33	3100 min <sup>-1</sup>
3.66	3265 min <sup>-1</sup>
4	3435 min <sup>-1</sup>
4.33	3600 min <sup>-1</sup>
4.66	3765 min <sup>-1</sup>
5	3935 min <sup>-1</sup>
5.33	4100 min <sup>-1</sup>
5.66	4265 min <sup>-1</sup>
6	4435 min <sup>-1</sup>
6.33	4600 min <sup>-1</sup>
6.66	4765 min <sup>-1</sup>
7	4935 min <sup>-1</sup>
7.33	5100 min <sup>-1</sup>
7.66	5265 min <sup>-1</sup>
8	5435 min <sup>-1</sup>
8.33	5600 min <sup>-1</sup>
8.66	5765 min <sup>-1</sup>
9	5935 min <sup>-1</sup>
9.33	6100 min <sup>-1</sup>
9.66	6265 min <sup>-1</sup>
10	6435 min <sup>-1</sup>
10.33	6600 min <sup>-1</sup>
10.66	6765 min <sup>-1</sup>
11	6935 min <sup>-1</sup>

#### Note:

1. See the data in Table 1 on page 43 for each constant in capital letters in the diagrams.

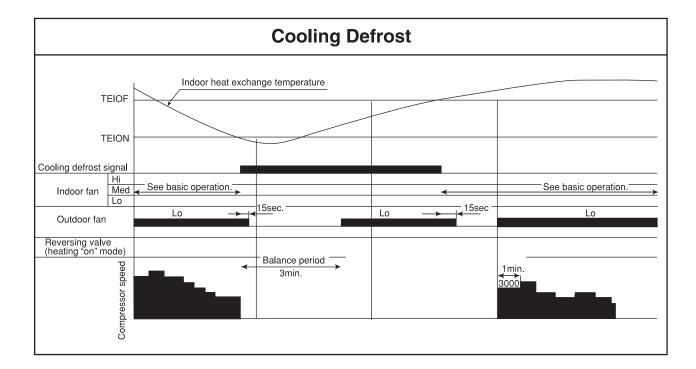

# **Cooling Sleep Operation**

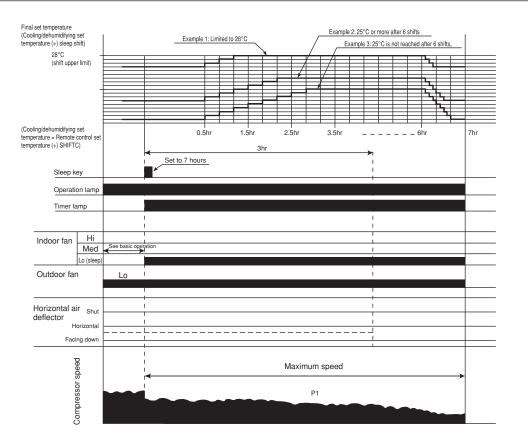


#### Notes:

- (1) The sleep operation starts when the sleep key is pressed.
- (2) When the sleep key is set, the maximum compressor speed is limited, and the indoor fan is set to "sleep Lo".
- (3) 30 minutes after the sleep key is set, the sleep shift of temperature starts, and upper shift is made at least 6 times. If 25°C is not reached after 6 shifts, shifts repeat unit 25°C is reached.
- (4) The sleep shift upper value of set temperature is 28°C.
- (5) After 6 hours, a shift down to the initial set temperature is made at a rate of 0.33°C/5 min.
- (6) If the operation mode is changed during sleep operation, the set temperature is cleared, and shift starts from the point when switching is made.
- 7) The indoor fan speed does not change even when the fan speed mode is changed.
- (8) When operation is stopped during sleep operation, the set temperature when stopped, as well as the time, continue to be counted.
- (9) If the set lime is changed during sleep operation, all data including set temperature, time, etc. is cleared and restarted.
- (10) If sleep operation is canceled by the cancel key or sleep key, all data is cleared.


**– 45 –** 

# **Dehumidifying**

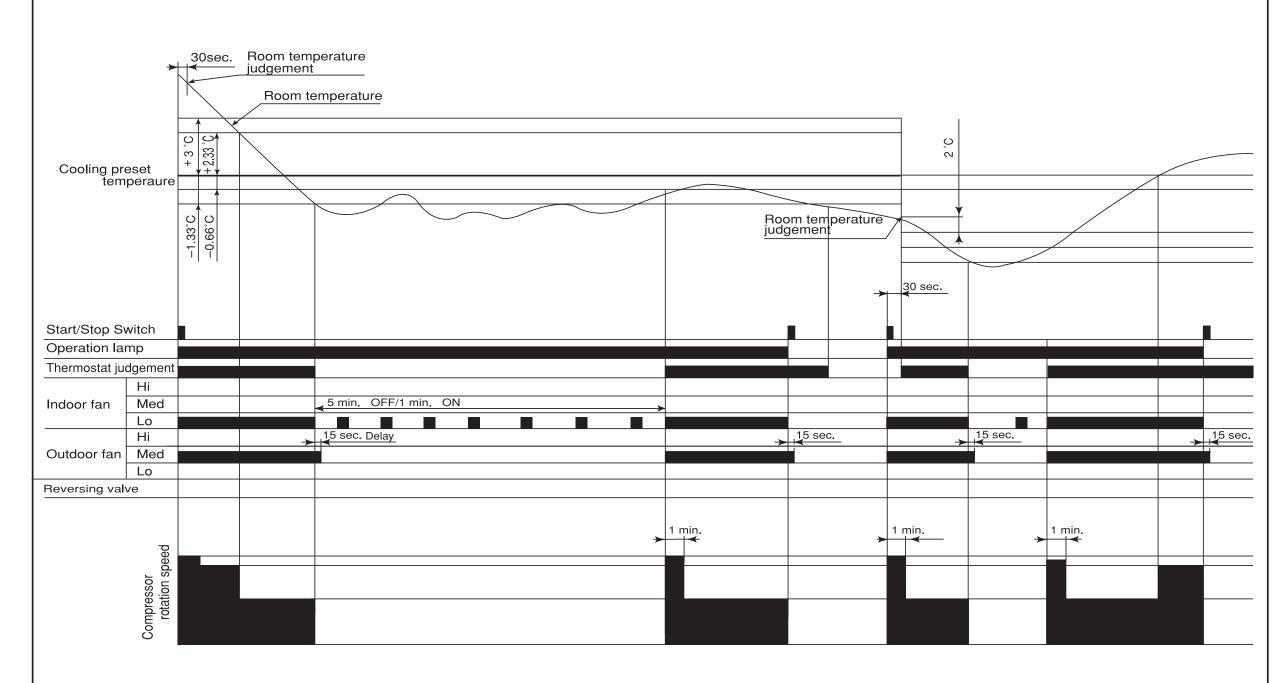

- (1) If the room temperature is (cooling preset temperature) (1.33°C) or less after 30 seconds from starting the operation, the operation is done assuming as the preset temperature = (room temperature at the time) (2°C).
   (2) The indoor fan is operated in the "Lo" mode. During thermo OFF indoor fan will be OFF for 5 minutes and ON for 1 minute.
   (3) When the operation is started by the themostat turning ON, the start of the indoor fan is delayed 32 seconds after the start of compressor operation.
   (4) The compressor is operated forcedly for 3 minutes after operation is started.
   (5) The minimum ON time and OFF time of the compressor are 3 minutes.

# **Basic Heating Operation**

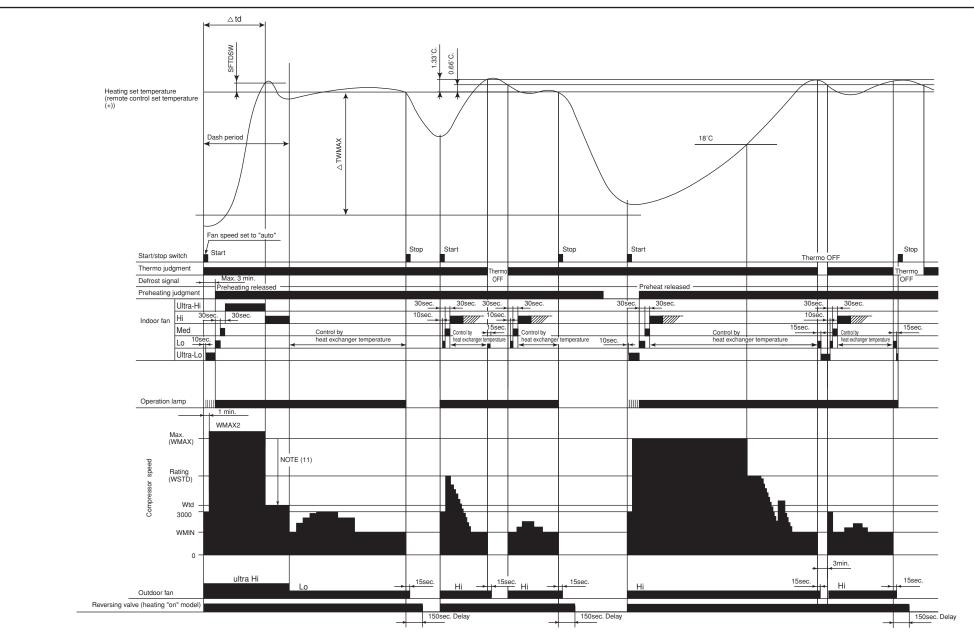

# Notes:

- (1) Condition for entering into Hot Dashed mode. When fan set to "Hi" or "Auto mode" and i) Indoor temperature is lower than 18°C, and ii) outdoor temperature is lower than 10°C, and iii) Temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 3) larger than WMAX.
- (2) Hot Dashed will release when i) Room temperature has achieved the set temperature + SFTDSW. ii) Thermo off.
- (3) During Hot Dashed operation, thermo off temperature is set temperature (with shift value) +3°C. After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum "ON" time and "OFF" time is 3 minutes.
- (5) During normal heating mode, compressor maximum rpm WMAX will maintain for 120 minutes if indoor temperature is higher than 18°C. No time limit constrain if indoor temperature is lower than 18°C and outdoor temperature is lower than 2°C.
- (6) During Hotkeep or Defrost mode, indoor operation lamp will blink at interval of 3 seconds "ON" and 0.5 second "OFF".
- (7) When heating mode starts, it will enter into Hotkeep mode if indoor heat exchanger temperature is lower than YNEOF + 0.33°C.
- (8) When fan is set to "Med" or "Lo", compressor rpm will be limited to WBEMAX.
- (9) In "Ultra-Lo" fan mode, if indoor temperature is lower than 18°C, indoor fan will stop. If indoor temperature is higher than 18°C + 0.33°C, fan will continue in "Ultra-Lo" mode.

  During Hotkeep or Defrost mode, fan will continue in "Ultra-Lo" mode.
- (10) During Hot Dashed or outdoor temperature is lower than −5°C, compressor rpm is WMAX2.
- (11) During Hot Dashed, when room temperature reaches set temperature + SFTDSW compressor rpm is actual rpm x DWNRATEW.

Table 3 ∆TWMAX

Temperature	Calculated
difference	compressor rpm
1.66	1965 min <sup>-1</sup>
2	2135 min <sup>-1</sup>
2.33	2300 min <sup>-1</sup>
2.66	2465 min <sup>-1</sup>
3	2635 min <sup>-1</sup>
3.33	2800 min <sup>-1</sup>
3.66	2965 min <sup>-1</sup>
4	3135 min <sup>-1</sup>
4.33	3300 min <sup>-1</sup>
4.66	3465 min <sup>-1</sup>
5	3635 min <sup>-1</sup>
5.33	3800 min <sup>-1</sup>
5.66	3965 min <sup>-1</sup>
6	4135 min <sup>-1</sup>
6.33	4300 min <sup>-1</sup>
6.66	4465 min <sup>-1</sup>
7	4635 min <sup>-1</sup>
7.33	4800 min <sup>-1</sup>
7.66	4965 min <sup>-1</sup>
8	5135 min <sup>-1</sup>
8.33	5300 min <sup>-1</sup>
8.66	5465 min <sup>-1</sup>
9	5635 min <sup>-1</sup>
9.33	5800 min <sup>-1</sup>
9.66	5965 min <sup>-1</sup>
10	6135 min <sup>-1</sup>
10.33	6300 min <sup>-1</sup>
10.66	6465 min <sup>-1</sup>
11	6635 min <sup>-1</sup>


#### Notes:

1. See the data in Table 1 on page 43 for each constant in capital letters in the diagrams.


## **Reversing Valve Defrosting** Auto fresh defrosting 15' or more Over defrosting inhibit period 30sec. Start/Stop Switch Set to 'Hi" Defrost signal Preheating judgment Med Indoor fan Ultra-Lo Outdoor fan Operation lamp Reversing valve (heating "on" mode) Reverse cycle period Reverse cycle period period TDF 431 3min. Max. 12min. Max. 411 412 413 TDF421 1 min 1min WMAX (WMAX2) 3000 WMIN

#### Notes:

- (1) The defrosting inhibit period is set as shown in the diagram below. When defrosting has finished once, the inhibit period is newly set, based on the outdoor temperature when the compressor was started. During this period, the defrost signal is not accepted.
- (2) If the difference between the room and outdoor temperature is large when defrosting is finished, the maximum compressor speed (WMAX) or (WMAX2) can be continued for 120 minutes maximum.
- (3) The defrosting period is 12 minutes maximum.
- (4) When operation is stopped during defrosting, it is switched to auto refresh defrosting.
- (5) Auto refresh defrosting cannot be engaged within 15 minutes after operation is started or defrosting is finished.

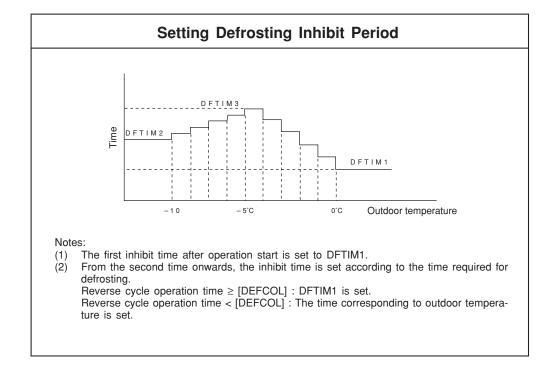



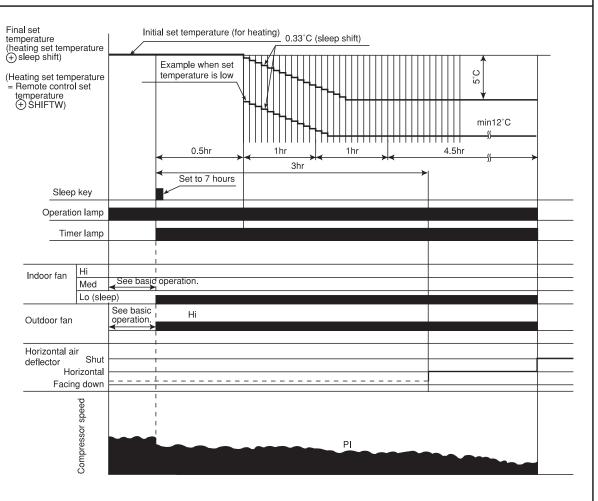

#### Notes

- (1) The sleep operation starts when the sleep key is pressed.
- 2) When the sleep key is set, the maximum compressor speed is limited to WSTD+2000/2, and the indoor fan is set to "sleep Lo".
- (3) 30 minutes after the sleep key is set, the sleep shift of set temperature starts.
- The maximum sleep shift of set temperature is 5°C, and the minimum is 12°C.
- (5) If the operation mode is changed during sleep operation, the changed operation mode is set and sleep control starts
- (6) The indoor fan speed does not change even when the fan speed mode is changed. (Lo)
- (7) When defrosting is to be set during sleep operation, defrosting is engaged and sleep operation is restored after defrosting.
- (8) When operation is stopped during sleep operation, the set temperature when stopped, as well as the time, continue to be counted.
- If the set time is changed during sleep operation, all data including set temperature, time, etc. is cleared and restarted.
- (10) If sleep operation is canceled by the cancel key or sleep key, all data is cleared.

– 51 –


# REFRIGERATING CYCLE DIAGRAM

MODEL RAD-18NH7A


RAD-25NH7A/RAC-25NH5

RAD-35NH7A/RAC-35NH5

## COOLING, DEHUMIDIFYING, DEFROSTING

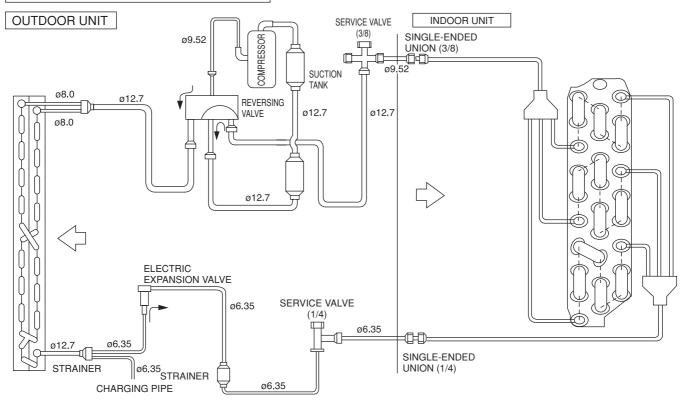



#### HEATING

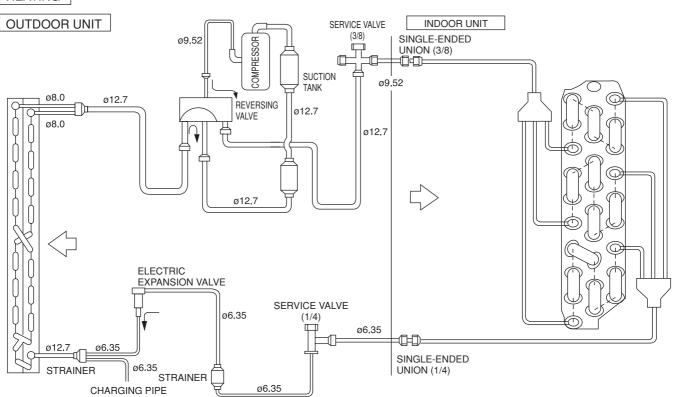

# REFRIGERATING CYCLE DIAGRAM

MODEL RAD-50NH7A RAC-50NH5

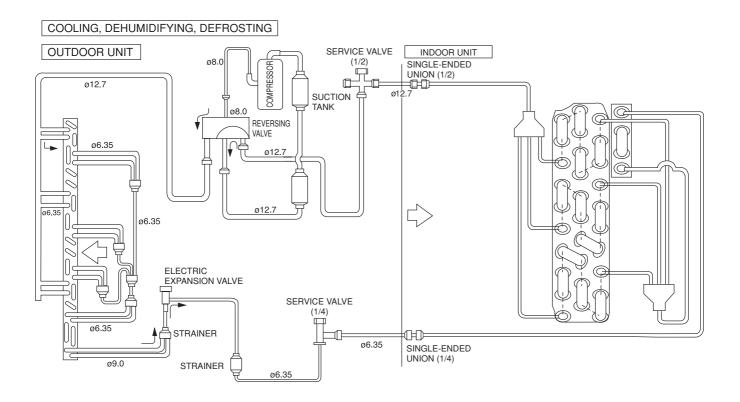

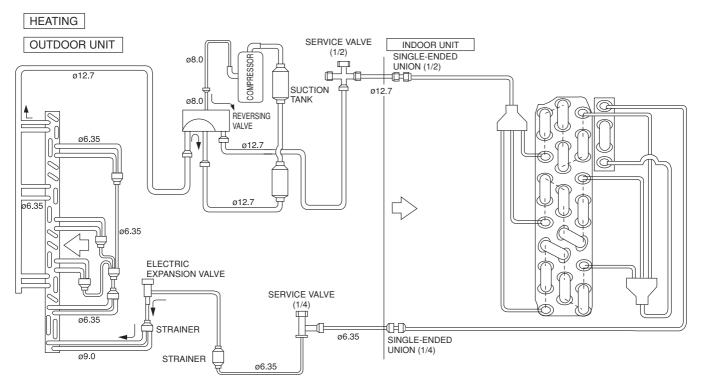

# 1. Receiver Circuit

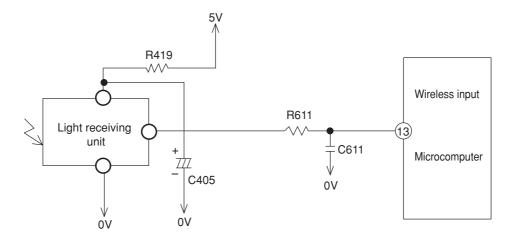


Fig. 1-1

• The light receiver unit receives the infrared signal from the wireless remote control (option part). The receiver amplifies and shapes the signal and outputs it.

#### 2. Buzzer Circuit

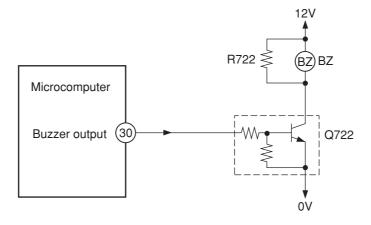


Fig. 2-1 Buzzer Circuit

• When the buzzer sounds, an approx. 3.9kHz square signal is output from buzzer output pin ③ of the microcomputer. After the amplitude of this signal has been set to 12Vp-p by a transistor, it is applied to the buzzer. The piezoelectric element in the buzzer oscillates to generate the buzzer's sound.

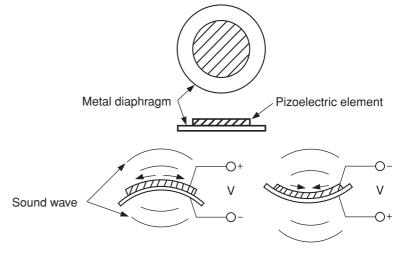


Fig. 2-2 Buzzer Operation

# 3. Room Temperature Thermistor Circuit

- Fig. 3-1 shows the room temperature thermistor circuit.
- The voltage at (A) depends on the room temperature as shown in Fig. 4-2.

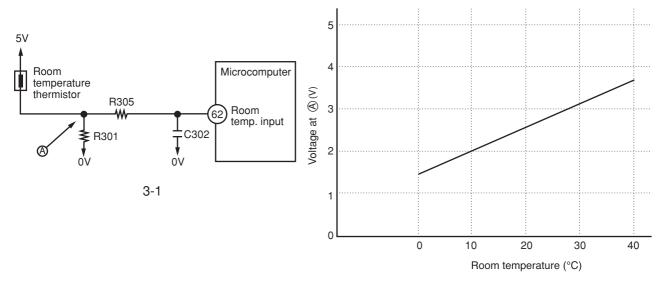


Fig. 3-2

# 4. Heat exchanger temperature thermistor circuit

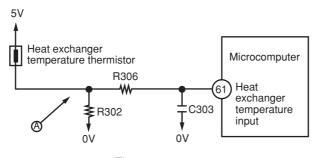


Fig. 4-1

- The circuit detects the indoor heat exchanger temperature and controls the following.
  - (1) Preheating.
  - (2) Low-temperature defrosting during cooling and dehumidifying operation.
  - (3) Detection of the reversing valve non-operation or heat exchanger temperature thermistor open.

The voltage at (A) depends on the heat exchanger temperature as shown in Fig. 4-1.

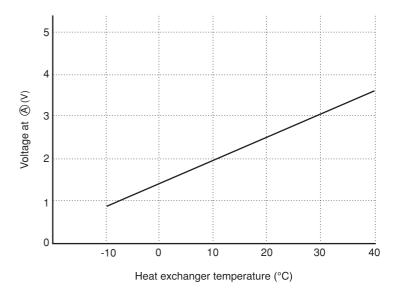


Fig. 4-2

# 5. Initial Setting Circuit (IC401)

- When power is supplied, the microcomputer reads the data in IC401 (E<sup>2</sup>PROM) and sets the preheating activation value and the rating and maximum speed of the compressor, etc. to their initial values.
- Data of self-diagnosis mode is stored in IC401; data will not be erased even when power is turned off.

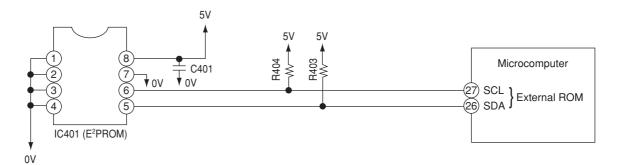


Fig. 5-1

# 6. Temporary Switch

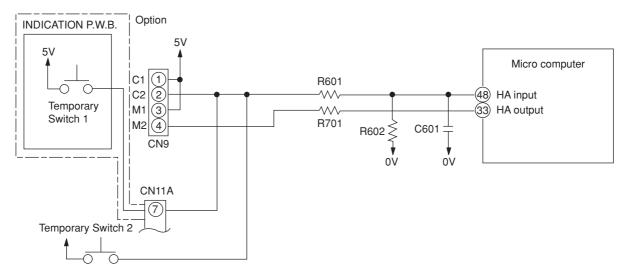


Fig. 6-1

• The temporary switch is used to operate the air conditioner temporarily when the wireless remote control is lost or faulty.

# 7. Drain pump drive circuit

When cool or dehumidifying operation, pin 68 of the micro computer goes "Hi", Q333 and Q932 turn on and the drain pump drive.


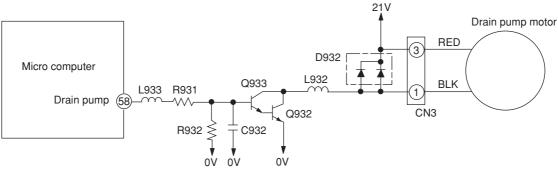



Fig. 7-1

# 8. Drain pump trial run switch

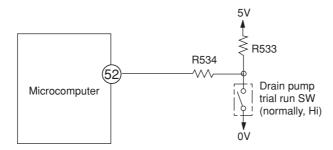

• This switch forcibly turns the drain pump on. When the drain pump trial run switch is turned on, the timer indicator will blink seven times, and no remote signal will be accepted.

### 9. Float switch

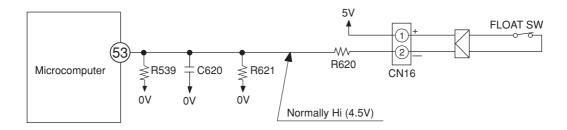

- This is a float type switch that monitors the drain level of drain pan. The switch will be activated and will stop operation if the drain pump is faulty or drain hose is stopped up, disabling drainage, causing the drain level to rise abnormally.
- When the float switch is activated, the timer indicator will flash six times. Note that the float switch will also be activated, disabling operation if the connector of float switch has defective contact or is connected incompletely.

# 10. High static-pressure switch (Full duct type and semi duct type)


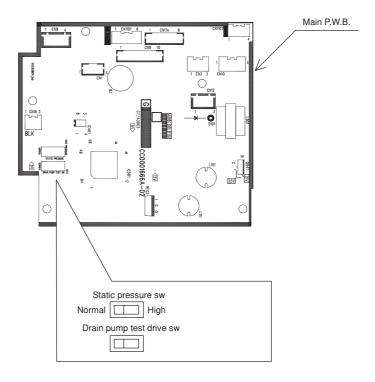


Fig. 10-1

- For full duct type and semi duct type, set the high to HIGH STATIC-PRESSURE.
- If not set to HIGH, there will be reduction of cooling and heating capacities.

# 11. Wired remote control receiver circuit

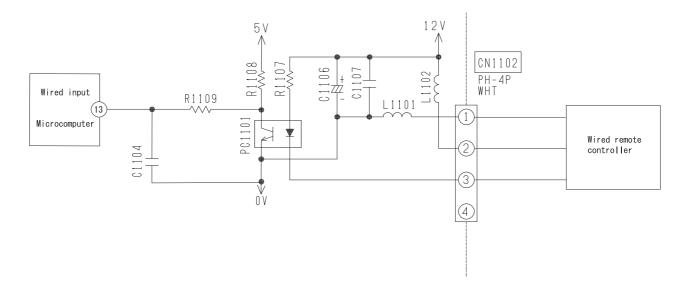

• In wired remote control receiver circuit, the signal will transmit to micro computer pin 3 by using photocoupler PC101.

# Model RAC-25NH5, RAC-35NH5, RAC-50NH5

#### 1. Power Circuit

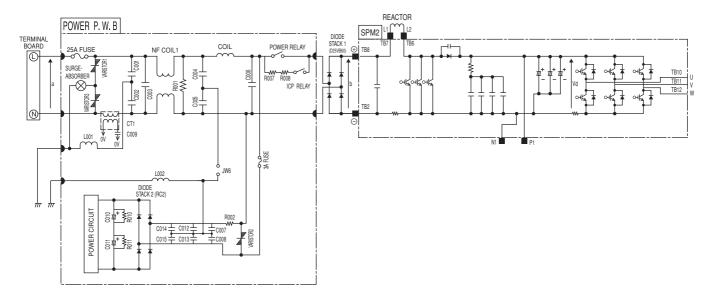


Fig. 1-1

• This circuit full-wave rectifies 220-240V AC applied between terminals L and N, and boosts it to a required voltage with the active module, to create a DC voltage.

# The voltage becomes 260-360V when the compressor is operated

#### (1) Active module

The active filter, consisting of a reactor and switching element, eliminates higher harmonic components contained in the current generated when the compressor is operated, and improves the power-factor.

#### (2) Diode stacks

These rectify the 220-240V AC from terminals L and N to a DC power supply.

#### < Reference >

 In case of malfunction or defective connection: Immediately after the compressor starts, it may stop due to "abnormally low speed" active error, etc.

The compressor may continue to operate normally, but the power-factor will decrease, the operation current will increase, and the overcurrent breaker of the household power board will probably activate.

 In case of active module faulty or defective connection:

Although the compressor continues to operate normally, the power-factor will decrease, the operation current will increase, and the overcurrent breaker of the household power board will probably activate.

#### < Reference >

 If diode stack 1 is faulty, the compressor may stop due to "lp", "anbormally low speed", etc. immediately after it starts, or it may not operate at all because no DC voltage is generated between the positive (+) and negative (-) terminals.

If diode stack 1 is faulty, be aware that the 25A fuse might also have blown.

 If diode stack 2 is faulty, DC voltage may not be generated and the compressor may not operate at all. Also, be aware that the 3A fuse might have blown.

#### (3) Smoothing capacitor (C501, C502, C503)

This smoothes (averages) the voltage rectified by the diode stacks.

<Notes> Smoothing capacitor C501 is not available for model RAC-25NH5 and RAC-35NH5.

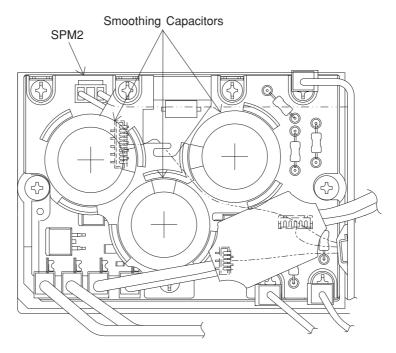


Fig. 1-2

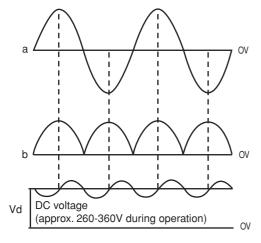


Fig. 1-3

- (4) Smoothing capacitor (C010, C011)
  - This smoothes (averages) the voltage rectified by the diode stack2. A DC voltage is generated in the same way as in Fig. 1-3.
  - Voltage between + side of C010 and side of C011 is about 330V.
- (5) C001 to C003, C012 to C015, C007, C008, NF COIL1, COIL, absorb electrical noise generated during operation of compressor, and also absorb external noise entering from power line to protect electronic parts.
- (6) Surge absorber, Varistor 1, 2, 3, absorbs external power surge.
- (7) Inrush protective resistor (R007, R008) This works to protect from overcurrent when power is turned on.

 Be careful to avoid an electric shock as a high voltage is generated. Also take care not to cause a short-circuit through incorrect connection of test equipment terminals. The circuit board could be damaged.

- < Reference >
- When inrush protective resistor is defective, diode stack may malfunction. As a result, DC voltage is not generated and no operation can be done.

#### 2. Indoor/Outdoor Interface Circuit

- The interface circuit superimposes an interface signal on the DC 35V line supplied from the outdoor unit to perform communications between indoor and outdoor units. This circuit consists of a transmiting circuit which superimposes an interface signal transmit from the microcomputer on the DC 35V line and a transmiting circuit which detects the interface signal on the DC 35V line and outputs it to the microcomputer.
- Communications are performed by mutually transmiting and receiving the 4-frame outdoor request signal one frame of which consists of a leader of approx. 100 ms., start bit, 8-bit data and stop bit and the command signal with the same format transmit from the indoor unit.
- Communication signal from outdoor microcomputer to indoor microcomputer. At first outdoor microcomputer will send a request signal (SDO) to indoor microcomputer. A high-frequency IF signal approx. 38 KHz is generated and modulated by the request signal (SDO) inside the outdoor microcomputer then output to pin (11) of microcomputer. This modulated IF signal is output to pin (30) of HIC and amplified by amp. This signal is superimposed to DC 35V line via C801 and L801.
  - To prevent erroneous reception, the outdoor microcomputer is designed so that it cannot receive a signal while it is outputting a request signal.
  - The receiving circuit in the indoor unit consists of a comparator and transistor. The interface signal from the outdoor unit on the DC 35V line is supplied to C821, where DC components are eliminated, and is then shaped by the comparator. The shaped signal is detected by diode, amplified by amp, and output to pin 49 of the indoor microcomputer.
  - Fig. 2-2 shows the voltages at each component when data is transferred from the outdoor microcomputer to the indoor microcomputer.
- Communication signal from indoor microcomputer to outdoor microcomputer. The request signal (SDO) generates by indoor microcomputer is output to pin (50), and amplifies by C801. IF signal approx. 38 kHz is generated by comparator, then modulate by the request signal from pin (50) of indoor microprocessor. This modulated IF signal is then amplified and superimposed to DC 35V line via L801 and C802 of indoor interface circuit.
  - Fig. 2-3 shows the voltages at each component when data is transferred from outdoor microcomputer to indoor microcomputer.

The circuit operation of the outdoor receiving circuit is same as indoor receiving circuit.

 Fig. 2-1 shows the interface circuit used for the indoor and outdoor microcomputers to communicate with each other.

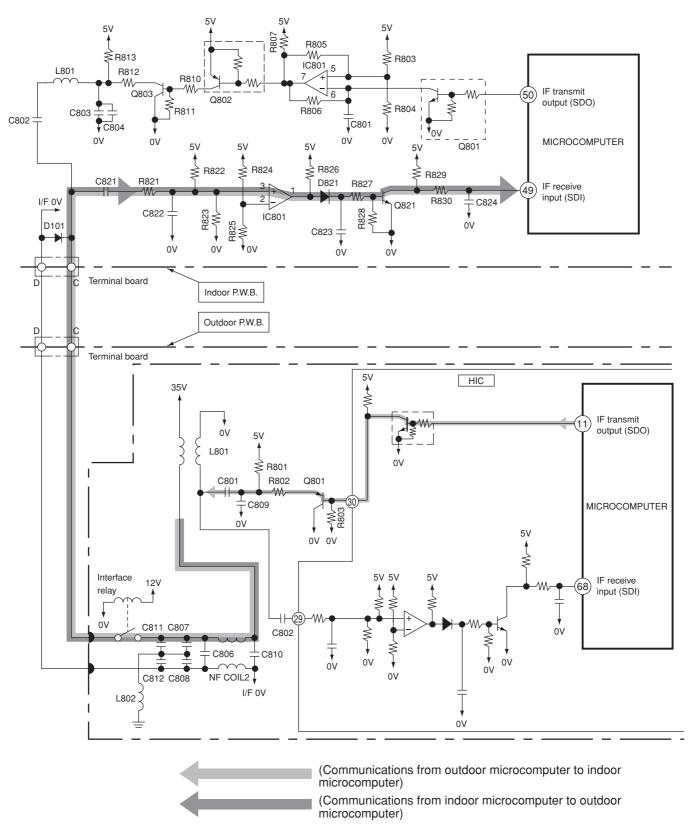


Fig. 2-1 Indoor/outdoor interface Circuit

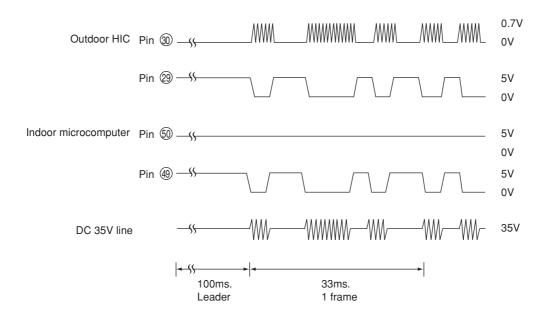


Fig. 2-2 Voltages Waveforms of indoor / Outdoor Microcomputers (Outdoor to Indoor Communications)

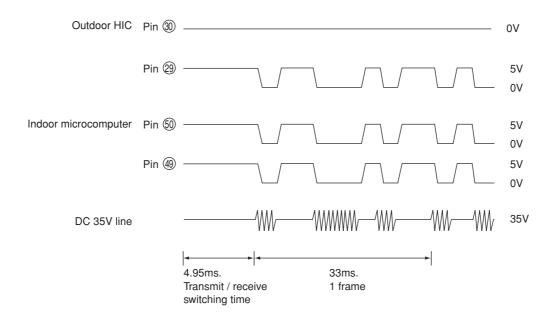


Fig. 2-3 Voltages Waveforms of indoor / Outdoor Microcomputers (Indoor to Outdoor Communications)

Leader (100ms.) 3 (33.3ms.) 0 2 (33.3ms.) Indoor message 0 (33.3ms.) 1 frame =  $100ms. + 33.3ms. \times 8 + 4.95ms. = 371.35ms.$ 0 Character No. (33.3ms.) Bit No = 0WF -- YMMANAMANAMAY-WARMANAMAK-AMANAMANAMAK-WANAMANAMANAMAK-WANAMANAMAK-WA switching time (4.95ms.) 3 (33.3ms.) **Transmit**/ Fig. 2-4 receive 0 2 (33.3ms.) Outdoor message 0 (33.3ms.) [Serial Communications Format during Normal Communications] 0 (1) Outdoor microcomputer (HIC) to indoor microcomputer (2) Indoor microcomputer to outdoor microcomputer (HIC) Character No. 0 (33.3ms.) [Example] When the outdoor message is all 0s and indoor message is all 1s: Bit No = 0Leader (100ms.) (3) Communications waveforms When reset (approx. 10ms.) (approx. 10ms.) When reset 36 (V) -35 (V) -34 (V) -

– 65 –

[ Serial Communications Data ]

		7		0
		9		0
		5		0
	က	4		0
		က		0
		7		0
		-	Fan-7-step request	-
		0		0
		7	Actual compressor rotation speed (5 MSB)	1
		9	Actual compressor rotation speed (4)	1,0
		2	Actual compressor rotation speed (3)	1,0
	7	4	Actual compressor rotation speed (2)	1/0
		က	Actual compressor rotation speed (1)	10
		7	Actual compressor rotation speed (0 LSB)	10
		-	Compressor during operation	0/1 0/1 0/1 0/1 0/1 0/1 0/1 0/1 0/1 0/1
		0	Compressor during operation	1/0
		7	Outside temperature (7 MSB)	1/0
		9	Outside temperature (6)	1/0
		2	Outside temperature (5)	1/0
	_	4	Outside temperature (4)	1/0
		က	Outside temperature (3)	1/0
		2	Outside temperature (2)	1,0
		-	Outside temperature (1	1,0
		0	Outside temperature (0 LSB)	1/0
		7	Self-diagnosis (3 MSB)	1/0
		9	Self-diagnosis (2)	1/0
		5	Self-diagnosis (1)	1/0
		4	Self-diagnosis (0 LSB)	1/0
	0	3	Defrost request signal	0 1/0 1/0 1/0 1/0
		2	During forced operation	1/0
<u>o</u>		-		0
sag		0	Multi-bit	1/0
(1) Outdoor message	Character No.	Bit No.	Contents	Data

		2	Compressor minimum rotation speed (4 MSB)	1/0
		9	Compressor minimum rotation speed (3)	1/0
		2	Compressor minimum rotation speed (2)	1/0
	_	4	Compressor minimum rotation speed (1)	1/0
	က	8	Compressor minimum rotation speed (0 LSB)	1/0
		2		1/0
		1	OVL up	1/0
		0	15/20(A)	1/0
		2	Compressor command speed (7 MSB)	1/0
		9	Compressor command speed (6)	1/0
		9	Compressor command speed (5)	1/0
	2	4	Compressor command speed (4)	1/0
		8	Compressor command speed (3)	0 1/0 1/0 1/0 1/0 1/0 1/0 1/0 1/0 1/0 1/
		2	Compressor command speed (2)	1/0
		ļ	Compressor command speed (1)	1/0
		0	Compressor command speed (0 LSB)	1/0
		2	Compressor ON	1/0
		9		0
		9		0
	_	4	Reversing valve	0 1/0
	1	8	2-way valve	
		2	Fan (2 MSB)	1/0 1/0 1/0
		ŀ	Fan (1	1/0
		0	Fan (0 LSB)	1/0
		2	Capacity code (3 MSB)	0
		9	Capacity code (2)	0
		9	Capacity code (1)	0
	0	4	Capacity code (0 LSB)	0
		3	Indoor in-operation bit	1/0
		2	Operation mode (2 MSB)	1/0 1/0 1/0 1/0
		1	Operation mode (1)	1/0
age		0	Operation mode (0 LSB)	1/0
(2) Indoor message	Character No.	Bit No.	Contents	Data

# 3. Power Module Circuit

Fig. 3-1 shows the system power module and its peripheral circuit.

The three transistors on the positive ⊕ side are called the upper arm, and the three transistors on the negative ⊖ side, the lower arm.

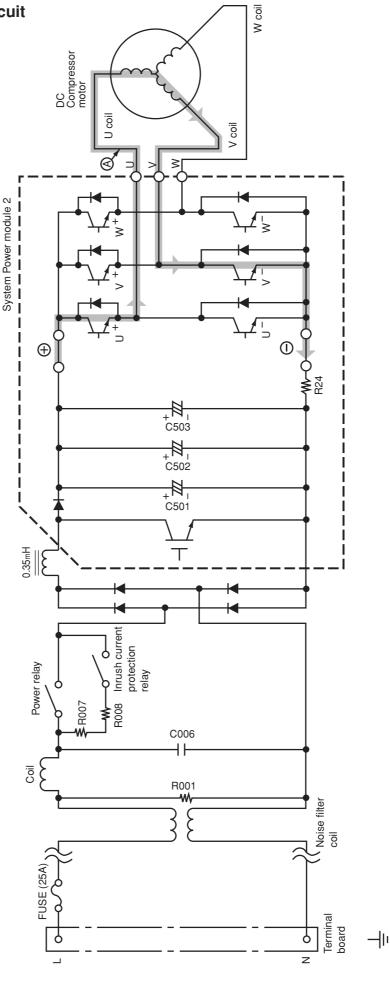


Fig. 3-1 Power module circuit (U<sup>+</sup> is ON, V<sup>-</sup> is ON)

 DC 260-360V is input to system power module and system power module switches power supply current according to rotation position of magnet rotor. The switching order is as shown in Fig. 3-2.

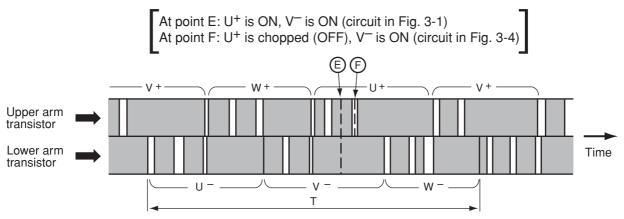


Fig. 3-2 Switching order of power module

- Upper arm transistor is controlled to ON/OFF by 3.3kHz chopper signal. Rotation speed of the compress is proportional to duty ratio (ON time/ ON time + OFF time) of this chopper signal.
- Time T in Fig. 3-2 shows the switching period, and relation with rotation speed (N) of the compressor is shown by formula below;

$$N = 60/2 X 1/T$$

• Fig. 3-3 shows voltage waveform at each point shown in Figs. 3-1 and 3-4. First half of upper arm is chopper, second half is ON, and first half of lower arm is chopper, second half is ON.

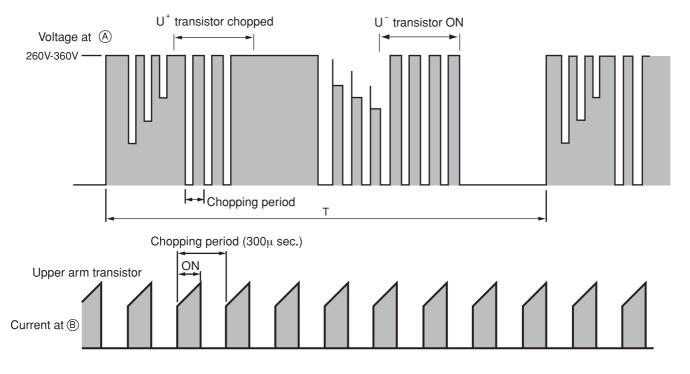


Fig. 3-3 Voltage waveform at each point

- When power is supplied  $U^+ \rightarrow U^-$ , because of that  $U^+$  is chopped, current flows as shown below;  $\mathbb B$ 
  - (1) When U<sup>+</sup> transistor is ON: U<sup>+</sup> transistor → U coil → V coil → V<sup>-</sup> transistor → DC current detection resistor → Point ® (Fig. 3-1)
  - (2) When U<sup>+</sup> transistor is OFF: (by inductance of motor coil) U coil → V coil → V<sup>-</sup> transistor → Return diode → Point (A) (Fig. 3-4)

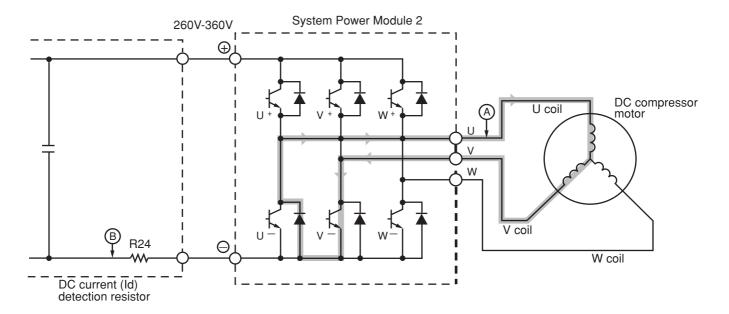


Fig. 3-4 Power module circuit (U<sup>+</sup> is ON, V<sup>-</sup> is ON)

• Since current flows at point ® only when U+ transistor is ON, the current waveform at point ® becomes intermittent waveform as shown in Fig. 3-3. Since current at point ® is approximately proportional to the input current of the air conditioner, input current is controlled by using DC current (Id) detection resistor.

#### <Reference>

If power module is detective, self diagnosis lamps on the control P.W.B. may indicate as shown below:

Table 3-1

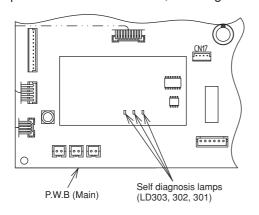



Fig. 3-5

Self-diagnosis	Self-diagnosis lamp and mode	
lp (peak current cut)	LD301	Blinks 2 times
Abnormal low speed rotation	LD301	Blinks 3 times
Switching incomplete	LD301	Blinks 4 times

- Simplified check of power module (Lighting mode when operated with compressor leads disconnected)
  - (1) Disconnect connector of 3-pole (WHT, YEL, RED) lead wire connecting to compressor located at the lower part of electric parts box.
  - (2) Set to compressor operation state (other than FAN mode) and press Start/stop switch of remote control.
  - (3) If normal operation continues for more than 1 minute (LD303 lights), power module is considered normal.
  - \* Refer to other item (troubleshooting on page 94) for independent checking of power module.

### 4. Power Circuit for P.W.B.

• Fig. 4-1 shows the power circuit for P.W.B. and waveform at each point.

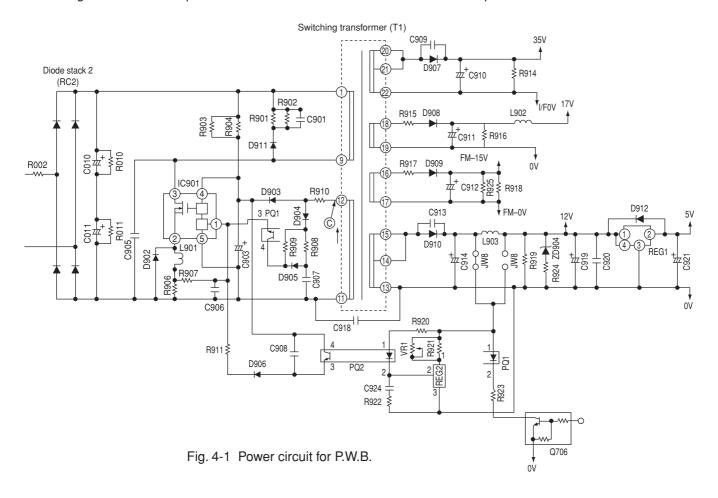

- In the power circuit for P.W.B., power supply for microcomputer, peripheral circuits, and system power module driver circuit and, as well as DC 35V, are produced by switching power circuit.
- Switching power circuit performs voltage conversion effectively by switching transistor IC901 to convert DC 330V voltage to high frequency of about 20kHz to 200kHz.
- Transistor IC901 operates as follows:

#### (1) Shifting from OFF to ON

DC about 330V is applied from smoothing capacitors C010 ⊕ and C011 ⊖ in the control power circuit.
With this power, current flows to pin ④ of IC901 via R903 and R904 and IC901 starts to tum ON. Since voltage in the direction of arrow generates at point ⓒ at the same time, current passing through R910 and D903 is positive-fed back to IC901.

#### (2) During ON

• The drain current at IC901 increases linearly. During this period, the gate voltage and current become constant because of the saturation characteristics of the transformer.

#### (3) Shifting from ON to OFF

• This circuit applies a negative feedback signal from the 12V output. When the voltage across C919 reaches the specified value, REG2 turns on and current flows to PQ2 ①-②. This turns the secondary circuits on, sets IC901 pin ① to "Hi", and turns IC901 off.

#### (4) During OFF

• While IC901 is on, the following energy charges the primary windings of the transformer:

Energy=LI<sup>2</sup>/2. Here, L: Primary inductance

I: Current when IC1 is off

This energy discharges to the secondary windings during power off. That is, C910, C911, C912, C914 is charged according to the turn ratio of each winding.

- At the start, an overcurrent flows to IC901 because of the charged current at C910, C911, C912, C914.
- The drain current at IC901 generates a voltage across R906. If it exceeds the IC901 base voltage, it sets the IC901 gate voltage to "HI".
- R906 limits the gate voltage to prevent excessive collector current from flowing to IC901.

#### <Reference>

If the power circuit for P.W.B. seems to be faulty:

- (1) Make sure that 5V and 12V on the control P.W.B., upper arm U, V and W, and the lower arm power voltage are the specified values.
- (2) When only the 5V output is low:

REG 1 (regulator) faulty, 5V-0V shorted, output is too high, or REG 1 is abnormal.

(3) When 12V and 5V are abnormal:

The following defects can be considered:

- 1) Fan, operation, power, rush prevention relay (shorting in relay, etc.)
- (2) Microcomputer is abnormal.
- 3 REG 1 (regulator is abnormal), etc.

Shorting on primary circuits.

When shorting occurs in the secondary circuits, there is no abnormality in the primary circuits because of overcurrent protection.

The voltage rises when an opening occurs in the primary circuits, or the feedback system is abnormal.

(4) When 15V and 17V are abnormal:

D908, D909 or drive circuit is abnormal.


(5) When all voltage are abnormal:

IC901, R906, etc. are possibly abnormal.

\* If IC901 is abnormal, be aware that other components, such as the power module, REG (regulator), etc. are possibly defective.

[When the switching power supply seems to be abnormal, the voltage between IC901 pin 4 (to be measured at the leads of R904 and R903) and IC901 pin 5 (to be measured at R906 lead) may be between 11 and 16V. This is because the protection circuit of IC901 is operating.]

# 5. Reversing valve control circuit

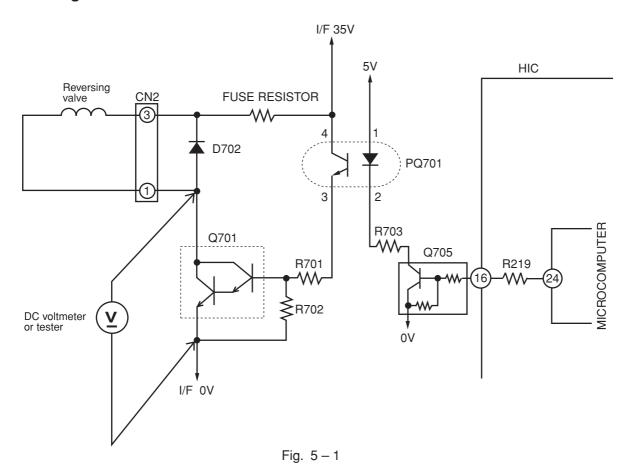

 Reversing valve control circuit can switch reversing valve ON/OFF according to instruction from indoor microcomputer depending on the operation condition shows in Table 5-1.

Voltage at each point in each operation condition is approximately as shown below when measured by tester. (When collector voltage of Q701 is measured)

Table 5-1

Operation condition		Collector voltage of Q701		
Cooling	General operation of Cooling	About 35V		
Heating	In normal heating operation	About 0.8V		
	MAX. rotation speed instructed by indoor microcomputer after defrost is completed	About 0.8V		
	Defrosting	About 35V		
Dehumidifying	Sensor dry	About 35V		

### 6. Rotor magnetic pole position detection circuit

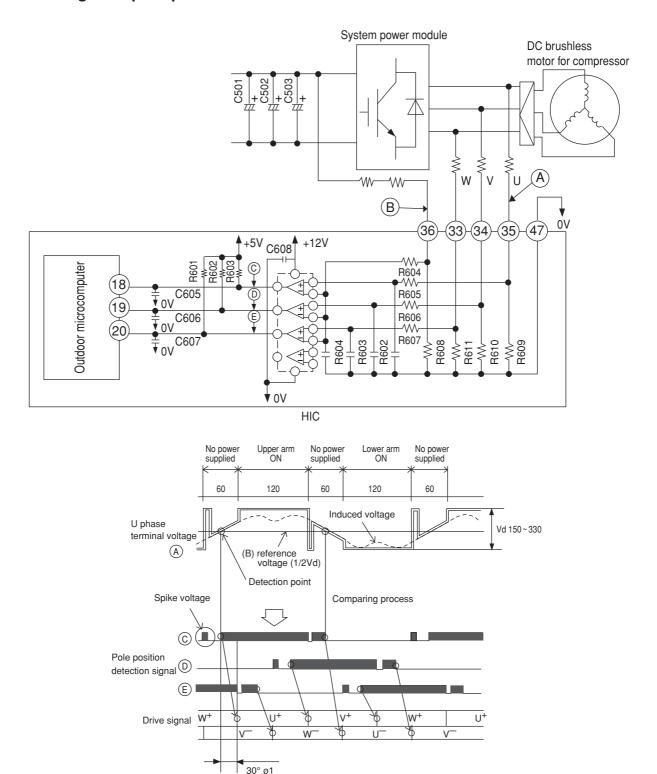


Fig. 6-1 Rotor magnetic pole position detection circuit and voltage waveform at each point

- To detect U phase, voltage at point © is produced by driving motor induced voltage signal (voltage at point (A)) and 1/2 voltage of Vd (voltage at point (B)), and comparing with comparator.
- For V phase and W phase, voltage at point ① and voltage at point ② are produced in the same way as above. Voltage at point ② is taken into indoor unit microcomputer, switching timing to U+ transistor from W+ transistor is produced by delaying 30° from rise waveform, ignoring spike voltage. In addition, switching timing to U-transistor from W-transistor is produced by delaying 30° from fall waveform.
- For V phase and W phase, in the same way as above, drive signals are produced from voltages at point ① and point ②. Phases are shifted by 120° and 240°, respectively, comparing with U phase.

# 7. Drive Circuit

Fig. 7-1 shows the drive circuit. The circuits for U phase, V phase and W phase have the same Configuration.

In high speed rotation mode (PWM range), as shown in Fig. 7-3, 0-5V drive signal is ouput from microcomputer for each phase (with no chopper because of full duty). Signal output from microcomputer is input to IC1 and is inverted by active Lo to become 0-15V drive In low speed rotation mode (PWM range), as shown in Fig. 7-2, 0-5V chopper signal is ouput from microcomputer for each phase. Signal output from microcomputer is ouput to IC1 and is inverted by active Lo to become 0-15V chopper signal; it is then drive the transistor of each phase.

signal; it is then drive the transistor of each phase.

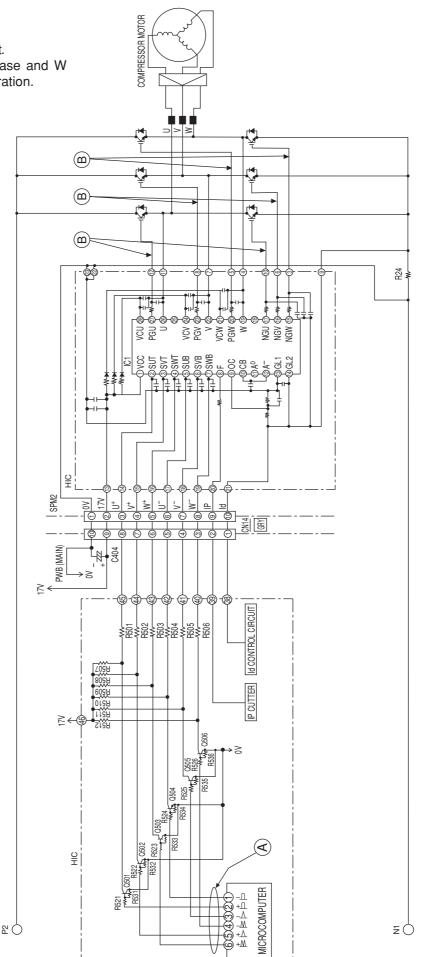


Fig.. 7-1

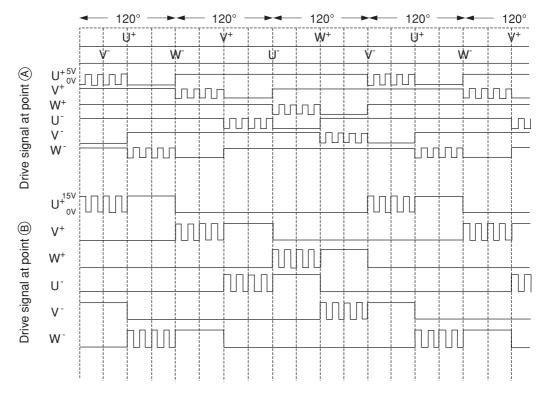


Fig. 7-2

# [High speed rotation mode]

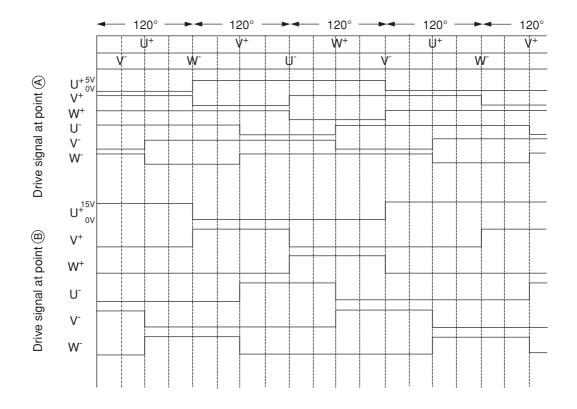


Fig. 7-3

# 8. HIC and Peripheral Circuits

• Fig. 8-1 shows the micro computer and its peripheral circuits, Table 8-1, the basic operations of each circuit block, and Fig. 8-2, the system configuration.

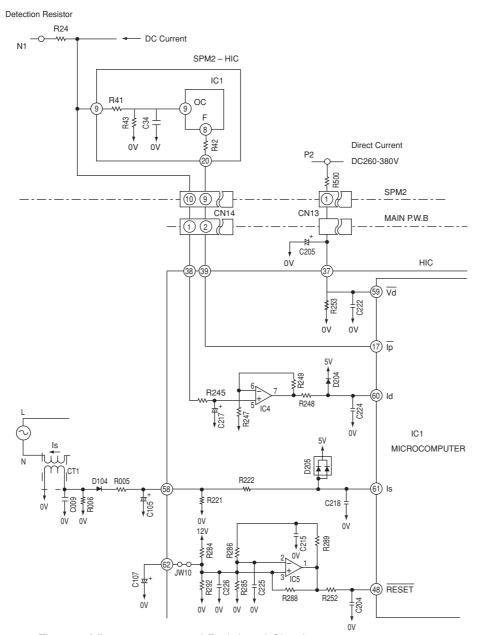


Fig. 8-1 Microcomputer and Peripheral Circuits

Table 8-1

0: ::	Destination of the second seco
Circuit block	Basic operation
Peak current cutoff circuit	Detects DC current flowing power module and during overcurrent (instantaneous value) flows, stops upper/lower arm drive circuits and also produces lp signal by which drive signal output is stopped.
Set value circuit	Compares voltage detected, amplified and input to HIC with set voltage value in microcomputer, and controls overload when set value exceeds input voltage.
Voltage amplifier circuit	Voltage-amplifies DC current level detected by the detection resistor and inputs this to microcomputer. Internal or external overload is judged in microcomputer.
Reset circuit	Produces reset voltage.
Trip signal synthesis circuit	Modulates chopper signal to drive signal and stops according to presence/absence of lp signal or reset signal.

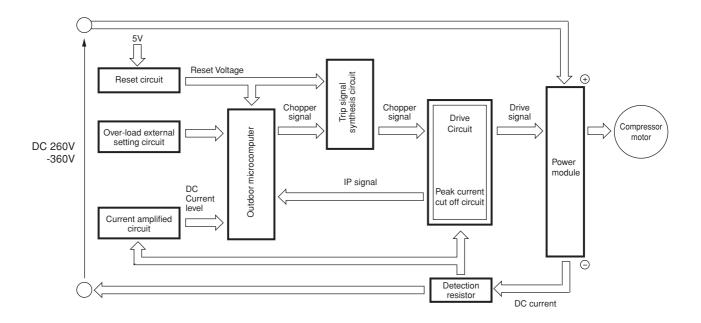


Fig. 8-2

- The following describes the operations of each circuit in detail.
  - (1) Peak current cut off circuit Fig.8-3 Peak Current Cut off Circuit and Waveforms at Each Section.

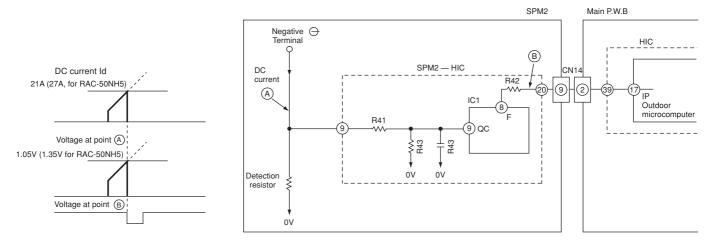


Fig.8-3

- The lp cut off circuit detects an instantaneous excessive current and stops inverter to protect parts such as SPM2. etc.
- As shown in diagram, if current exceeding 21A (27A for RAC-50NH5) flows, voltage at point (a) recognized by detecting resistor is input to pin (10) of SPM2 HIC, and voltage divided by R41 and R43 is input to pin (9) of IC1. Since threshold of IC1 is exceeded in this case, Lo signal is input from pin (8) (Voltage at point (8). When Lo signal is input to pin (7) of microcomputer, microcomputer stops drive output.
- When drive output from microcomputer is stopped, all drive output goes Hi, and microcomputer is initialized to enter drive signal standby mode. 3 minutes later, microcomputer outputs drive signal again, to start operation.

### (2) Overload control circuit (OVL control circuit)

- Overload control is to decrease the speed of the compressor and reduce the load when the load on the air conditioner increases to an overload state, in order to protect the compressor, electronic components and power breaker.
- Overloads are judged by comparing the DC current level and set value.
- Fig. 8-4 shows the overload control system configuration and Fig. 8-5 is a characteristic diagram of
  overload judgement values. There are two judgement methods-external judgement which compares the
  externally set value with the DC current value regardless of the rotation speed and internal judgement
  which compares the set value that varies according to the rotation speed programmed in the microcomputer
  software with the DC current value.

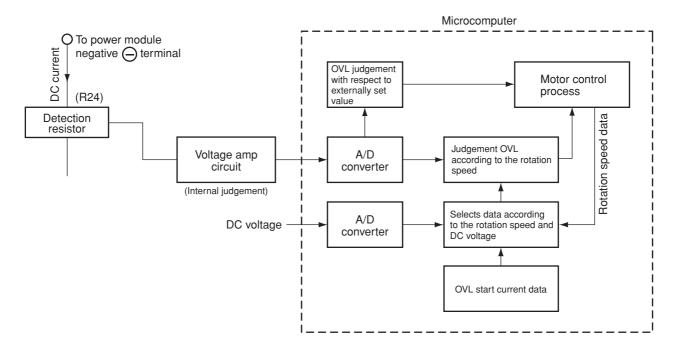


Fig. 8-4 Overload Control System Configuration

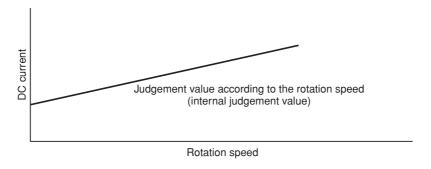


Fig. 8-5

#### (1). Overload external judgement circuit

- Fig. 8-1. The filter consisting of R245 and C217 removes high harmonic components from the voltage generated by the current flowing to Detection resistor; R245 and C217 average the voltage. This voltage is then input to IC4 pin ⑤ is then amplified and supplied to microcomputer pin ⑥. The microcomputer compares this input with the internally set value, and if the input exceeds the set value, it enters overload control status
- Fig. 8-7 shows the rotation speed control. When the voltage at pin (a) of the microcomputer exceeds the set value, the microcomputer decreases the rotation speed of the compressor and reduces the load regardless of the rotation speed commanded by the indoor microcomputer.

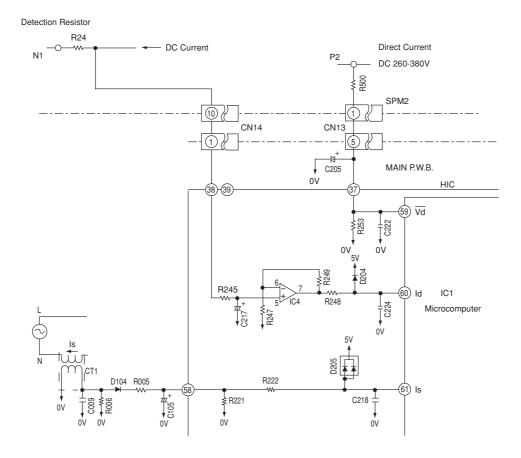


Fig. 8-6

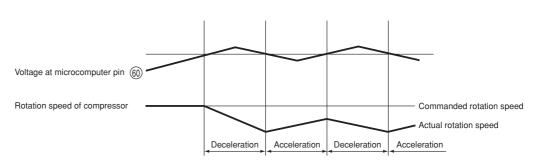


Fig. 8-7

#### (2). Voltage amp. circuit

 The voltage amp. circuit amplifies the DC current level detected by the detection resistor after being converted to a voltage and supplies it to the microcomputer. Receiving this, the microcomputer converts it to a digital signal and compares it with the internal data to judge whether or not overload control is required.

### < During overload control >

- The filter consisting of R245 and C217 removes high harmonic components from the voltage generated from the DC current flowing to the detection resistor, and supplies it to IC4 pin (5) IC4 forms a non-inverting voltage amp. circuit together with the peripheral elements.
- The microcomputer stores the set values which vary according to the rotation speed. When the DC current level exceeds the set value, the microcomputer enters the overload control state.
- The set Value is determined by the amplification of the voltage amp. circuit.

Amplification : high → DC current : low
 Amplification : low → DC current: high

R500, R253, detect the DC voltage at the power circuit. The microcomputer receives a DC voltage (260-380V) via HIC (37) and applies correction to the overload set value so the DC current is low (high) when the DC voltage is high (low).

(Since the load level is indicated by the DC voltage multiplied by DC current, R247, R248, R249 are provided to perform the same overload judgement even when the voltage varies.)

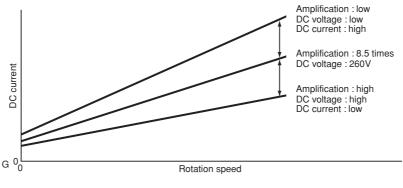


Fig. 8-8

#### < During start current control >

- It is required to maintain the start current (DC current) constant to smooth the start of the DC motor for the compressor.
- RAC-25NH5, RAC-35NH5, RAC-50NH5 uses software to control the start current.
- The start current varies when the supply voltage varies. This control method copes with variations in the voltages as follows.
  - (1) Turns on the power module's  $U^+$  and  $V^-$  transistors so the current flows to the motor windings as shown in Fig8-9.
  - (2) Varies the turn-ON time of the  $W^+$  transistor according to the DC voltage level and the start is controlled so the start current is approx. 10A as shown in Fig. 8-10.


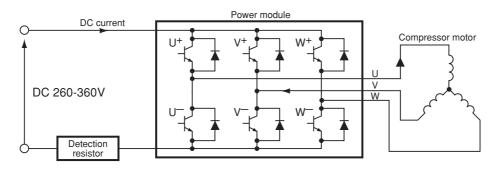


Fig. 8-9

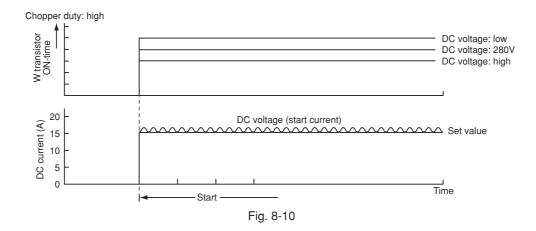

# 9. Temperature Detection Circuit

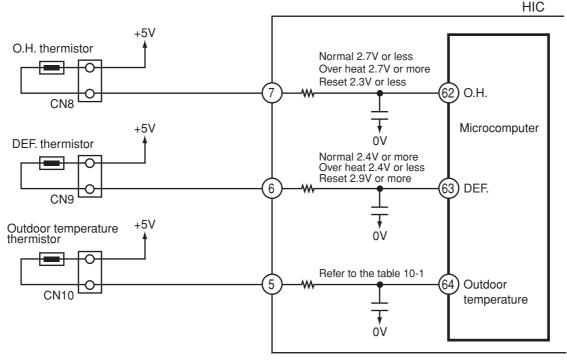


Fig. 9-1

- The Over heat thermistor circuit detects the temperature at the surface of the compressor head, the Defrost. thermistor circuit detects the defrosting operation temperature.
- A thermistor is a negative resistor element which has the characteristics that the higher (lower) the temperature, the lower (higher) the resistance.
- When the compressor is heated, the resistance of the Over heat thermistor becomes low and voltage at pin 62 of microcomputer is increased.
- Microcomputer compares the voltage present at pin 62 with the internal set value, if it is exceeded the set value microcomputer judges that the compressor is overheated and stops operation.
- When frost forms on the outdoor heat exchanger, the temperature at the exchanger drops abruptly. Therefore the resistance of the Defrost. thermistor becomes high and the voltage at pin 63 of microcomputer drops.
  - If this voltage becomes lower than the set value stored inside, the microcomputer starts defrosting control.
- During defrosting operation the microcomputer transfers the defrosting condition command to the indoor microcomputer via the circuit interface.
- The microcomputer always reads the outdoor temperature via a thermistor (microcomputer pin 64), and transfers it to the indoor unit, thus controlling the compressor rotation speed according to the value set at the EEPROM in the indoor unit, and switching the operation status (outdoor fan on/off, etc.) in the dry mode.

The following shows the typical values of outdoor temperature in relation to the voltage:

Table 9-1

Outdoor temperature (°C)	-10	0	10	20	30	40
Microcomputer pin ⑤ voltage (V)	1.19	1.69	2.23	2.75	3.22	3.62

## <Reference>

When the thermistor is open, in open status, or is disconnected, microcomputer pins 62-64 are approx. 0V; when the thermistor is shorted, they are approx. 5 V, and LD301 blinks seven times.

However, an error is detected only when the OH thermistor is shorted; in such a case, the blinking mode is entered 12 minutes after the compressor starts operation.

#### 10. Reset Circuit



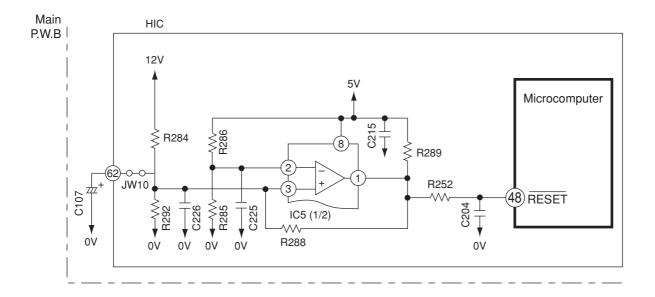


Fig. 10-1

- The reset circuit initializes the microcomputer program when Power is "ON" or "OFF".
- Low voltage at pin (48) resets the microcomputer, and HI activates the microcomputer.
- Fig. 10-1 shows the reset circuit and Fig. 10-2 shows waveform at each point when power is turned on and off.
- When power is turned on, 12V line and 5V line voltages rise and 12V line voltage reaches 10.9V and reset voltage input to pin (48) of microcomputer is set to Hi.
- Reset voltage will be hold "Hi" until the 12V line voltage drops to 9.90V even though the power shuts down.

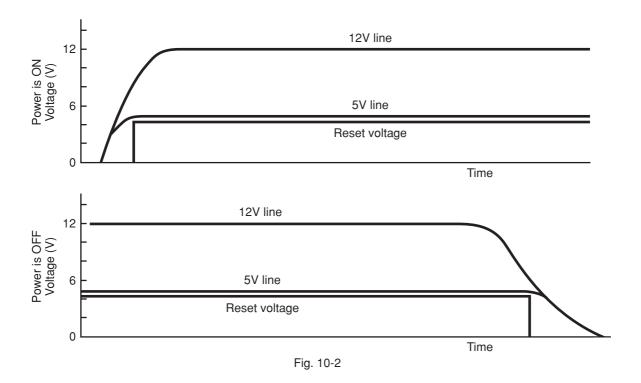

#### 11. Outdoor DC Fan Motor control circuit.

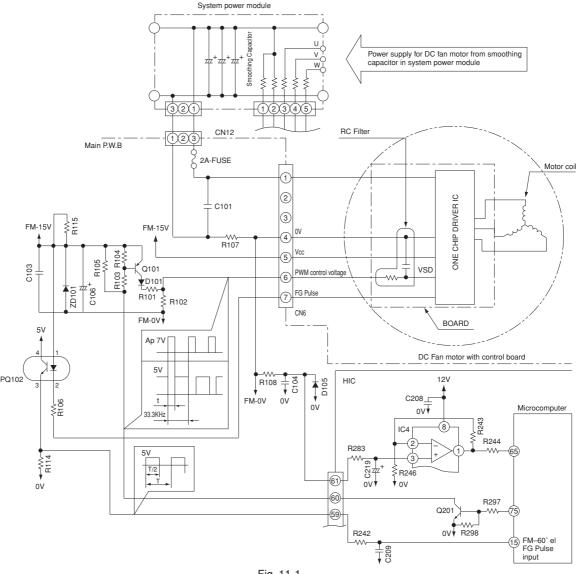

- Fig. 11-1
- This model uses DC Fan Motor which has a controller circuit in the Motor.
- This DC Fan Motor will rotate by control voltage apply to Vsp input. (Voltage range: 1.7 to 7V DC) Vsp high: Faster; Vsp low: slower; Vsp lower than 1.7V: stop
- Motor will output FG pulse by following this motor revolution.
- Outdoor Microprocessor will output PWM control signal from FMCHOP terminal by following the instruction from indoor Microprocessor.
- This PWM control signal will convert to Vsp voltage by smoothing circuit (Q101 & RC filter)
- Fan motor will start to rotate when Vsp was proceeding over than 1.7V, and generate FG pulse by rotation speed.
- FG pulse will feed back to Outdoor Microprocessor through PQ102.
- PQ102 is the isolator between Microprocessor circuit and DC Fan Motor circuit, which has to match the Fan Motor revolution with instructed revolution. Such as...

FG feedback: Faster - Instruction: Slower ... Decrease pulse width FG feedback: Slower - Instruction: Faster ... Increase pulse width

- FG pulse is also used for Fan Motor failure detection
- Microprocessor will monitor FG pulse 30 seconds after start the fan motor. If there is no signal detected, it will consider that the Fan Motor was malfunction and stop the operation. In this case, LD302 on control PWB will blink 12 times. (Fan Motor lock detected)
- R107 and IC4 are used for Fan Motor over current

#### < Reference >

- When operation stop with LD301 blinks 12 times, it may be caused by faulty DC fan motor.
- In this case, please check CN6 and CN12 connection first. It makes Fan Motor Lock also if those connectors are in misconnection.
- DC Fan Motor has broken when 2A Fuse was burned. Please replace both DC Fan Motor and 2A Fuse together.
- It will makes "Fan Lock Stop" when something has disturb the Fan rotation by inserting materials into propeller fan or ice has growing inside of outdoor unit by snowing.
- It may make "Fan Lock Stop" by strong wind (ex. 17m/sec or above) against the Fan rotation. In this case, unit will be restart again after a while.
- In case of "Fan Lock Stop" even though the DC Fan Motor is rotating correctly, the possible casue is Fan Motor problem or PQ102 on board or control board problem. Stop after the Fan motor runs 2 minutes, Fan Motor may be broken.


#### < Caution >

- Please take care for the electrical shock by high voltage of DC Fan Motor power source which is common with compressor when you are servicing this unit.
- You can not confirm the coil and wiring of Motor due to the built in control circuit in Fan Motor.

#### 12. Power Factor Control Circuit

Power factor is controlled to almost 100%. (Effective use of power)

With IC in ACT module, control is performed so that input current waveform will be similar to waveform of input voltage

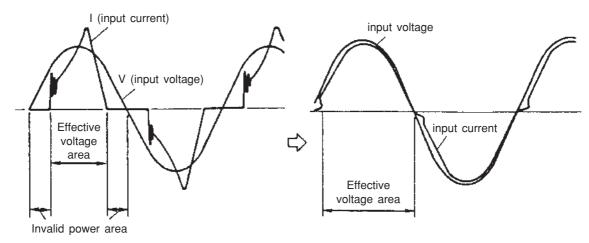

(Even if voltage is applied. current does not flow)

<sup>\*</sup> Assuming the same current capacity (20A), power can be used about 10% effective, comparing with curent use (power factor of 90%), and maximum capacity is thereby improved.

### SERVICE CALL Q & A

#### Model RAD-18NH7A, RAD-25NH7A, RAD-35NH7A, RAD-50NH7A

### **COOLING MODE**



The compressor has stopped suddenly during cooling operation.



Check if the indoor heat exchanger is frosted.
Wait for 3-4 minutes until it is defrosted.

If the air conditioner operates in cooling mode when it is cold, the evaporator may get frosted.

#### **DEHUMIDIFYING MODE**



Sound of running water is heard from indoor unit during dehumidifying.



Normal sound when refrigerant flows in pipe.



Compressor occasionally does not operate during dehumidifying.



Compressor may not operate when room temperature is 10°C or less. It also stops when the humidity is preset humidity or less.

### **HEATING MODE**



The circulation stops occasionally during Heating mode.



It occurs during defrosting. Wait for 5-10 minutes until the condenser is defrosted.



When the fan speed is set at HIGH or MED, the flow is actually Weak.



At the beginning of heating, the fan speed remains LOW for 30 seconds. If HIGH is selected, it switches to LOW and again to MED after additional 30 seconds.





Heating operation stops while the temperature is preset at "30".




If temperature is high in the outdoor, heating operation may stop to protect internal devices.


### **AUTO FRESH DEFROSTING Q7** Auto Fresh Defrosting is carried out: the After the ON/OFF button is pressed to stop heating, the outdoor unit is system checks the outdoor heat exchanger still working with the OPERATION and defrosts it as necessary before stopping lamp lighting. operation. **AUTO OPERATION** Fan speed does not change when fan speed selector is changed At this point fan speed is automatic. during auto operation. NICE TEMPERATURE RESERVATION This is because "Nice temperature reservation" When on-timer has been function is operating. This function starts programmed, operation starts before operation earlier so the preset temperature is the preset time has been reached. reached at the preset time. Operation may start maximum 60 minutes before the preset time. Does "Nice temperature reservation" It does not work. It works only during cooling function operate during dehumidifying? and heating. This is because "Nice temperature reservation" Even if the same time is preset, function is operating. The start time varies the operation start time varies. according to the load of room. Since load varies greatly during heating, the operation start time is corrected, so it will vary each day. INFRARED REMOTE CONTROL Q12 Timer cannot be set. Has the clock been set? Timer cannot be set unless the clock has been set.

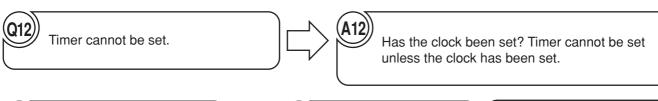

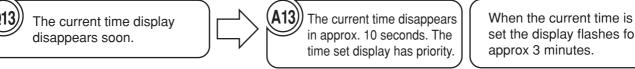

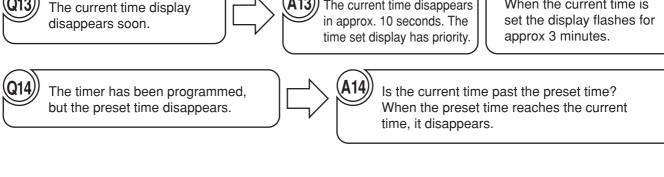

### **OTHERS**

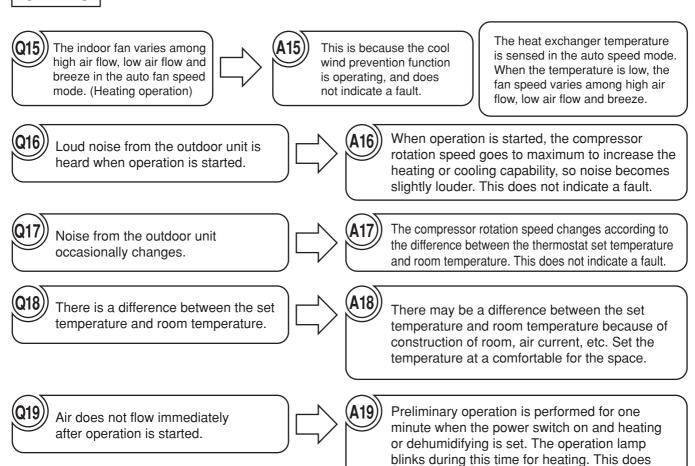

not indicate a fault.

### TROUBLE SHOOTING


### Model RAC-25NH5, RAC-35NH5, RAC-50NH5

### PRECAUTIONS FOR CHECKING



- 1. Remember that the 0V line is biased to 155-170V in reference to the ground level.
- 2. Also note that it takes about 10 minutes until the voltage fall after the power switch is turned off.




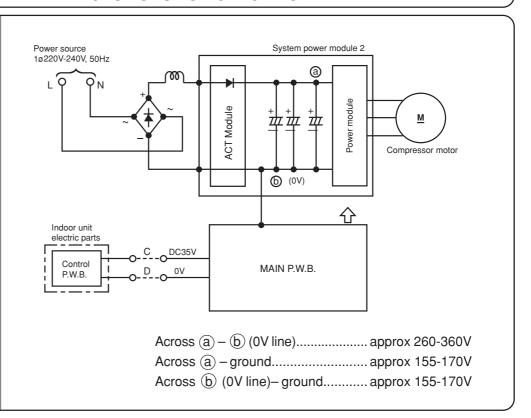



oscilloscope, never ground it. Don't forget that high voltages as noted above may apply to the oscilloscope.



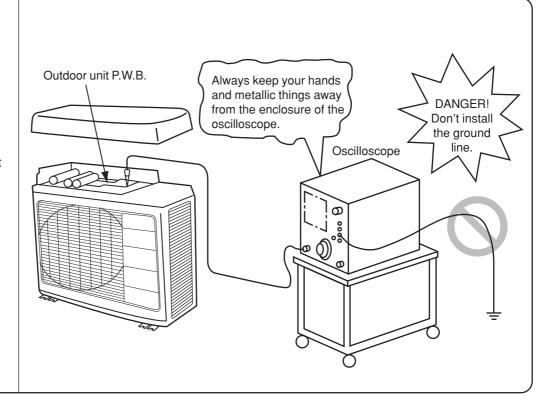


### DISCHARGE PROCEDURE AND POWER SHUT OFF METHOD FOR POWER CIRCUIT



### Caution

- Voltage of about 300-330V is charged between both ends of smoothing capacitors
- During continuity check for each part of circuit in indoor unit electrical parts, disconnect red/gray lead wire connected from diode stack to system power module (SPM2) to prevent secondary trouble. (Be sure to discharge smoothing capacitor)
- 1. Turn OFF the Power supply to the outdoor unit.
- 2. After power is turned off, wait for 10 minutes or more. Then, remove electrical parts cover and apply soldering iron of 30 to 75W for 15 seconds or more to P2 and N1 terminals on system power module, in order to discharge voltage in smoothing capacitor.
- 3. Remove receptable of red/gray lead wire connected to system power module from diode stack before performing operation chech of each circuit.

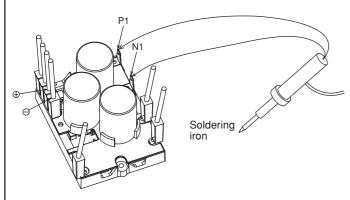


System power module


Do not use a soldering iron with transformer: If one is used, thermal fuse inside transformer will be blown

As shown above, apply soldering iron to metal parts (receptable) inside the sleeve corresponding to P1 and N1 terminals of system power module: Do this with smoothing capacitors kept connected. By removing red/gray lead wire from diode stack, power supply can be shut off. (corresponding to + and - terminals of system power module)

#### RAC-25NH5, RAC-35NH5

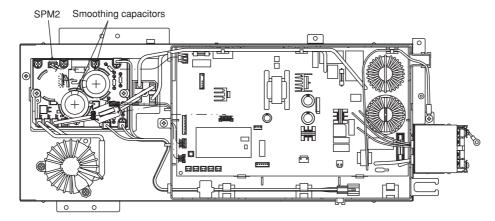

#### RAC-50NH5

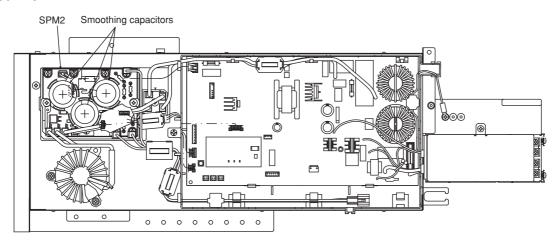

#### TROUBLESHOOTING WHEN TIMER LAMP BLINKS

Model RAD-18NH7A, RAD-25NH7A, RAD-35NH7A, RAD-50NH7A

Perform troubleshooting according to the number of times the indoor timer lamp and outdoor LD301 blink.


#### **SELF-DIAGNOSIS LIGHTING MODE**

Model: RAD-18NH7A, RAD-25NH7A, RAD-35NH7A, RAD-50NH7A

#### <Remark>

If using wired remote controller, electrical cover have to be opened so that timer lamp at indoor p.w.b can be seen as Fig. 1.

If using wireless remote controller (optional part), no need to open electrical cover. Refer the timer lamp at panel-as (Fig. 2).

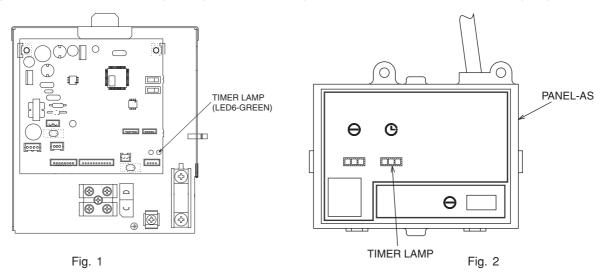

No.	Timer indicator flashing mode	Reason for display	Section of estimated fault
1	2 sec Once	Four-way valve faulty The room heat exchange temperature is low during heating, or it is high during cooling.	Four-way valve faulty.     Disconnection in heat exchange thermistor (only during heating)
2	2 sec Twice	Outdoor unit forced operation  The outdoor unit is in forced operation or undergoing balancing after forced operation.	Service SW in outdoor electrical parts turned ON.
3		Indoor/outdoor interface faulty The interface signal from the outdoor unit has been interrupted.	Indoor interface circuit     Outdoor interface circuit
4		Outdoor electrical assembly defective.	Please check at the outdoor electrical led lamp blinking (LD301) and refer to self diagnosis lighting mode for outdoor unit.
5		Abnormal water level detection All stop when the float switch has been activated.	<ul><li>(1) Drain stopped up</li><li>(2) Drain pump</li><li>(3) Float switch</li></ul>
6		Drain pump forced operation.  When the knob of drain pump test switch at Indoor P.W.B main slide to 'test' position.	(1) Indoor P.W.B. Main.
7		Room thermistor or heat exchanger thermistor is faulty When room thermistor or heat exchanger thermistor is opened circuit or short circuit.	(1) Room thermistor (2) Heat exchanger thermistor
8		DC fan motor overcurrent detection Overcurrent in indoor DC fan motor has been detected.	<ul><li>(1) Indoor fan locked</li><li>(2) Indoor fan motor</li><li>(3) Indoor P.W.B. Main</li></ul>
9		IC401 data reading fault There was error in the data read from IC401	IC401 faulty


( -- Lights for 0.35 sec. at interval of 0.35 sec..)

#### <Cautions>

**※1** 


- (1) If the interface circuit is faulty when power is supplied, the self-diagnosis display will not be displayed.
- (2) If the indoor unit does not operate at all, check to see if the connecting cable is connected or disconnected.
- (3) To check operation again when the timer lamp is blinking, you can use the remote control for operation (except for mode mark ×1).

MODEL: RAC-25NH5, RAC-35NH5, RAC-50NH5

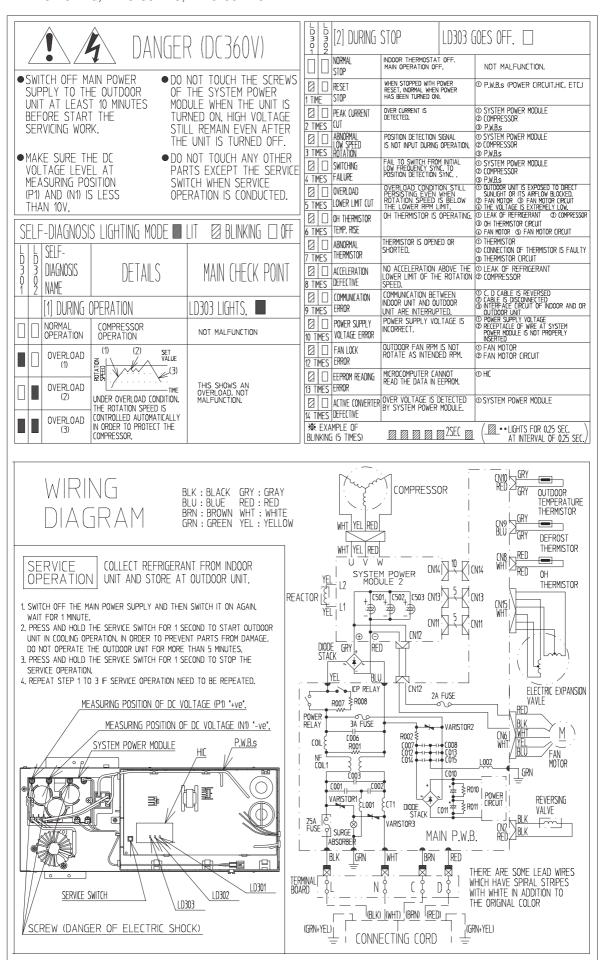


### CHECKING THE INDOOR/OUTDOOR UNIT ELECTRICAL PARTS AND REFRIGERATING CYCLE

### Model RAC-25NH5 RAC-35NH5 RAC-50NH5

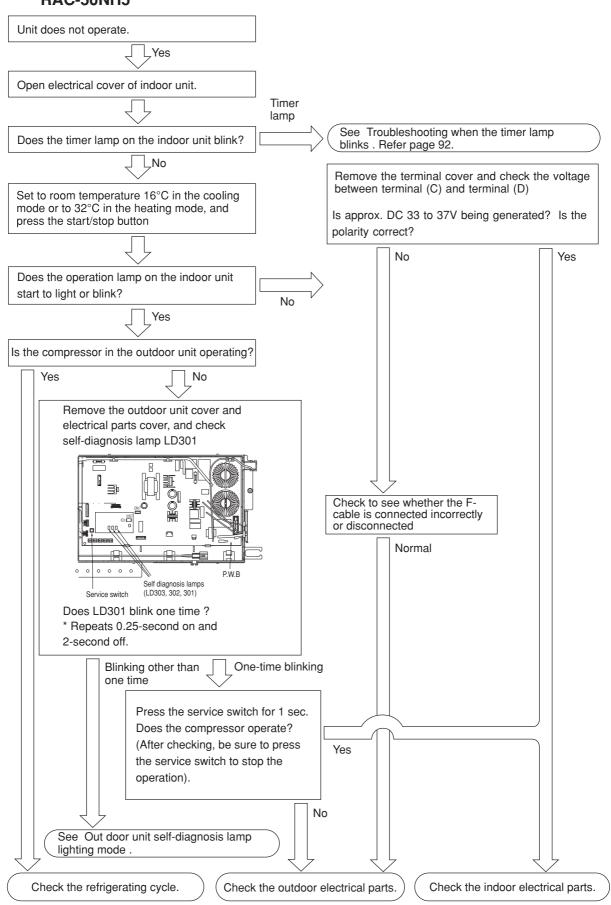


### CHECKING INDOOR UNIT ELECTRICAL PARTS


#### 1. Power does not come on (no operation)

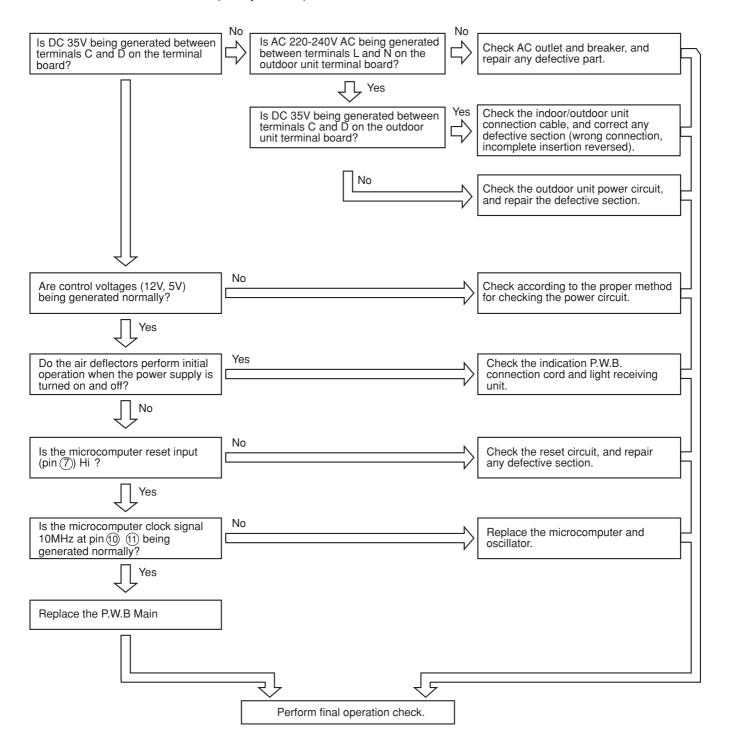


#### 2. Outdoor unit does not operate (but receives remote infrared signal)

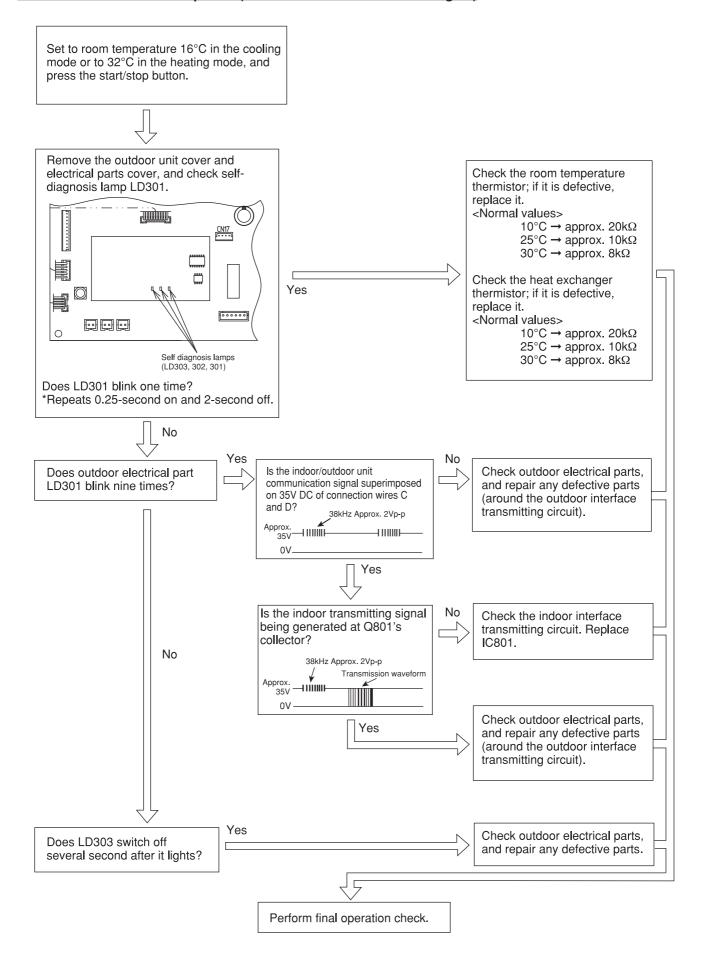


#### 3. Only indoor fan does not operate (other is normal)

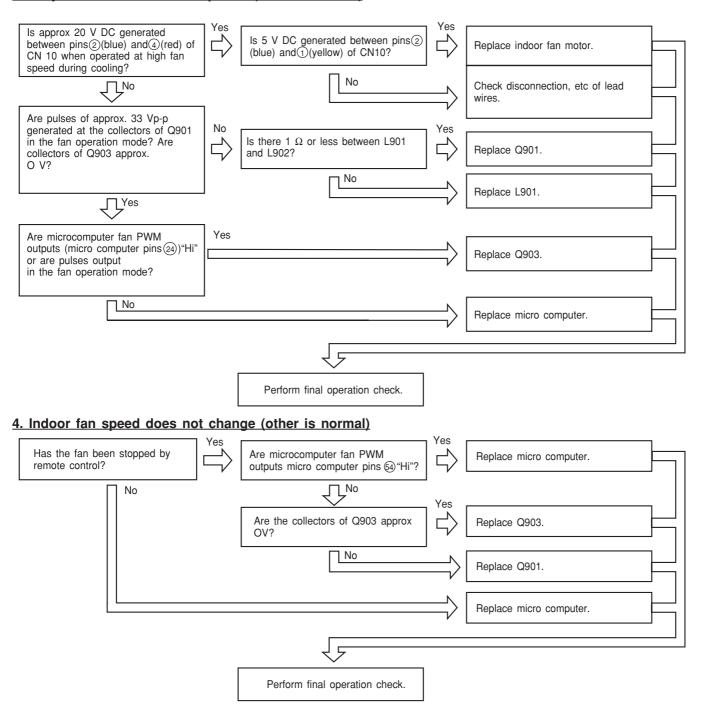



# 5. All systems stop from several seconds to several minutes after operation is started (all indicators are also off)

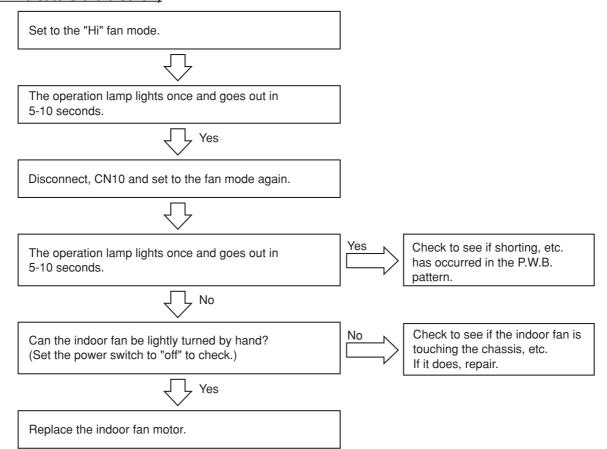



MODEL RAC-25NH5, RAC-35NH5, RAC-50NH5

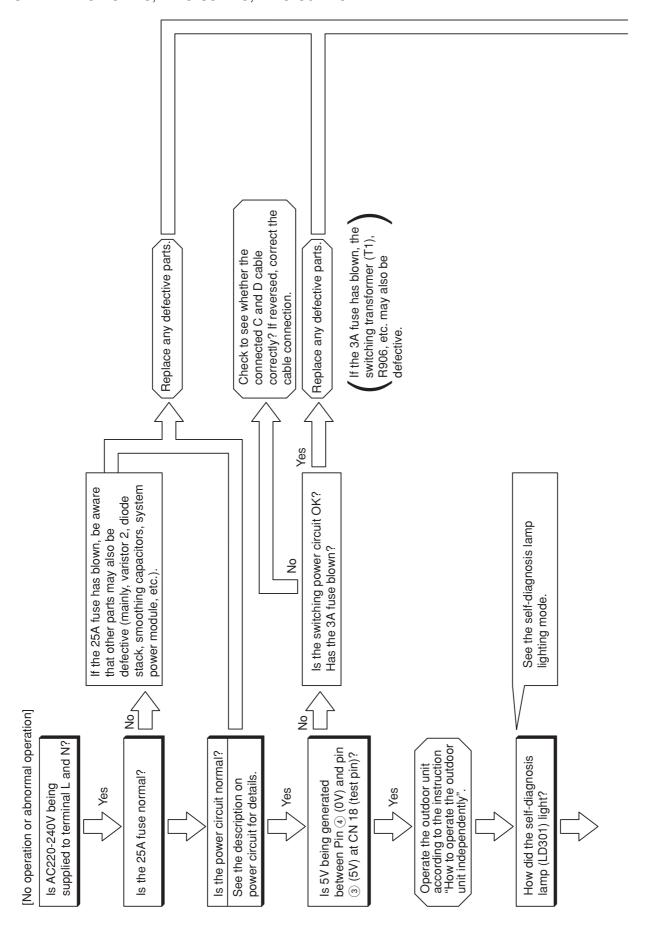

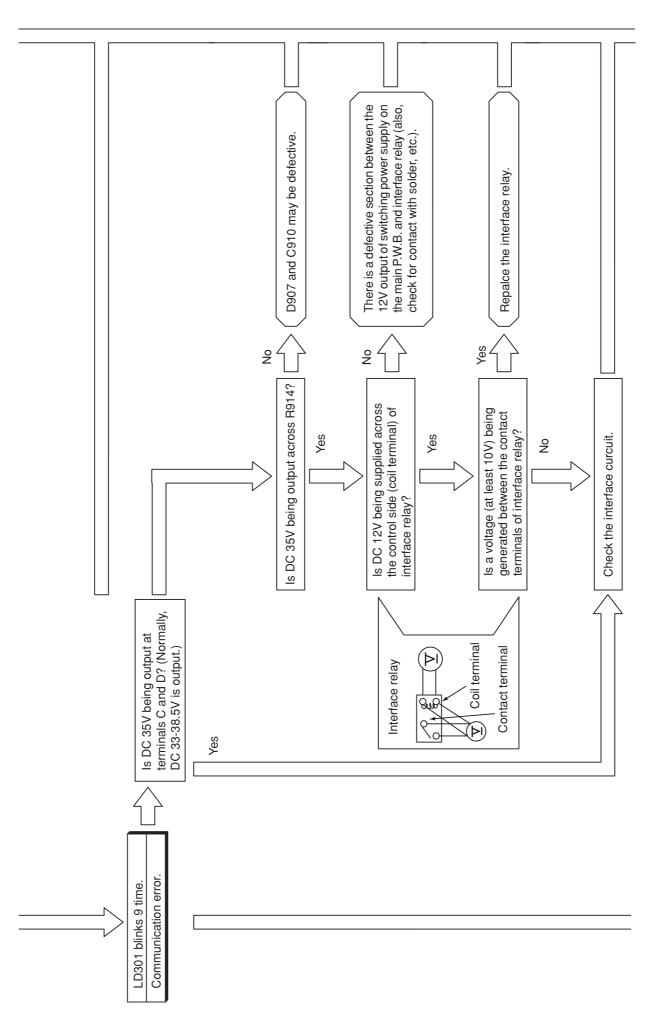

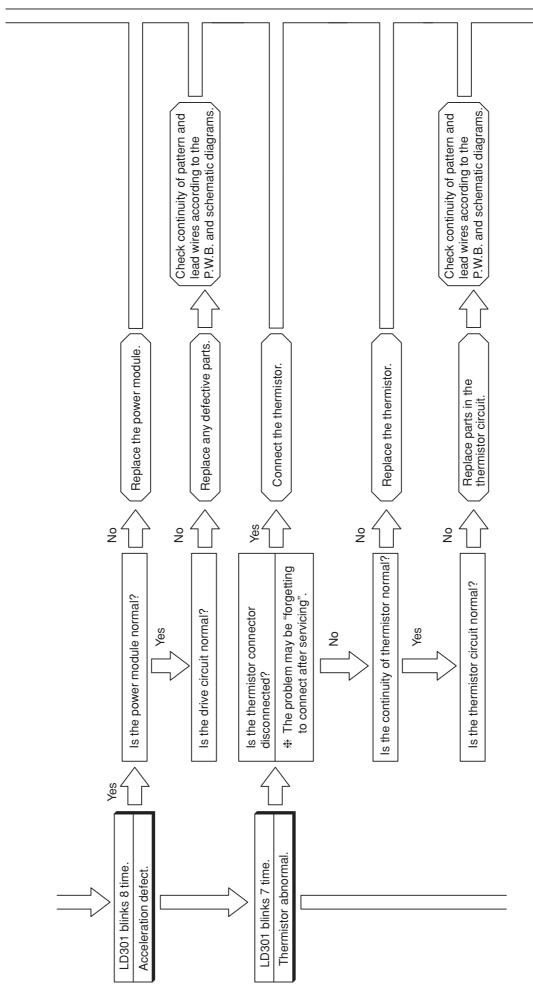


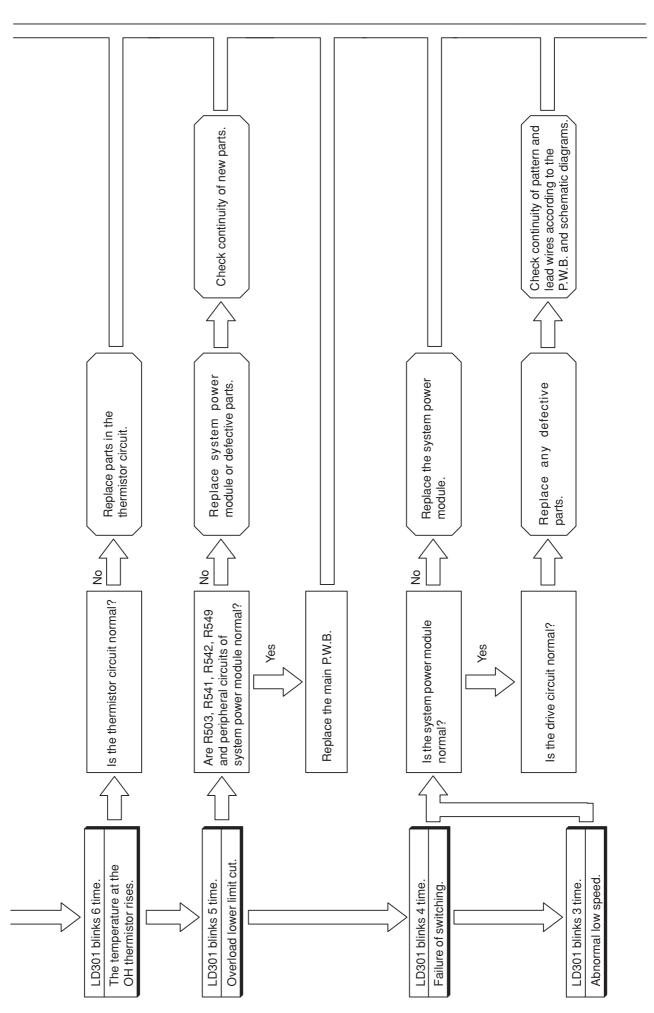

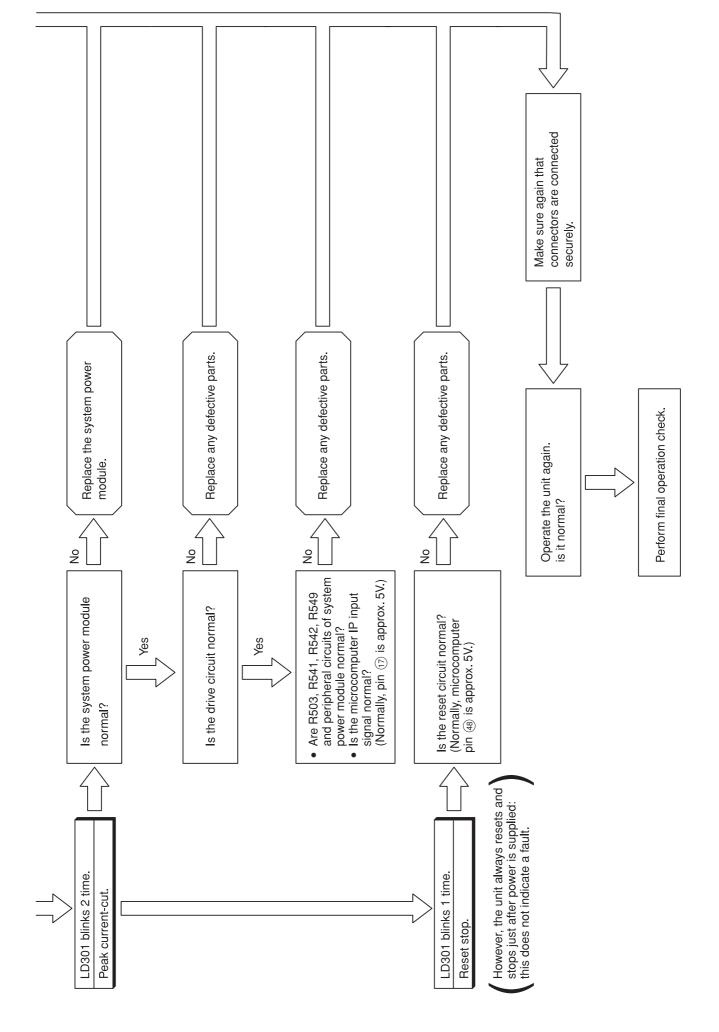

### **POWER CIRCUIT**


### Phenomenon 1 < Rotation speed does not increase>

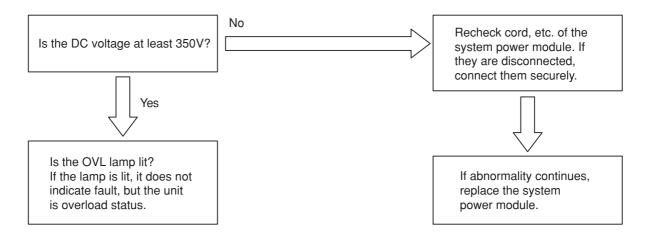

Overvoltage defect: system power module faulty (15-times blinking)

# (JUDGING BETWEEN GAS LEAKAGE AND COMPRESSOR DEFECTIVE)

#### 1. Troubleshooting procedure (No operation, No heating, No cooling)

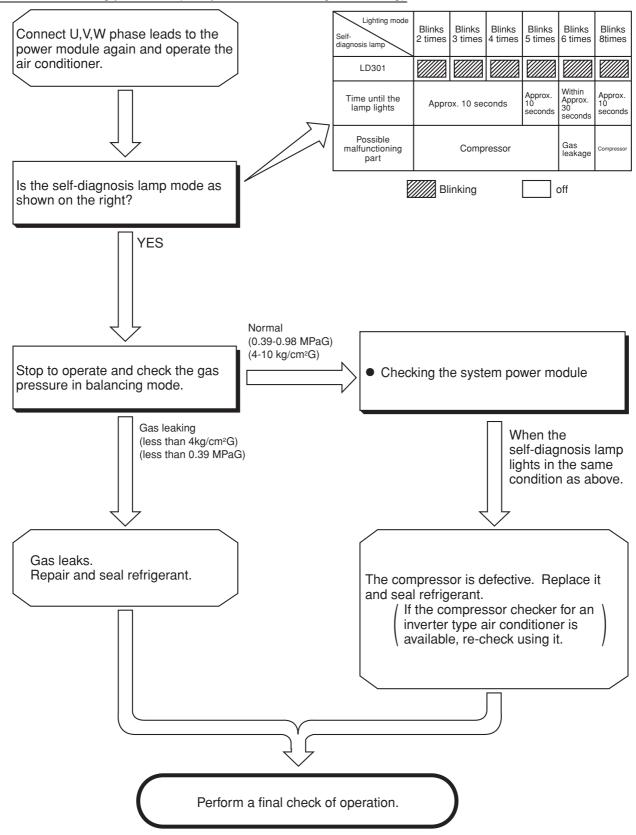



### HOW TO OPERATE USING THE SERVICE SWITCH THE OUTDOOR UNIT

### MODEL RAC-25NH5, RAC-35NH5, RAC-50NH5

- 1. Turn off the power supply to outdoor unit and then turn on again.
- 2. Remove the electrical box cover.

#### LD303 (red) will light and the unit will operate in the forced cooling mode at this time.

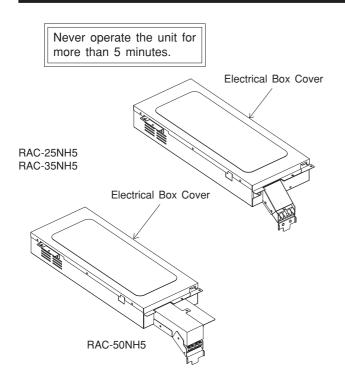

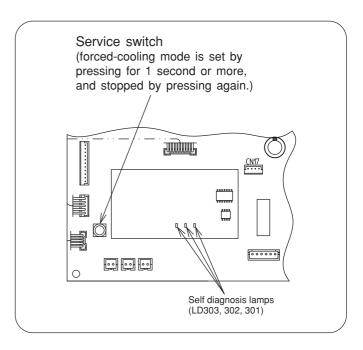

#### (Cautions)


- (1) If interface signal (DC 35V) terminals C and D are not connected when the outdoor unit is in forced cool mode, the outdoor unit defect indicator (LD301) will blink 9 times during operation to indicate communication error.
- (2) If checking is done with the compressor connector disconnected, the unit will continue normal operation when the electrical parts are normal, or it will repeat operating for approx. one minute and stop due to overload power limit cut, or it will operate in the overload status.

Be sure to push the service switch again to stop the forced cool operation.

### HOW TO OPERATE THE OUTDOOR UNIT INDEPENDENTLY

Connect the small diameter service value and the large diameter service valve using the reducing union and copper pipe as shown on the right.

Charge refrigerant of 300g after vacuuming ( \* 1 )

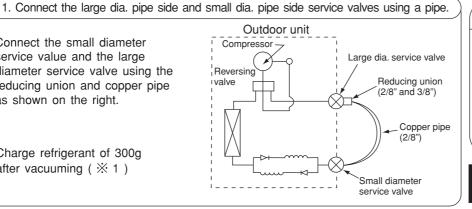

Parts to be prepared


- (1) Reducing union 2/8" (6.35mm) 1/2" (12.7mm)
- (2) Copper pipe (2/8" and 1/2")
- (3) Shorting leads 2 leads approx. 10 cm long with alligator clip or IC clip

Do not operate for more than 5 minutes

The operation method is the same as "How to operate using the connector to servicing the outdoor unit".

💥 1 The charging amount of 300g is equivalent to the load in normal operation.

### SYSTEM POWER MODULE DIAGNOSIS

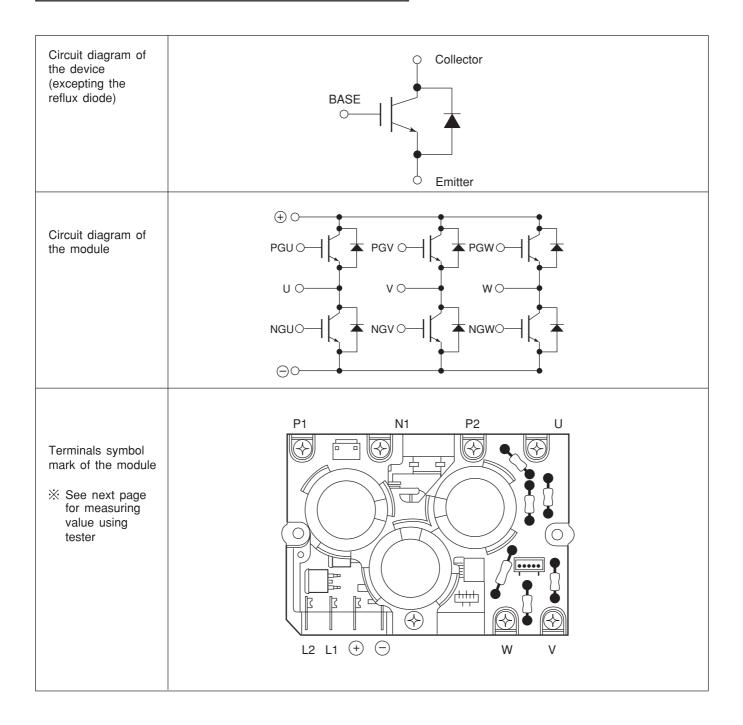

### HOW TO CHECK SYSTEM POWER MODULE


#### Checking system power module using tester


Set tester to resistance range (X 100)

If indicator does not swing in the following conductivity check, the system power module is normal. (In case of digital tester, since built-in battery is set in reverse direction, (+) and (-) terminals are reversed.)

### **△** CAUTION

If inner circuit of system power module is disconnected (open), the indicator of tester will not swing and this may assumed as normal. In this case, if indicator swings when  $\bigoplus$  and  $\bigoplus$  terminals are connected in reverse of diagram below, it is normal. Furthermore, compare how indicator swings at U, V and W phases. If indicator swings the same way at each point, it is normal.

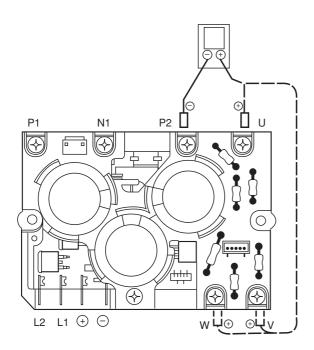


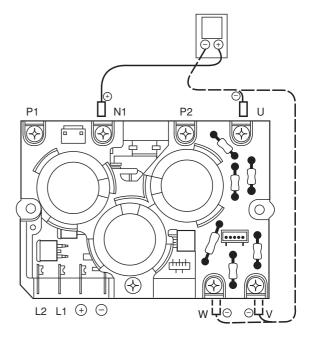

# PARTS LIST AND DIAGRAM

### **INDOOR UNIT**

MODEL: RAD-18NH7A, RAD-25NH7A, RAD-35NH7A, RAD-50NH7A

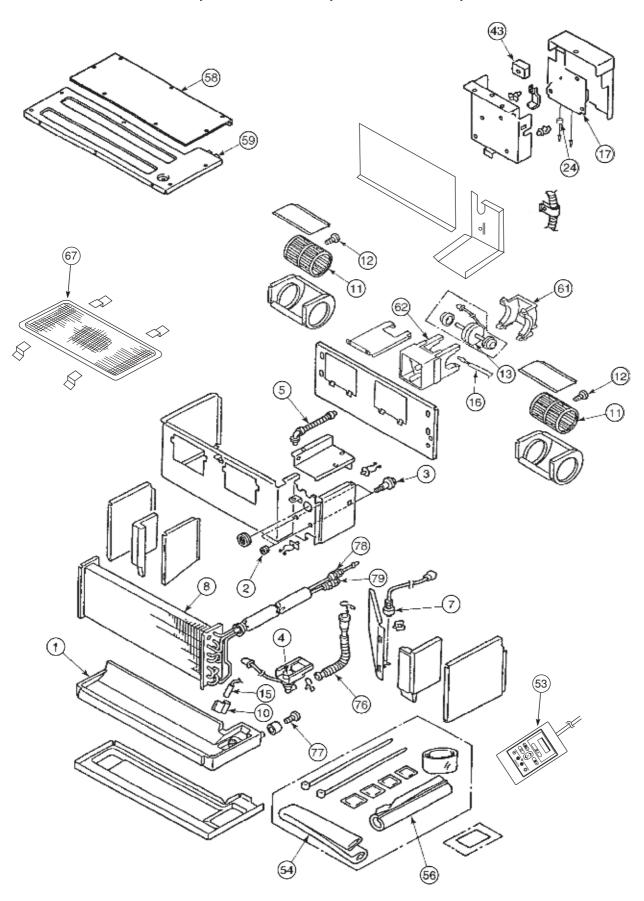

### MODEL RAD-18NH7A

RAD-18NH7A	1	Q'TY / UNIT	PARTS NAME
PMRAD-28MX	R01	1	DRAIN PAN
PMRAMD-350BW	R03	2	FAN MOTOR SUPPORT RUBBER
PMRAMD-350BW	R04	2	SPECIAL SCREW
PMRAD-28MX	R02	1	DRAIN PUMP
PMRAMD-350BW	R05	1	DRAIN HOSE ASSY
PMRAMD-350BW	R11	1	FLOAT SWITCH
PMRAD-18NH7	R01	1	CYCLE ASSY
PMRAS-10C8M	R03	1	BULB SUPPORT
PMRAD-32CNH2	S06	2	SIROCCO FAN
PMRA-353B	R04	2	FAN BOLT
PMRAD-32CNH2	S05	1	FAN MOTOR 20W, 1kg
PMRAMD-40GX	R02	1	THERMISTOR (HEAT)
PMRAD-28MX	R05	1	THERMISTOR (TEMPERATURE)
PMRAD-18NH7A	S01	1	P.W.B. (MAIN)
PMRAC4010KX2	S08	1	FERITE CORE (935)
PMRAM-90QH5	901	1	TERMINAL BOARD (2P)
PMRAD-18NH7A	R02	1	REMOTE CONTROL ASSEMBLY
PMRAMJ-250BW	R09	1	INSULATOR PIPE
PMRAD-28MX	R09	1	INSULATOR PIPE (236L)
PMRAD-18NH7	S03	1	UPPER PLATE (2)
PMRAD-25QH4	S04	1	UPPER PLATE (1)
PMRAD-28QH1	S07	1	FAN MOTOR SUPPORT
PMRAD-25QH4	S01	1	BASE (FAN MOTOR)
PMRAD-18NH7	002	1	FILTER
PMRAD-28MX	R03	1	DRAIN PIPE
PMRAS5645TWU	R08	1	DRAIN CAP
PMRAS-287AX	S01	1	UNION (2)
PMRAS-287AX	S02	1	UNION (3)
	PMRAMD-350BW PMRAMD-350BW PMRAMD-350BW PMRAMD-350BW PMRAMD-350BW PMRAMD-18NH7 PMRAS-10C8M PMRAD-32CNH2 PMRAD-32CNH2 PMRAMD-40GX PMRAD-28MX PMRAD-18NH7A PMRAD-18NH7A PMRAC4010KX2 PMRAMJ-250BW PMRAD-18NH7A PMRAD-18NH7A PMRAD-18NH7A PMRAD-28MX PMRAD-18NH7 PMRAD-25QH4 PMRAD-25QH4 PMRAD-25QH4 PMRAD-28MX PMRAD-28MX PMRAD-28MX	PMRAMD-350BW         R03           PMRAMD-350BW         R04           PMRAD-28MX         R02           PMRAMD-350BW         R05           PMRAMD-350BW         R11           PMRAD-18NH7         R01           PMRAD-18NH7         R03           PMRAD-32CNH2         S06           PMRAD-32CNH2         S05           PMRAD-32CNH2         S05           PMRAD-32CNH2         R02           PMRAD-28MX         R05           PMRAD-18NH7A         S01           PMRAC4010KX2         S08           PMRAM-90QH5         901           PMRAD-18NH7A         R02           PMRAD-28MX         R09           PMRAD-28MX         R09           PMRAD-28MX         R09           PMRAD-28QH1         S07           PMRAD-25QH4         S01           PMRAD-25QH4         S01           PMRAD-28MX         R03           PMRAD-28MX         R03           PMRAD-28MX         R03           PMRAD-28MX         R03           PMRAD-28MX         R03           PMRAD-28MX         R03           PMRAS-287AX         S01	PMRAMD-350BW         R03         2           PMRAMD-350BW         R04         2           PMRAD-28MX         R02         1           PMRAMD-350BW         R05         1           PMRAMD-350BW         R05         1           PMRAMD-350BW         R11         1           PMRAD-18NH7         R01         1           PMRAD-18NH7         R01         1           PMRAD-32CNH2         S06         2           PMRAD-32CNH2         S06         2           PMRAD-32CNH2         S05         1           PMRAD-28MX         R02         1           PMRAD-28MX         R05         1           PMRAD-18NH7A         S01         1           PMRAD-18NH7         S03         1           PMRAD-28MX         R09         1           PMRAD-25QH4         S04         1           PMRAD-18NH7         S02         1           PMRAD-28MX         R03         1

### **MODEL RAD-25NH7A**

NO.	PART NO. RAD-25NH7A		Q'TY / UNIT	PARTS NAME
1	PMRAD-28MX	R01	1	DRAIN PAN
2	PMRAMD-350BW	R03	2	FAN MOTOR SUPPORT RUBBER
3	PMRAMD-350BW	R04	2	SPECIAL SCREW
4	PMRAD-28MX	R02	1	DRAIN PUMP
5	PMRAMD-350BW	R05	1	DRAIN HOSE ASSY
7	PMRAMD-350BW	R11	1	FLOAT SWITCH
8	PMRAD-18NH7	R01	1	CYCLE ASSY
10	PMRAS-10C8M	R03	1	BULB SUPPORT
11	PMRAD-32CNH2	S06	2	SIROCCO FAN
12	PMRA-353B	R04	2	FAN BOLT
13	PMRAD-32CNH2	S05	1	FAN MOTOR 20W, 1kg
15	PMRAMD-40GX	R02	1	THERMISTOR (HEAT)
16	PMRAD-28MX	R05	1	THERMISTOR (TEMPERATURE)
17	PMRAD-25NH7A	S01	1	P.W.B. (MAIN)
24	PMRAC4010KX2	S08	1	FERITE CORE (935)
43	PMRAM-90QH5	901	1	TERMINAL BOARD (2P)
53	PMRAD-18NH7A	R02	1	REMOTE CONTROL ASSEMBLY
54	PMRAMJ-250BW	R09	1	INSULATOR PIPE
56	PMRAD-28MX	R09	1	INSULATOR PIPE (236L)
58	PMRAD-18NH7	S03	1	UPPER PLATE (2)
59	PMRAD-25QH4	S04	1	UPPER PLATE (1)
61	PMRAD-28QH1	S07	1	FAN MOTOR SUPPORT
62	PMRAD-25QH4	S01	1	BASE (FAN MOTOR)
67	PMRAD-18NH7	002	1	FILTER
76	PMRAD-28MX	R03	1	DRAIN PIPE
77	PMRAS5645TWU	R08	1	DRAIN CAP
78	PMRAS-287AX	S01	1	UNION (2)
79	PMRAS-287AX	S02	1	UNION (3)

### MODEL RAD-35NH7A


PART NO. RAD-35NH7A		Q'TY / UNIT	PARTS NAME
PMRAD-28MX	R01	1	DRAIN PAN
PMRAMD-350BW	R03	2	FAN MOTOR SUPPORT RUBBER
PMRAMD-350BW	R04	2	SPECIAL SCREW
PMRAD-28MX	R02	1	DRAIN PUMP
PMRAMD-350BW	R05	1	DRAIN HOSE ASSY
PMRAMD-350BW	R11	1	FLOAT SWITCH
PMRAD-18NH7	R01	1	CYCLE ASSY
PMRAS-10C8M	R03	1	BULB SUPPORT
PMRAD-32CNH2	S06	2	SIROCCO FAN
PMRA-353B	R04	2	FAN BOLT
PMRAD-32CNH2	S05	1	FAN MOTOR 20W, 1kg
PMRAMD-40GX	R02	1	THERMISTOR (HEAT)
PMRAD-28MX	R05	1	THERMISTOR (TEMPERATURE)
PMRAD-35NH7A	S01	1	P.W.B. (MAIN)
PMRAC4010KX2	S08	1	FERITE CORE (935)
PMRAM-90QH5	901	1	TERMINAL BOARD (2P)
PMRAD-18NH7A	R02	1	REMOTE CONTROL ASSEMBLY
PMRAMJ-250BW	R09	1	INSULATOR PIPE
PMRAD-28MX	R09	1	INSULATOR PIPE (236L)
PMRAD-18NH7	S03	1	UPPER PLATE (2)
PMRAD-25QH4	S04	1	UPPER PLATE (1)
PMRAD-28QH1	S07	1	FAN MOTOR SUPPORT
PMRAD-25QH4	S01	1	BASE (FAN MOTOR)
PMRAD-18NH7	002	1	FILTER
PMRAD-28MX	R03	1	DRAIN PIPE
PMRAS5645TWU	R08	1	DRAIN CAP
PMRAS-287AX	S01	1	UNION (2)
PMRAS-287AX	S02	1	UNION (3)
	PMRAD-28MX PMRAMD-350BW PMRAMD-350BW PMRAMD-350BW PMRAMD-350BW PMRAMD-350BW PMRAMD-350BW PMRAMD-350BW PMRAD-18NH7 PMRAS-10C8M PMRAD-32CNH2 PMRAD-32CNH2 PMRAMD-40GX PMRAD-28MX PMRAD-28MX PMRAD-28MX PMRAD-18NH7A PMRAD-18NH7A PMRAD-18NH7A PMRAD-28MX PMRAD-28MX PMRAD-25QH4 PMRAD-25QH4 PMRAD-25QH4 PMRAD-28MX PMRAD-25QH4 PMRAD-28MX PMRAD-25QH4 PMRAD-28MX	RAD-35NH7A           PMRAD-28MX         R01           PMRAMD-350BW         R03           PMRAMD-350BW         R04           PMRAD-28MX         R02           PMRAMD-350BW         R05           PMRAMD-350BW         R01           PMRAD-18NH7         R01           PMRAS-10C8M         R03           PMRAD-32CNH2         S06           PMRAD-353B         R04           PMRAMD-40GX         R02           PMRAD-28MX         R05           PMRAD-28MX         R05           PMRAD-35NH7A         S01           PMRAD-35NH7A         S01           PMRAD-35NH7A         R02           PMRAD-18NH7A         R02           PMRAD-18NH7A         R02           PMRAD-18NH7A         R09           PMRAD-28MX         R09           PMRAD-28MX         R09           PMRAD-28MX         R09           PMRAD-28QH1         S07           PMRAD-25QH4         S01           PMRAD-25QH4         S01           PMRAD-28QH1         S07           PMRAD-18NH7         002           PMRAD-28QH1         S07           PMRAD-28QH1         S01	RAD-35NH7A         Q*1Y / UNIT           PMRAD-28MX         R01         1           PMRAMD-350BW         R03         2           PMRAMD-350BW         R04         2           PMRAD-28MX         R02         1           PMRAD-28MX         R02         1           PMRAMD-350BW         R05         1           PMRAMD-350BW         R11         1           PMRAD-18NH7         R01         1           PMRAD-18NH7         R01         1           PMRAD-32CNH2         S06         2           PMRAD-352CNH2         S06         2           PMRAD-35CNH2         S05         1           PMRAD-32CNH2         S05         1           PMRAD-28MX         R02         1           PMRAD-28MX         R05         1           PMRAD-18NH7A         S01         1           PMRAD-18NH7A         R02         1           PMRAD-18NH7         S03         1           PMRAD-28MX         R09         1           PMRAD-25QH4         S04         1           PMRAD-18NH7         S02         1           PMRAD-28MX         R03         1

### MODEL RAD-50NH7A

NO.	PART NO. RAD-50NH7A	<b>\</b>	Q'TY / UNIT	PARTS NAME
1	PMRAD-28MX	R01	1	DRAIN PAN
2	PMRAMD-350BW	R03	2	FAN MOTOR SUPPORT RUBBER
3	PMRAMD-350BW	R04	2	SPECIAL SCREW
4	PMRAD-28MX	R02	1	DRAIN PUMP
5	PMRAMD-350BW	R05	1	DRAIN HOSE ASSY
7	PMRAMD-350BW	R11	1	FLOAT SWITCH
8	PMRAD-50NH7	R01	1	CYCLE ASSY
10	PMRAS-10C8M	R03	1	BULB SUPPORT
11	PMRAD-32CNH2	S06	2	SIROCCO FAN
12	PMRA-353B	R04	2	FAN BOLT
13	PMRAD-32CNH2	S05	1	FAN MOTOR 20W, 1kg
15	PMRAMD-40GX	R02	1	THERMISTOR (HEAT)
16	PMRAD-28MX	R05	1	THERMISTOR (TEMPERATURE)
17	PMRAD-50NH7A	S01	1	P.W.B. (MAIN)
24	PMRAC4010KX2	S08	1	FERITE CORE (935)
43	PMRAM-90QH5	901	1	TERMINAL BOARD (2P)
53	PMRAD-18NH7A	R02	1	REMOTE CONTROL ASSEMBLY
54	PMRAMJ-250BW	R09	1	INSULATOR PIPE
56	PMRAD-28MX	R09	1	INSULATOR PIPE (236L)
58	PMRAD-18NH7	S03	1	UPPER PLATE (2)
59	PMRAD-25QH4	S04	1	UPPER PLATE (1)
61	PMRAD-28QH1	S07	1	FAN MOTOR SUPPORT
62	PMRAD-25QH4	S01	1	BASE (FAN MOTOR)
67	PMRAD-18NH7	002	1	FILTER
76	PMRAD-28MX	R03	1	DRAIN PIPE
77	PMRAS5645TWU	R08	1	DRAIN CAP
78	PMRAS-287AX	S01	1	UNION (2)
79	PMRAS-287AX	S03	1	UNION (4)

# **OUTDOOR UNIT**

# MODEL: RAC-25NH5, RAC-35NH5, RAC-50NH5

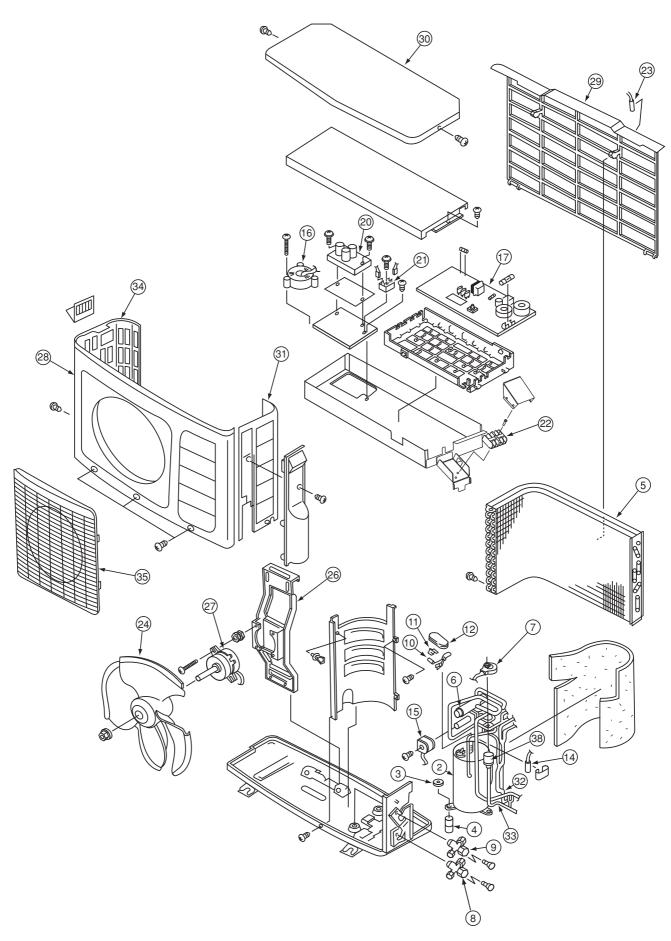

### MODEL RAC-25NH5

NO.	PART N0. RAC-25NH5		Q'TY / UNIT	PARTS NAME
2	PMRAC-25NH4	S08	1	COMPRESSOR
3	KPNT1	001	6	PUSH NUT
4	RAC-2226H	805	3	COMPRESSOR RUBBER
5	PMRAC-25NH4	S01	1	CONDENSER
6	PMRAC-50YHA1	905	1	REVERSING VALVE
7	PMRAC-25NH4	S03	1	ELECTRICAL EXPANSION COIL
8	PMRAC-25NH4	S04	1	VALVE (2S)
9	PMRAC-25NH4	S05	1	VALVE (3S)
10	PMRAC-40CNH2	914	1	THERMISTOR (OH)
11	PMRAC-25NH4	S09	1	OVERHEAT THERMISTOR SUPPORT
12	PMRAC-25NH4	910	1	OVERLOAD RELAY COVER
14	PMRAC-40CNH2	915	1	THERMISTOR (DEFROST)
15	PMRAC-50YHA1	903	1	COIL (REVERSING VALVE)
16	PMRAC-18SH4	S01	1	REACTOR
17	PMRAC-25NH5	S01	1	P.W.B (MAIN)
20	PMRAC-25NH4	S12	1	SYSTEM POWER MODULE
21	PMRAC-40CNH2	902	1	DIODE STACK (D25VB60)
22	PMRAC-25NH4	S13	1	TERMINAL BOARD (4P)
23	PMRAC-40CNH2	916	1	THERMISTOR (OUTSIDE TEMPERATURE)
24	PMRAC-25CNH2	902	1	PROPELLER FAN
26	PMRAC-25NH4	S14	1	SUPPORT (FAN MOTOR)
27	PMRAC-40CNH2	919	1	FAN MOTOR (40W)
28	PMRAC-51CA1	S01	1	CABINET
29	PMRAC-51CA1	908	1	NET
30	PMRAC-51CA1	909	1	TOP COVER
31	PMRAC-25NH4	S17	1	SIDE PLATE-R
32	PMRAC-25NH4	915	1	STRAINER
33	PMRAC-25NH4	907	1	STRAINER (COND)
34	PMRAC-25NH4	917	1	SIDE PLATE-R
35	PMRAC-09CHA1	903	1	GRILL
38	PMRAC-25NH4	S16	1	EXPANSION VALVE

### MODEL RAC-35NH5

NO.	PART NO. RAC-35NH5		Q'TY / UNIT	PARTS NAME
2	PMRAC-25NH4	S08	1	COMPRESSOR
3	KPNT1	001	6	PUSH NUT
4	RAC-2226H	805	3	COMPRESSOR RUBBER
5	PMRAC-25NH4	S01	1	CONDENSER
6	PMRAC-50YHA1	905	1	REVERSING VALVE
7	PMRAC-25NH4	S03	1	ELECTRICAL EXPANSION COIL
8	PMRAC-25NH4	S04	1	VALVE (2S)
9	PMRAC-25NH4	S05	1	VALVE (3S)
10	PMRAC-40CNH2	914	1	THERMISTOR (OH)
11	PMRAC-25NH4	S09	1	OVERHEAT THERMISTOR SUPPORT
12	PMRAC-25NH4	910	1	OVERLOAD RELAY COVER
14	PMRAC-40CNH2	915	1	THERMISTOR (DEFROST)
15	PMRAC-50YHA1	903	1	COIL (REVERSING VALVE)
16	PMRAC-18SH4	S01	1	REACTOR
17	PMRAC-35NH5	S01	1	P.W.B (MAIN)
20	PMRAC-25NH4	S12	1	SYSTEM POWER MODULE
21	PMRAC-40CNH2	902	1	DIODE STACK (D25VB60)
22	PMRAC-25NH4	S13	1	TERMINAL BOARD (4P)
23	PMRAC-40CNH2	916	1	THERMISTOR (OUTSIDE TEMPERATURE)
24	PMRAC-25CNH2	902	1	PROPELLER FAN
26	PMRAC-25NH4	S14	1	SUPPORT (FAN MOTOR)
27	PMRAC-40CNH2	919	1	FAN MOTOR (40W)
28	PMRAC-51CA1	S01	1	CABINET
29	PMRAC-51CA1	908	1	NET
30	PMRAC-51CA1	909	1	TOP COVER
31	PMRAC-25NH4	S17	1	SIDE PLATE-R
32	PMRAC-25NH4	915	1	STRAINER
33	PMRAC-25NH4	907	1	STRAINER (COND)
34	PMRAC-25NH4	917	1	SIDE PLATE-R
35	PMRAC-09CHA1	903	1	GRILL
38	PMRAC-25NH4	S16	1	EXPANSION VALVE

### MODEL RAC-50NH5

NO.	PART NO. RAC-50NH5		Q'TY / UNIT	PARTS NAME
2	PMRAC-50NH4	S07	1	COMPRESSOR
3	KPNT1	001	4	PUSH NUT
4	RAC-2226HV	805	3	COMPRESSOR RUBBER
5	PMRAC-50NH4	S02	1	CONDENSER
6	PMRAC-50YHA1	905	1	REVERSING VALVE
7	PMRAC-25NH4	S03	1	ELECTRICAL EXPANSION COIL
8	PMRAC-50NH4	S03	1	VALVE (2S)
9	PMRAC-50NH4	S04	1	VALVE (4S)
10	PMRAC-40CNH2	S14	1	THERMISTOR (OH)
11	PMRAC-25NH4	S09	1	OVERHEAT THERMISTOR SUPPORT
12	PMRAC-25NH4	910	1	OVERLOAD RELAY COVER
14	PMRAC-40CNH2	S15	1	THERMISTOR (DEFROST)
15	PMRAC-50YHA1	903	1	COIL (REVERSING VALVE)
16	PMRAC-18SH4	S01	1	REACTOR
17	PMRAC-50YH5	S01	1	P.W.B (MAIN)
20	PMRAC-40CNH2	S01	1	SYSTEM POWER MODULE
21	PMRAC-40CNH2	S02	1	DIODE STACK (D25VB60)
22	PMRAC-25NH4	S13	1	TERMINAL BOARD (4P)
23	PMRAC-19SH4	S01	1	THERMISTOR (OUTSIDE TEMPERATURE)
24	PMRAC-40CNH2	S17	1	PROPELLER FAN
26	PMRAC-40CNH2	S18	1	SUPPORT (FAN MOTOR)
27	PMRAC-40CNH2	S19	1	FAN MOTOR (40W)
28	PMRAC-40CNH2	S04	1	CABINET
29	PMRAC-40CNH2	921	1	NET
30	PMRAC-40CNH2	922	1	TOP COVER
31	PMRAC-50NH4	S10	1	SIDE PLATE-R
32	PMRAC-50NH4	906	1	STRAINER (PIPE)
33	PMRAC-50NH4	909	1	STRAINER (COND)
34	PMRAC-40CNH2	926	1	SIDE PLATE-L
35	PMRAC-40CNH2	928	1	GRILL
38	PMRAC-25NH4	S16	1	EXPANSION VALVE

# **HITACHI**